

MC-1200 Series Linux Software User's Manual

Version 1.0, November 2020

www.moxa.com/product



© 2020 Moxa Inc. All rights reserved.

MC-1200 Series Linux Software User's Manual

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

Copyright Notice

© 2020 Moxa Inc. All rights reserved.

Trademarks

The MOXA logo is a registered trademark of Moxa Inc.
All other trademarks or registered marks in this manual belong to their respective manufacturers.

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document as is, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

Technical Support Contact Information

www.moxa.com/support

Moxa Americas

Toll-free: 1-888-669-2872
Tel: +1-714-528-6777
Fax: +1-714-528-6778

Moxa Europe

Tel: +49-89-3 70 03 99-0
Fax: +49-89-3 70 03 99-99

Moxa India

Tel: +91-80-4172-9088
Fax: +91-80-4132-1045

Moxa China (Shanghai office)

Toll-free: 800-820-5036
Tel: +86-21-5258-9955
Fax: +86-21-5258-5505

Moxa Asia-Pacific

Tel: +886-2-8919-1230
Fax: +886-2-8919-1231

Table of Contents

1. Introduction	1-1
Overview	1-2
Software Specifications	1-2
2. Software Configuration	2-1
Account Management	2-2
Setting up Desktop Environments	2-3
Starting From an HDMI Console	2-3
Connecting From an SSH Console	2-4
Windows Users	2-4
Linux Users	2-5
Adjusting the System Time	2-5
Setting the Time Manually	2-5
NTP Client	2-6
Updating the Time Automatically	2-6
Enabling and Disabling Daemons	2-7
Executing Scheduled Commands Using the Cron Daemon	2-9
Inserting a USB Storage Device into the Computer	2-10
Checking the Linux Version	2-11
Installing and Removing Packages Using APT	2-11
Device Suspend	2-13
Wake On LAN	2-13
Getting the Product Serial Number	2-14
3. Managing Communications	3-1
Default Network Interface Name	3-2
Editing the Interfaces Configuration File	3-2
Adjusting IP Addresses with the ifconfig Command	3-3
DNS Client	3-3
/etc/hostname	3-3
/etc/resolv.conf	3-4
/etc/nsswitch.conf	3-4
Configuring Ethernet Bonding	3-5
Apache Web Server	3-6
Installing the Apache Web Server	3-6
Default Homepage	3-6
IPTables	3-7
IPTables Hierarchy	3-8
IPTables Modules	3-8
Observe and Erase Chain Rules	3-9
Define Policy for Chain Rules	3-10
Append or Delete Rules	3-10
NAT (Network Address Translation)	3-11
NAT Example	3-12
Enabling NAT at Bootup	3-12
PPP (Point-to-Point Protocol)	3-13
Connecting to a PPP Server over a Simple Dial-Up Connection	3-13
Connecting to a PPP Server Over a Hard-wired Link	3-14
Checking the Connection	3-14
Setting Up a Machine for Incoming PPP Connections	3-15
PPPoE	3-17
NFS (Network File System) Client	3-19
SNMP (Simple Network Management Protocol)	3-19
OpenVPN	3-21
Installing OpenVPN	3-21
Ethernet Bridging for Private Networks on Different Subnets	3-22
Ethernet Bridging for Private Networks on the Same Subnet	3-25
Routed IP	3-26
Configuring the Wi-Fi Connection	3-27
Configuring WPA2	3-27
Configuring the Wireless LAN Using a Configuration File	3-28
Wi-Fi Management	3-29
iw	3-29
wpa_supplicant	3-30
Hostapd	3-31
4. Programming Guide	4-1
Device API	4-2
Real-time Clock (RTC)	4-2
Serial Ports	4-2

Changing the Terminal Settings.....	4-3
Watchdog Timer	4-4
Introduction.....	4-4
The Watchdog Device IOCTL Commands	4-4
Example.....	4-5
5. System Restore	5-1
Restore Environment.....	5-2
Restore Procedure	5-2
Restore the System from the USB Drive	5-10
A. Software Components	A-1

Introduction

Thank you for purchasing a Moxa MC-1200 series x86, ready-to-run embedded computer. This manual describes the software configuration and management process for the MC-1200 Linux models. For details regarding hardware installation, connector interfaces, setup, and BIOS upgrade, refer to the *MC-1200 Series Hardware User's Manual*.

Linux is an open, scalable operating system that allows you to build a wide range of innovative, small-footprint devices. Software written for desktop PCs can be easily ported to an embedded computer with a GNU cross compiler and minimum source-code modifications. A typical Linux-based device is designed for a specific use. It is often not connected to other computers. A number of such devices connect to a centralized front-end host. Examples include enterprise tools such as industrial controllers, communications hubs, point-of-sale terminals, and display devices, which include HMIs, advertisement appliances, and interactive panels.

The following topics are covered in this chapter:

- **Overview**
- **Software Specifications**


Overview

The MC-1200 series DIN-rail mountable computers are x86 platforms built on Intel® Atom™ series processor. They feature the most reliable I/O design with the highest number of connectivity options, including support for wireless modules (Wi-Fi/3G/LTE), making them suitable for a diverse range of communication applications.

With a wide operating temperature range (-40 to 70°C) and compliance with safety, EMI, and EMS standards, the MC-1200 series is ideal for intelligent computing and communication solutions operating in critical environments, including marine communication, oil & gas field site monitoring, and transportation.

Software Specifications

The Linux operating system preinstalled on the MC-1200 embedded computers is a **Debian Jessie** distribution. The Debian project consists of a group of volunteers located worldwide who endeavor to produce an operating system distribution composed entirely of free software. The Debian GNU/Linux follows the standard Linux architecture, making it easy to use programs that meet the POSIX standard. You can use the GNU Tool Chain provided by Moxa to port programs on to the Debian Linux platform. In addition to standard POSIX APIs, device drivers for Moxa UART and other peripherals such as programmable LEDs and relay are also included along with the Linux operating system. An example that represents the software architecture is shown below:

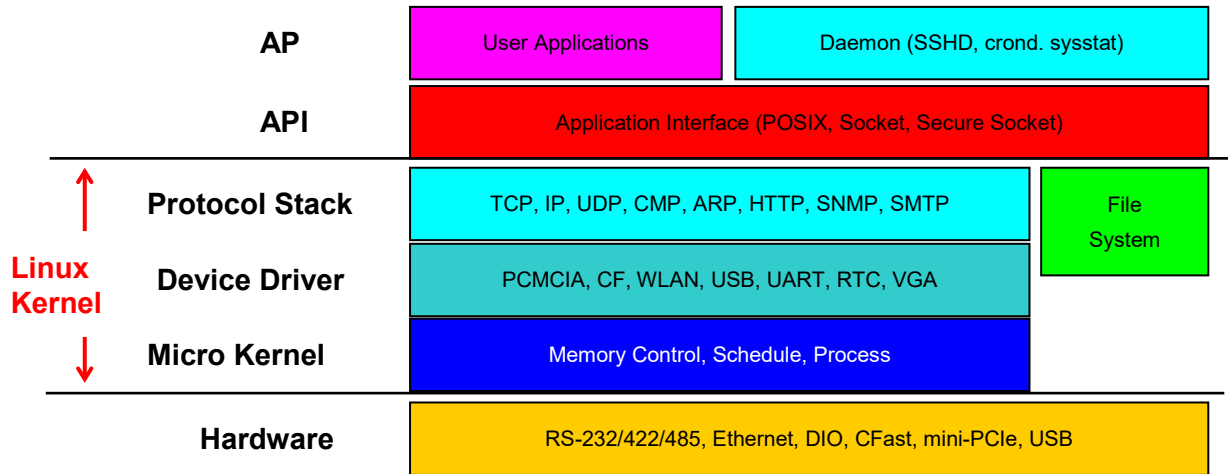

ATTENTION

The above software architecture is only an example. Different models or different build revisions of the Linux operating system may include components not shown in this illustration.

ATTENTION

For information and documentation regarding Debian GNU/Linux and the free software concept, refer to the following links:

- <http://www.debian.org/>
- <http://www.gnu.org/>

Software Configuration

This chapter covers some basic Linux operating system configuration on the MC-1200 Linux model. For advanced network configuration and management instructions refer to *Chapter 3, Managing Communications*.

The following topics are covered in this chapter:

- ❑ **Account Management**
- ❑ **Setting up Desktop Environments**
- ❑ **Starting From an HDMI Console**
- ❑ **Connecting From an SSH Console**
 - Windows Users
 - Linux Users
- ❑ **Adjusting the System Time**
 - Setting the Time Manually
 - NTP Client
 - Updating the Time Automatically
- ❑ **Enabling and Disabling Daemons**
- ❑ **Executing Scheduled Commands Using the Cron Daemon**
- ❑ **Inserting a USB Storage Device into the Computer**
- ❑ **Checking the Linux Version**
- ❑ **Installing and Removing Packages Using APT**
- ❑ **Device Suspend**
- ❑ **Wake On LAN**
- ❑ **Getting the Product Serial Number**

Account Management

Connect the embedded computer to a display and turn on the computer. Enter the following information to log in to the computer.

Login: moxa

Password: moxa

For security reasons, the root account is disabled. We strongly suggest changing the password at the first login. After a successful login, provide a new password.

```
Using username "moxa".
Linux Moxa 4.9.0-6-amd64 #1 SMP Debian 4.9.88-1 (2018-04-29) x86_64

#####
###      ###      #####      #####      #####      ##
###      ###      ###      ###      ###      ###      ###
###      ###      ###      ###      ###      ##      ###
###      #####      ##      ##      ###      #      #####
#####      #      ##      ###      ###      ##      ##      ##
##      ##      #      ##      ###      ##      #####      #      ##
##      ###      ##      ##      ##      ##      #####      #      ###
##      ##      #      ##      ##      ##      ##      #####      #      ##
##      ##      #      ##      ##      ##      ##      ##      #      ##
##      ##      #      ##      ##      ##      ##      ##      #      ##
##      ##      #      ##      ##      ##      ##      ##      #      ##
#####      #      #####      #####      #####      #####      #####

For further information check:
http://www.moxa.com/

You have mail.
Last login: Wed Mar  6 00:10:56 2019 from 10.144.54.91
You are using Moxa embedded computer.
Please change the default password in consideration of higher security level or disable
the default user, moxa.
moxa@Moxa:~$
```

When you finish changing the password, remember to type `sudo` each time you want to run commands with the privilege as the root. For example, typing `sudo ifconfig enp0s31f6 192.168.100.100` will allow you to configure the IP address of the LAN 1 port.

```
moxa@Moxa:~$ sudo ifconfig enp0s31f6 192.168.100.100
moxa@Moxa:~$ sudo ifconfig enp0s31f6
enp0s31f6: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    inet 192.168.100.100 netmask 255.255.255.0 broadcast 192.168.100.255
    ether 00:90:e8:00:d7:38 txqueuelen 1000 (Ethernet)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
    device memory 0xb1300000-b137ffff
```

In addition, use `sudo -i` to login as root to have more privileges.

```
moxa@Moxa:~# sudo -i
[sudo] password for moxa:
root@Moxa:~$
```


Setting up Desktop Environments

In this section we discuss how to setup various desktop environments on the MC-1200 computer. By default, the MC-1200 Linux operating system doesn't install a desktop environment. However, Debian supports various full-fledged graphical environments such as Gnome, KDE as well as lighter environments like Xfce and LXDE. Users can install one of these desktop systems on the MC-1200.

To install Gnome use the following command:

```
moxa@moxa:~# sudo apt-get install task-gnome-desktop
```

To install KDE use the following commands:

```
moxa@moxa:~# sudo apt-get install aptitude tasksel
moxa@moxa:~# sudo aptitude install ~t^desktop$ ~t^kde-desktop$
```

To install Xfce use the following command:

```
moxa@moxa:~# sudo apt-get install xfce4 xfce4-goodies task-xfce-desktop
```

To install the minimum LXDE environment use the following command:

```
moxa@moxa:~# sudo apt-get install lxde-core lxde
```

Starting From an HDMI Console

Connect the display monitor to the computer's connector, and then power it up by connecting it to the power adaptor. It takes approximately 30 to 60 seconds for the system to boot up. Once the system is ready, a login screen will appear on your monitor.

To log in, type the login name and password as requested. The default values are both **moxa**.

Login: moxa

Password: moxa

```
Moxa login: moxa
Password:

#####          #####          #####          #####          #####          ##
###            #####          ###          ###          #####          ###
###            ###          ###          ###          ###          ##          ###
###            #####          ##          ##          ###          #          #####
#####          #          ##          ###          ###          ##          ##          ##
##          ##          #          ##          ###          ##          #####          #          ##
##          ###          ##          ##          ##          ##          #####          #          ###
##          ##          #          ##          ##          ##          ###          #####
##          ##          #          ##          ##          ##          ###          #          ##
#####          #          #####          #####          #####          #####          #####
#####          #          #####          #####          #####          #####          #####

For further information check:
http://www.moxa.com/

moxa@moxa:~$
```

Connecting From an SSH Console

The computer supports the SSH console to offer users better network security compared to Telnet. The default IP addresses and netmasks of the network interfaces are as follows:

	Default IP Address	Netmask
LAN 1	192.168.3.127	255.255.255.0
LAN 2	192.168.4.127	255.255.255.0

Before using the ssh client, you should change the IP address of your development workstation so that the network ports are on the same subnet as the IP address for the LAN port that you will connect to. For example, if you will connect to LAN1, you could set your PC's IP address to 192.168.3.126, and the netmask to 255.255.255.0. If you will connect to LAN2, you could set your PC's IP address to 192.168.4.126, and the netmask to 255.255.255.0.

Use a cross-over Ethernet cable to connect your development workstation directly to the target computer, or use a straight-through Ethernet cable to connect the computer to a LAN hub or switch. Next, use a SSH client on your development workstation to connect to the target computer. After a connection has been established, type the login name and password as requested to log on to the computer. The default values are both **moxa**.

Login: moxa


Password: moxa

Windows Users

Download the PuTTY tool (free software) to set up an SSH console for your computer. The tool can be downloaded from the following link:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/download.html>

The following screen shows an example of the configuration that is required.

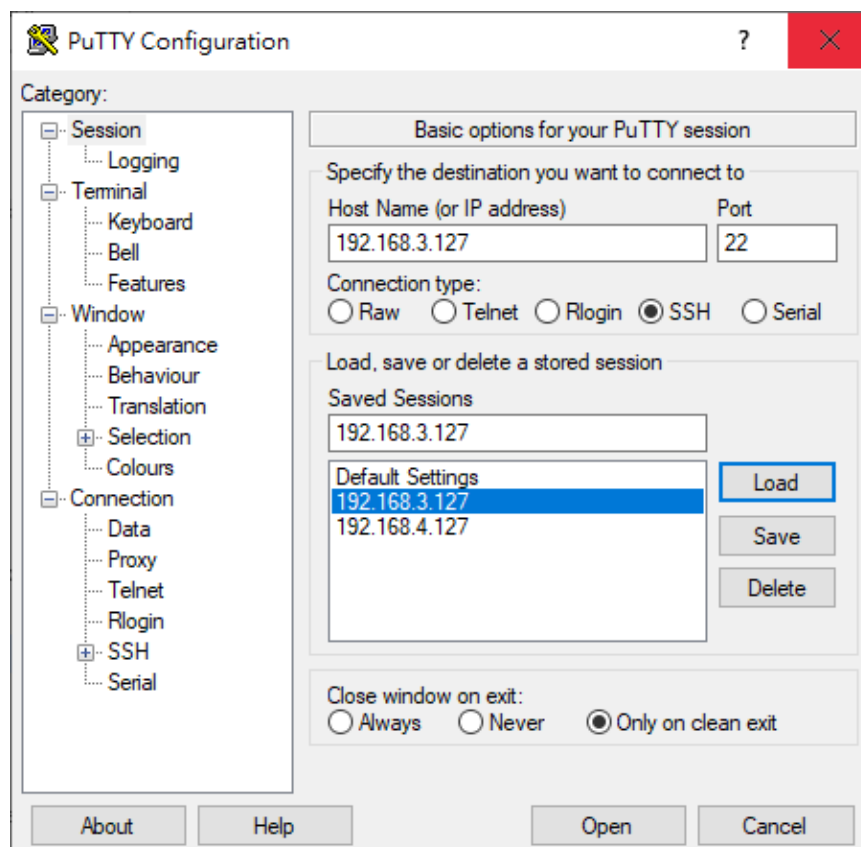

Linux Users

From a Linux machine, use the **ssh** command to access the computer's console utility via SSH.

```
# ssh moxa@192.168.3.127
```

Select **yes** to open the connection.

```
[moxa@Moxa:~$]# ssh moxa@192.168.3.127
The authenticity of host '192.168.3.127 (192.168.3.127)' can't be established.
RSA key fingerprint is 8b:ee:ff:84:41:25:fc:cd:2a:f2:92:8f:cb:1f:6b:2f.
Are you sure you want to continue connection (yes/no)? yes_
```

Adjusting the System Time

The MC-1200 has two time settings: The system time, and the time of the RTC (Real Time Clock) built into the MC-1200 hardware.

Setting the Time Manually

Use the **date** command to query the current system time or to set a new system time.

```
# date MMDDhhmmYYYY

MM:      Month
DD:      Date
hhmm:    Hour and Minute
YYYY:    Year
```

Use the **hwclock** command to query the current RTC time or to set a new RTC time.

Use the following command to write the current system time to the RTC:

```
# hwclock -w
```

```
root@Moxa:~# date
Wed Dec 16 03:34:46 CST 2016
root@Moxa:~# hwclock
Wed 16 Dec 2016 03:35:16 AM CST -0.017600 seconds
root@Moxa:~# date 121616352016
Wed Dec 16 16:35:00 CST 2016
root@Moxa:~# hwclock -w
root@Moxa:~# date ; hwclock
Wed Dec 16 16:36:12 CST 2016
Wed 16 Dec 2016 03:38:13 AM CST -0.016751 seconds
root@Moxa:~#
```

NTP Client

The MC-1200 can use a NTP (Network Time Protocol) client to initialize a time request to a remote NTP server, which you can install using the following command:

```
# apt-get install ntpdate
```

Use the `ntpdate` command to update the system time

```
# ntpdate time.stdtime.gov.tw
```

```
# hwclock -w
```

```
root@Moxa:~# date ; hwclock
Wed Dec 16 16:36:12 CST 2016
Wed 16 Dec 2016 03:38:13 AM CST -0.016751 seconds
root@Moxa:~#
root@Moxa:~# ntpdate time.stdtime.gov.tw
16 Dec 03:49:48 ntpdate[2510]: step time server 220.130.158.52 offset 155905087.9
84256 sec
root@Moxa:~#
root@Moxa:~# hwclock -w
root@Moxa:~# date ; hwclock
Wed Dec 16 03:51:07 CST 2016
Wed 16 Dec 2016 03:51:07 AM CST -0.016771 seconds
root@Moxa:~#
```

For more information on NTP and NTP server addresses, visit <http://www.ntp.org>.



ATTENTION

Before using the NTP client utility, check your IP address and network settings (gateway and DNS) to make sure an Internet connection is available.

Updating the Time Automatically

This section describes how to use a shell scripts to automatically update the system time.

Example Shell Script for Updating the System Time Periodically

```
#!/bin/sh
ntpdate time.stdtime.gov.tw
# You can use the time server's ip address or domain
# name directly. If you use domain name, you must
# enable the domain client on the system by updating
# /etc/resolv.conf file.
hwclock -w
sleep 100
# Updates every 100 seconds. The min. time is 100 seconds.
# Change 100 to a larger number to update RTC less often.
```

You can save this shell script using any file name. Let's call it **fixtime**.

How to run the shell script automatically when the kernel boots up

Copy the example shell script `fixtime` to the directory `/etc/init.d`, and then use the following command to change the shell script mode:

```
# chmod 755 fixtime
```

Use the `vi` editor to edit the `/etc/inittab` file as follows:

```
# vi /etc/inittab
```

At the end of the script add the following line:

```
ntp : 2345 : respawn : /etc/init.d/fixtime
```

Use the `#init q` command to re-initialize the kernel.

```
# init q
```

Enabling and Disabling Daemons

By default, the following daemons are enabled in the MC-1200:

sftpd	SFTP Server / Client daemon
sshd	Secure Shell Server daemon

You can manage the services that you want to run in the background using the `insserv` command.

The following example shows how to add the apache daemon to the current run level:

```
moxa@moxa:~$ sudo insserv -d apache2
```

The apache daemon will not be activated in the current boot session, but will run in the background starting with the next boot session.

To disable the apache daemon, use the following command:

```
moxa@moxa:~$ sudo insserv -r apache2
```

Linux daemons can be started or stopped in the current boot session by using of the scripts in the `/etc/init.d` file.

To start the apache daemon in the current boot session, use:

```
moxa@moxa:~$ sudo /etc/init.d/apache2 start
```

To stop the apache daemon, use:

```
moxa@moxa:~$ sudo /etc/init.d/apache2 stop
```

You can use the management utility called `systemctl` to list all services running at any time as follows:

```
moxa@moxa:~$ sudo systemctl
```

The `inetd` daemon is another service that you can activate in the current boot session.

To enable the `inetd` service, use the following command.

```
moxa@moxa:~$ sudo systemctl enable inetd
```

To disable the `inetd` service, use the following command:

```
moxa@moxa:~$ sudo systemctl disable inetd
```

Linux daemons can also be started or stopped using the `systemctl` command.

To start the `inetd` daemon, use:

```
moxa@moxa:~$ sudo systemctl start inetd
```

To stop the `inetd` service, use:

```
moxa@moxa:~$ sudo systemctl stop inetd
```

To restart the `inetd` service, use:

```
moxa@moxa:~$ sudo systemctl restart inetd
```

To show the status of `inetd` service, use:

```
moxa@moxa:~$ sudo systemctl status inetd
```

To run a private daemon, you can edit the file `rc.local`, as shown below:

1. Type `cd /etc/` to change the directory.

```
root@moxa:~# cd /etc/
```

2. Type `vi rc.local` to edit the configuration file using the `vi` editor.

```
root@moxa:/etc/# vi rc.local
```

3. Add the application daemon that you want to run to the `rc.local` file.

Here we use the example of the `tcps2-release` program, which you can find on the CD, to illustrate how to configure and run a service as a background process.

```
# !/bin/sh
# Add the daemon that you want to run
/root/tcps2-release &~
```

4. After rebooting the system, you can find the daemon that you enabled by running the `ps` command.

```
root@moxa:~# ps -ef
  PID  Uid      VmSize  Stat  Command
    1  root          1296  S    init
    2  root           S    [keventd]
    3  root           S    [ksoftirqd_CPU0]
    4  root           S    [kswapd]
    5  root           S    [bdflush]
    6  root           S    [kupdated]
    7  root           S    [mtdblockd]
    8  root           S    [khubd]
   10  root           S    [jffs2_gcd_mtd3]
   32  root           D    [ixp425_csr]
   38  root          1256  S    stdef
   47  root          1368  S    /usr/sbin/inetd
   53  root          4464  S    /usr/sbin/httpd
   63  nobody        4480  S    /usr/sbin/httpd
   64  nobody        4480  S    /usr/sbin/httpd
   65  nobody        4480  S    /usr/sbin/httpd
   66  nobody        4480  S    /usr/sbin/httpd
   67  nobody        4480  S    /usr/sbin/httpd
   92  bin            1460  S    /sbin/portmap
   97  root            1264  S    /root/tcps2-release
  105  root            1556  S    /usr/sbin/rpc.statd
```

```

109 root          4044 S    /usr/sbin/snmpd -s -l /dev/null
111 root          2832 S    /usr/sbin/snmptrapd -s
140 root          1364 S    /sbin/cardmgr
144 root          1756 S    /usr/sbin/rpc.nfsd
146 root          1780 S    /usr/sbin/rpc.mountd
153 root          2960 S    /usr/sbin/sshd
161 root          1272 S    /bin/reportip
162 root          3464 S    /bin/massupfirm
163 root          1532 S    /sbin/getty 115200 ttyS0
164 root          1532 S    /sbin/getty 115200 ttyS1
166 root          3464 S    /bin/massupfirm
168 root          3464 S    /bin/massupfirm
171 root          3652 S    /usr/sbin/sshd
172 root          2200 S    -bash
174 root          1592 S    ps -ef
root@Moxa:~#

```

Executing Scheduled Commands Using the Cron Daemon

The **cron** daemon is used to run scheduled tasks in a Linux environment. When the **cron** daemon is running in the background, it searches the **/etc/crontab** file, **every minute**, to check each command to see if it should be run at that time. The output of the commands that are run is sent to the owner of the **crontab** or to the user named in the MAILTO environment variable in the **crontab**, if such a user exists.

To set up your scheduled applications, you must modify the **/etc/crontab** file. The **crontab** entries have the following format:

Mm	h	dom	mon	Dow	user	command
minute	hour	date	month	Week	user	command
0-59	0-23	1-31	1-12	0-6 (0 is Sunday)		

For example, add an entry to the **crontab** file in the format specified below if you want to launch a program at 8:00 every day:

```

#minute hour date month week user command
*      8    *    *    *    root /path/to/your/program

```

The following example demonstrates how to use the **cron** service to update the system time and RTC time at 8:00 AM every day:

1. Write the following shell script and save it as **fixtime.sh** in the **/home/.folder**:

```

#!/bin/sh
ntpdate time.stdtime.gov.tw
hwclock -w
exit 0

```

2. Change the mode of **fixtime.sh**

```
# chmod 755 fixtime.sh
```

3. Modify the **/etc/crontab** file to run **fixtime.sh** at 8:00 every day by adding the following line to the end of **crontab** content:

```
* 8 * * * root /home/fixtime.sh
```

Inserting a USB Storage Device into the Computer

By default, the USB storage devices on the MC-1200 will not be mounted automatically. You have to mount the storage devices manually. Since mounting USB storage devices manually can be difficult, a Debian package called `usbmount` is available to mount the USB drivers automatically. The `usbmount` package relies on the `udev` package to mount the USB storage devices automatically on certain mounting points such as `/media/usb0` and `/media/usb1`.

```
root@Moxa:~# mount
sysfs on /sys type sysfs (rw,nosuid,nodev,noexec,relatime)
proc on /proc type proc (rw,nosuid,nodev,noexec,relatime)
udev on /dev type devtmpfs (rw,relatime,size=10240k,nr_inodes=492181,mode=755)
devpts on /dev/pts type devpts
(rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,relatime,size=790820k,mode=755)
/dev/sda1 on / type ext4 (rw,noatime,errors=remount-ro,data=ordered)
securityfs on /sys/kernel/security type securityfs
(rw,nosuid,nodev,noexec,relatime)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/systemd type cgroup
(rw,nosuid,nodev,noexec,relatime,xattr,release_agent=/lib/systemd/systemd-cgrou
ps
-agent,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/cpuset type cgroup
(rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup
(rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/devices type cgroup
(rw,nosuid,nodev,noexec,relatime,devices)
cgroup on /sys/fs/cgroup/freezer type cgroup
(rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup
(rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/perf_event type cgroup
(rw,nosuid,nodev,noexec,relatime,perf_event)
tmpfs on /etc/machine-id type tmpfs (ro,relatime,size=790820k,mode=755)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs
(rw,relatime,fd=21,pgrp=1,timeout=300,minproto=5,maxproto=5,direct)
hugetlbfs on /dev/hugepages type hugetlbfs (rw,relatime)
mqueue on /dev/mqueue type mqueue (rw,relatime)
debugfs on /sys/kernel/debug type debugfs (rw,relatime)
binfmt_misc on /proc/sys/fs/binfmt_misc type binfmt_misc (rw,relatime)
/dev/sdb1 on /media/usb0 type vfat
(rw,nodev,noexec,noatime,nodiratime,sync,fmask=0022,dmask=0022,codepage=437,ioc
ha
rset=utf8,shortname=mixed,errors=remount-ro)
/dev/sdc1 on /media/usb1 type vfat
(rw,nodev,noexec,noatime,nodiratime,sync,fmask=0022,dmask=0022,codepage=437,ioc
```



```
ha
rset=utf8,shortname=mixed,errors=remount-ro)
```

**ATTENTION**

Remember to type the command **# sync** before you disconnect the USB storage device. If you do not issue the command, you may lose data.

Checking the Linux Version

The program `uname`, which stands for “Unix Name” and is part of the UNIX operating system, prints the name, version, and other details of the operating system running on the computer. Use the `-a` option to generate a response similar to the one shown below:

```
moxa@moxa:~$ uname -a
Linux Moxa 4.9.0-11-amd64 #1 SMP Debian 4.9.189-3 (2019-09-02) x86_64 GNU/Linux
```

Installing and Removing Packages Using APT

The advance package tool (APT) is a Debian tool used to install and remove packages. Before you use this tool to install a package, you need to configure the `apt` source file.

1. Use the `vi` editor to configure the `apt` source file `/etc/apt/sources.list` as follows:

```
root@moxa:~# vi /etc/apt/sources.list

deb http://ftp.us.debian.org/debian/ jessie main
deb-src http://ftp.us.debian.org/debian/ jessie main

deb http://security.debian.org/ jessie/updates main
deb-src http://security.debian.org/ jessie/updates main

# jessie-updates, previously known as 'volatile'
deb http://ftp.us.debian.org/debian/ jessie-updates main
deb-src http://ftp.us.debian.org/debian/ jessie-updates main

deb http://ftp.debian.org/debian jessie-backports main
deb-src http://ftp.debian.org/debian jessie-backports main

# Moxa's update
deb http://debian.moxa.com/debian jessie main
#deb http://220.135.161.42/debian jessie main
```

2. Add Moxa's `apt` repository to `/etc/apt/sources.list`

To enable you to add or update the drivers, libraries, and utility packages provided by Moxa, we have already included the `deb http://debian.moxa.com/debian jessie main` command in the `source.list` by default. If it is deleted or not available for some reason, you should add these to the source list before you add Moxa's `apt` repository.

```
root@moxa:~# sudo vi /etc/apt/sources.list
deb http://debian.moxa.com/debian jessie main
```

**ATTENTION**

Moxa has encrypted its packages with a GPG key, which allows you to check if a package is verified by us. Hence, you must first upload the GPG key to the Moxa embedded computer and add it to the GPG key list before installing the packages. You can find the GPG key in the CD/DVD or on the Moxa website.

You can check if the GPG key is already uploaded to your computer by checking the key list as follows:

```
root@Moxa:~# apt-key list
/etc/apt/trusted.gpg
-----
pub 2048R/62B24532 2014-05-28 [expires: 2024-05-25]
uid                               MOXA SYS <sys.support@moxa.com>
sub 2048R/F7F3CD9E 2014-05-28 [expires: 2024-05-25]
```

The GPG key will be displayed using **MOXA SYS**. If you do not find the GPG key, you can add it to the GPG key list as follows:

```
root@Moxa:~# apt-key add NEW-MOXA-SYS-DEBIAN-KEY
```

You must then update the package list as follows:

```
root@Moxa:~# apt-get update
Ign http://debian.moxa.com jessie Release.gpg
Ign http://debian.moxa.com/debian/ jessie/main Translation-en
Ign http://debian.moxa.com/debian/ jessie/main Translation-en_HK
Get:1 http://debian.moxa.com jessie Release [1,633 B]
Ign http://debian.moxa.com jessie/main i386 Packages
Get:2 http://debian.moxa.com jessie/main i386 Packages [1,585 B]
Fetched 3,218 B in 0s (47.2 kB/s)
Reading package lists... Done
```

After updating the package list, you can use the **apt-get** command to install or upgrade the packages from Moxa's **apt** repository as follows:

1. Update the source list after you configure it.

```
moxa@Moxa:~# sudo apt-get update
moxa@Moxa:~#
```

2. Once you indicate which package you want to install (for example: **ipsec-tools**), type:

```
moxa@Moxa:~# sudo apt-get install ipsec-tools
moxa@Moxa:~#
```

Use one of the following commands to remove a package:

For a simple package removal:

```
moxa@Moxa:~# sudo apt-get remove ipsec-tools
moxa@Moxa:~#
```

For a complete package removal:

```
moxa@Moxa:~# sudo apt-get remove ipsec-tools --purge
moxa@Moxa:~#
```

**ATTENTION**

You can free up the cache space using the # `apt-get clean` command.

```
moxa@moxa:~# apt-get clean
moxa@moxa:~#
```

Device Suspend

The MC-1200 supports ACPI S3. You should enable option S3 in the BIOS and then use the “`systemctl suspend`” command.

```
root@moxa:/home/moxa# systemctl suspend
```

After suspend is in effect, press the power button to wake up the computer.

If you login in as administrator (root) in X windows, you can use **System** → **Shutdown** → **Suspend** to suspend your device. Note: This does not work for non-root users.

Some components on Moxa’s embedded computer may need to be reseted after resuming. You can write a simple script in the directory `/lib/systemd/system-sleep/` to complete this procedure.

Wake On LAN

The MC-1200 supports wake on LAN, a feature used to wake up a device for suspend (S3) and shutdown (S5). To check the WOL support on Ethernet port x, type `ethtool DEVNAME`, where “DEVNAME” is the network interface name.

```
root@moxa:/home/moxa# ethtool enp1s0
Settings for enp1s0:
    Supported ports: [ TP ]
    Supported link modes:   10baseT/Half 10baseT/Full
                           100baseT/Half 100baseT/Full
                           1000baseT/Full
    Supported pause frame use: Symmetric
    Supports auto-negotiation: Yes
    Advertised link modes:  10baseT/Half 10baseT/Full
                           100baseT/Half 100baseT/Full
                           1000baseT/Full
    Advertised pause frame use: Symmetric
    Advertised auto-negotiation: Yes
    Speed: 1000Mb/s
    Duplex: Full
    Port: Twisted Pair
    PHYAD: 1
    Transceiver: internal
    Auto-negotiation: on
    MDI-X: off (auto)
    Supports Wake-on: pumbg
    Wake-on: g
    Current message level: 0x00000007 (7)
                           drv probe link
    Link detected: yes
```

The default option for WOL support is g (wake on Magic packet). If the WOL setting is not g, we suggest that you only enable wake up on magic packet. Modify the default setting with the command **ethtool -s DEVNAME wol g**.

```
root@Moxa:/home/moxa# ethtool -s enp1s0 wol g
```

Getting the Product Serial Number

The product information can be read using the dmidecode as shown in the following example.

```
moxa@Moxa:~$ sudo dmidecode -t baseboard
# dmidecode 3.0
Getting SMBIOS data from sysfs.
SMBIOS 3.0.0 present.

Handle 0x0002, DMI type 2, 15 bytes
Base Board Information
    Manufacturer:
    Product Name: MC-1220-KL5-T-S
    Version:
    Serial Number: AAAAA1234567
    Asset Tag:
    Features:
        Board is a hosting board
        Board is replaceable
    Location In Chassis:
    Chassis Handle: 0x0003
    Type: Motherboard
    Contained Object Handles: 0
```

Managing Communications

The MC-1200 ready-to-run embedded computer is a network-centric platform designed to serve as a front-end for data acquisition and industrial control applications. This chapter describes how to configure the various communication functions supported by the Linux operating system.

The following topics are covered in this chapter:

❑ **Default Network Interface Name**

- Editing the Interfaces Configuration File
- Adjusting IP Addresses with the `ifconfig` Command

❑ **DNS Client**

- `/etc/hostname`
- `/etc/resolv.conf`
- `/etc/nsswitch.conf`

❑ **Configuring Ethernet Bonding**

❑ **Apache Web Server**

- Installing the Apache Web Server
- Default Homepage

❑ **IPTables**

- IPTables Hierarchy
- IPTables Modules
- Observe and Erase Chain Rules
- Define Policy for Chain Rules
- Append or Delete Rules

❑ **NAT (Network Address Translation)**

- NAT Example
- Enabling NAT at Bootup

❑ **PPP (Point-to-Point Protocol)**

- Connecting to a PPP Server over a Simple Dial-Up Connection
- Connecting to a PPP Server Over a Hard-wired Link
- Checking the Connection
- Setting Up a Machine for Incoming PPP Connections

❑ **PPPoE**

❑ **NFS (Network File System) Client**

❑ **SNMP (Simple Network Management Protocol)**

❑ **OpenVPN**

- Installing OpenVPN
- Ethernet Bridging for Private Networks on Different Subnets
- Ethernet Bridging for Private Networks on the Same Subnet
- Routed IP

❑ **Configuring the Wi-Fi Connection**

- Configuring WPA2
- Configuring the Wireless LAN Using a Configuration File

❑ **Wi-Fi Management**

- `iw`
- `wpa_supplicant`
- `Hostapd`

Default Network Interface Name

Debian 9 stretch adopts the systemd predictable network interface naming by default. The network interface name is no longer as "ethX". The new interface name depends on the hardware design and physical connections. You may observe different interface naming types, for examples:

1. Names incorporating Firmware/BIOS provided index numbers for on-board devices (example: eno1)
2. Names incorporating Firmware/BIOS provided PCI Express hotplug slot index numbers (example: ens1)
3. Names incorporating physical/geographical location of the connector of the hardware (example: enp2s0)
4. Names incorporating the interfaces's MAC address (example: enx78e7d1ea46da)
5. Classic, unpredictable kernel-native ethX naming (example: eth0)

For more details, you can refer following link:

<https://wiki.debian.org/NetworkInterfaceNames>

The default LAN port to network interface mapping is given below:

LAN port	Network Interface Name
LAN1	enp1s0
LAN2	enp0s31f6

Editing the Interfaces Configuration File

1. Type `cd /etc/network` to change the path to network folder.

```
Moxa:~# cd /etc/network
```

2. Type `vi interfaces` to edit the network configuration file using the `vi` editor.

You can then modify the network parameter in the `interfaces` file.

```
Moxa:/etc/network# vi interfaces
```

For example, you can configure the MC-1200's Ethernet ports for static or dynamic (DHCP) IP addresses.

Configuring a Static IP Address

The default static IP addresses can be modified as shown in the following example:

```
# The loopback network interface
auto lo
iface lo inet loopback

# The primary network interface
auto eth0
iface eth0 inet static
    address 192.168.3.127
    netmask 255.255.255.0
    broadcast 192.168.3.255

auto eth1
iface eth1 inet static
    address 192.168.4.127
    netmask 255.255.255.0
    broadcast 192.168.4.255
```

```
auto eth2
iface eth2 inet static
    address 192.168.5.127
    netmask 255.255.255.0
    broadcast 192.168.5.255

auto eth3
iface eth3 inet static
    address 192.168.6.127
    netmask 255.255.255.0
    broadcast 192.168.6.255

auto wlan0
iface wlan0 inet static
    address 192.168.7.127
    netmask 255.255.255.0
    broadcast 192.168.7.255
```

Configuring Dynamic IP Address Using DHCP

To configure one or both LAN ports to request an IP address dynamically, replace **static** with **dhcp** and then delete the rest of the lines.

```
# The primary network interface
auto eth0
iface eth0 inet dhcp
```

After modifying the boot settings of the LAN interface, issue the following command to activate the LAN settings immediately.

```
# /etc/init.d/networking restart
```

```
Moxa:~# /etc/init.d/networking restart
```

Adjusting IP Addresses with the ifconfig Command

IP settings can be adjusted during run-time, but the new settings must be saved to the disk by modifying the **/etc/network/interfaces** file and saving the changes. For example, type the command **# ifconfig eth0 192.168.1.1** to change the IP address of LAN1 to 192.168.1.1.

```
Moxa:~# ifconfig eth0 192.168.1.1
Moxa:~#
```

DNS Client

The MC-1200 supports DNS client (but not DNS server). To set up DNS client, you need to edit three configuration files: **/etc/hostname**, **/etc/resolv.conf**, and **/etc/nsswitch.conf**.

/etc/hostname

1. Edit **/etc/hostname**:

```
moxa@moxa:~# sudo vi /etc/hostname
MOXA
```

2. Re-configure the hostname.

```
moxa@Moxa:~# sudo /etc/init.d/hostname.sh start
```

3. Check the new hostname.

```
moxa@Moxa:~# hostname
```

/etc/resolv.conf

This is the most important file that you need to edit when using DNS. For example, before using **# ntpdate time.stdtime.gov.tw** command to update the system time, you will need to add the DNS server address to the file. Ask your network administrator which DNS server address you should use. The DNS server's IP address is specified with the **nameserver** command. For example, add the following line to the `/etc/resolv.conf` (assuming the DNS server's IP address is 8.8.8.8): **nameserver 8.8.8.8**

```
Moxa:/etc# cat resolv.conf
#
# resolv.conf This file is the resolver configuration file
# See resolver(5).
#
#nameserver 192.168.1.16
nameserver 8.8.8.8
nameserver 8.8.4.4
nameserver 8.8.8.8
Moxa:/etc#
```

/etc/nsswitch.conf

This file defines the sequence of files, `/etc/hosts` or `/etc/resolv.conf`, to be read to resolve the IP address. The **hosts** line in `/etc/nsswitch.conf` means use `/etc/host` first and DNS service to resolve the address.

```
# /etc/nsswitch.conf
#
# Example configuration of GNU Name Service Switch functionality.
# If you have the `glibc-doc-reference' and `info' packages installed, try:
# `info libc "Name Service Switch"' for information about this file.

passwd:          compat
group:           compat
shadow:         compat

hosts:           files dns
networks:       files

protocols:      db files
services:      db files
ethers:        db files
rpc:           db files

netgroup:      nis
```


Configuring Ethernet Bonding

The Linux bonding driver provides a method for aggregating multiple network interfaces into a single logical "bonded" interface. To use the bonding feature, you have to load the bonding driver with mode setting. Then use the `ifenslave` command to add the Ethernet interface into the bond0 interface. Here is the script that bonds the eth1 and eth2 interfaces together, which you can add to the `/etc/init.d/bonding.sh` file

```
#!/bin/bash

#### BEGIN INIT INFO
# Provides:          bonding
# Short-Description: Start the bonding service, bond eth1 and eth2.
# Required-Start:    $all
# Required-Stop:     $all
# Should-Start:
# Should-Stop:
# Default-Start:     2 3 4 5
# Default-Stop:      0 1 6
#### END INIT INFO

NAME=bonding
PATH=/bin:/usr/bin:/sbin:/usr/sbin

case "$1" in
start)
    # to set ethX interfaces as slave the bond0 must have an ip
    if [ "$2" == "" ]; then
        $0
        exit 1
    fi
    echo "Starting bonding service: $NAME."
    modprobe bonding mode=1 miimon=100          # load bonding module

    ifdown eth2                                # putting down eth2
    ifdown eth1                                # putting down eth1

    ifconfig bond0 hw ether 00:90:E8:00:00:60   # change mac address
    ifconfig bond0 $2 netmask 255.255.255.0 up # set ip address

    ifenslave bond0 eth2                       # set eth2 in slave for bond0
    ifenslave bond0 eth1                       # set eth1 in slave for bond0
    ;;

stop)
    echo "Stopping bonding service: $NAME"
    ifenslave -d bond0 eth2                   # release eth2 from bond0
    ifenslave -d bond0 eth1                   # release eth1 from bond0

    ifconfig bond0 down                       # putting down bond0
    modprobe -r bonding                       # unload bonding module

    ifup eth2
    ifup eth1
    ;;

```

```
restart)
    $0 stop
    $0 start $2
    ;;

*)
    echo "Usage: /etc/init.d/$NAME {start|stop|restart} [ip address]"
    exit 1
    ;;
esac

exit 0
```

You can add this to run level by insserv.

```
moxa@moxa:~# sudo insserv -v -d bonding.sh
```

To remove it from run level, use the following command.

```
moxa@moxa:~# sudo insserv -r bonding.sh
```

Apache Web Server

Installing the Apache Web Server

The Apache web server is installed on the MC-1200 computer but not enabled. You can enable the server using the **systemctl** command as follows:

```
Moxa:~# sudo systemctl enable apache2
```

Manually start the apache2 server using the following command:

```
Moxa:~# sudo systemctl start apache2
```

Default Homepage

The Apache web server's main configuration file is **/etc/apache2/sites-enabled/000-default.conf**, with the default homepage located at **/var/www/html/index.html**.

Save your own homepage to the directory **/var/www**

Save your CGI page to the directory **/var/www**

Before you modify the homepage, use a browser (such as Microsoft Internet Explorer or Mozilla Firefox) from your PC to test if the Apache web server is working. Type the LAN1 IP address in the browser's address box to open the homepage.

For example, if the default IP address 192.168.3.127 is still active, type: **http://192.168.3.127/**

To test the default CGI page, type:**http://192.168.3.127/cgi-bin/w3mmail.cgi**

IPTables

IPTables is an administrative tool for setting up, maintaining, and inspecting the Linux kernel's IP packet filter rule tables. Several different tables are defined, with each table containing built-in chains and user-defined chains.

Each chain is a list of rules that apply to a certain type of packet. Each rule specifies what to do with a matching packet. A rule (such as a jump to a user-defined chain in the same table) is called a **target**.

The MC-1200 supports three types of IPTables: Filter tables, NAT tables, and Mangle tables.

Filter Table—Includes Three Chains

- **INPUT chain**
- **OUTPUT chain**
- **FORWARD chain**

NAT Table—Includes Three Chains

- **PREROUTING chain**—transfers the destination IP address (DNAT).
- **POSTROUTING chain**—works after the routing process and before the Ethernet device process to transfer the source IP address (SNAT).
- **OUTPUT chain**—produces local packets.

Sub-Tables

- **Source NAT (SNAT)**—changes the first source IP address of the packet.
- **Destination NAT (DNAT)**—changes the first destination IP address of the packet.
- **MASQUERADE**—a special form for SNAT. If one host can connect to the Internet, then the other computers that connect to this host can connect to the Internet when the computer does not have an actual IP address.
- **REDIRECT**—a special form of DNAT that re-sends packets to a local host independent of the destination IP address.


Mangle Table—Includes Two Chains

- **PREROUTING chain**—pre-processes packets before the routing process.
- **OUTPUT chain**—processes packets after the routing process.

Mangle tables can have one of three extensions—TTL, MARK, TOS.

IPTables Hierarchy

The following figure shows the IPTables hierarchy.

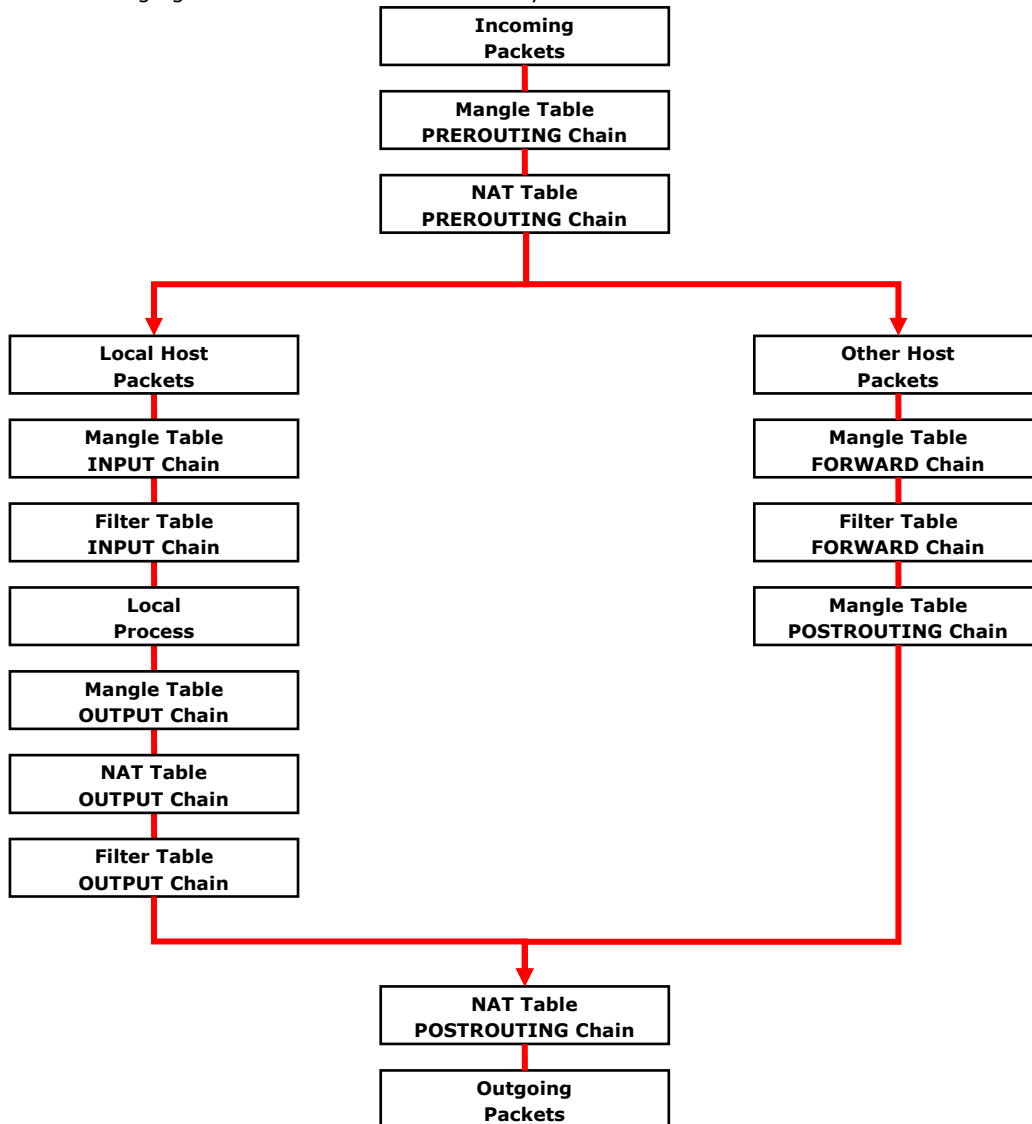

IPTables Modules

IPTables supports the following sub-modules. Be sure to use the module that matches your application.

arptable_filter.ko	arp_tables.ko	arpt_mangle.ko	ip_contrack_amanda.ko
ip_contrack_ftp.ko	ip_contrack_h323.ko	ip_contrack_irc.ko	ip_contrack.ko
ip_contrack_netbios_ns.ko	ip_contrack_netlink.ko	ip_contrack_pptp.ko	ip_contrack_proto_sctp.ko
ip_contrack_sip.ko	ip_contrack_tftp.ko	ip_nat_amanda.ko	ip_nat_ftp.ko
ip_nat_h323.ko	ip_nat_irc.ko	ip_nat.ko	ip_nat_pptp.ko
ip_nat_sip.ko	ip_nat_snmp_basic.ko	ip_nat_tftp.ko	ip_queue.ko
iptable_filter.ko	iptable_mangle.ko	iptable_nat.ko	iptable_raw.ko
ip_tables.ko	ipt_addrtype.ko	ipt_ah.ko	ipt_CLUSTERIP.ko
ipt_dscp.ko	ipt_DSCP.ko	ipt_ecn.ko	ipt_ECN.ko
ipt_hashlimit.ko	ipt_iprange.ko	ipt_LOG.ko	ipt_MASQUERADE.ko
ipt_NETMAP.ko	ipt_owner.ko	ipt_recent.ko	ipt_REDIRECT.ko
ipt_REJECT.ko	ipt_SAME.ko	ipt_TCPMSS.ko	ipt_tos.ko
ipt_TOS.ko	ipt_ttl.ko	ipt_TTL.ko	ipt_ULOG.ko

The basic syntax to enable and load an IPTables module is as follows:

```
# lsmod
# modprobe ip_tables
# modprobe iptable_filter
# modprobe iptable_mangle
# modprobe iptable_nat
```

Use the **lsmod** command to check if the **ip_tables** module has already been loaded in the MC-1200. Use **modprobe** to insert and enable the module.

Use the **iptables**, **iptables-restore**, and **iptables-save** commands to maintain the database.



ATTENTION

IPTables plays the role of packet filtering or NAT. Be careful when setting up the IPTables rules. If the rules are not correct, remote hosts that connect via a LAN or PPP may be denied. We recommend using the VGA console to set up the IPTables. Click on the following links for more information about IPTables.

<http://www.linuxguruz.com/iptables/>

<http://www.netfilter.org/documentation/HOWTO//packet-filtering-HOWTO.html>

Since the IPTables command is very complex, to illustrate the IPTables syntax we have divided our discussion of the various rules into three categories: **Observe and erase chain rules**, **Define policy rules**, and **Append or delete rules**.

Observe and Erase Chain Rules

Usage

iptables [-t tables] [-L] [-n]

-t tables: Table to manipulate (default: 'filter'); example: nat or filter.

-L [chain]: List List all rules in selected chains. If no chain is selected, all chains are listed.

-n: Numeric output of addresses and ports.

iptables [-t tables] [-FXZ]

-F: Flush the selected chain (all the chains in the table if none is listed).

-X: Delete the specified user-defined chain.

-Z: Set the packet and byte counters in all chains to zero.

Example

iptables -L -n

In this example, since we do not use the -t parameter, the system uses the default "filter" table. Three chains are included: INPUT, OUTPUT, and FORWARD. INPUT chains are accepted automatically, and all connections are accepted without being filtered.

```
# iptables -F
```

```
# iptables -X
```

```
# iptables -Z
```

Define Policy for Chain Rules

Usage

```
# iptables [-t tables] [-P] [INPUT, OUTPUT, FORWARD, PREROUTING, OUTPUT, POSTROUTING]
[ACCEPT, DROP]
```

-P: Set the policy for the chain to the given target.

INPUT: For packets coming into the MC-1200.

OUTPUT: For locally-generated packets.

FORWARD: For packets routed out through the MC-1200.

PREROUTING: To alter packets as soon as they come in.

POSTROUTING: To alter packets as they are about to be sent out.

Example

```
#iptables -P INPUT DROP
#iptables -P OUTPUT ACCEPT
#iptables -P FORWARD ACCEPT
#iptables -t nat -P PREROUTING ACCEPT
#iptables -t nat -P OUTPUT ACCEPT
#iptables -t nat -P POSTROUTING ACCEPT
```

In this example, the policy accepts outgoing packets and denies incoming packets.

Append or Delete Rules

Usage

```
# iptables [-t table] [-AI] [INPUT, OUTPUT, FORWARD] [-io interface] [-p tcp, udp, icmp, all] [-s
IP/network] [--sport ports] [-d IP/network] [--dport ports] -j [ACCEPT. DROP]
```

-A: Append one or more rules to the end of the selected chain.

-I: Insert one or more rules in the selected chain as the given rule number.

-i: Name of an interface via which a packet is going to be received.

-o: Name of an interface via which a packet is going to be sent.

-p: The protocol of the rule or of the packet to check.

-s: Source address (network name, host name, network IP address, or plain IP address).

--sport: Source port number.

-d: Destination address.

--dport: Destination port number.

-j: Jump target. Specifies the target of the rules; i.e., how to handle matched packets.

For example, ACCEPT the packet, DROP the packet, or LOG the packet.

Examples

Example 1: Accept all packets from the lo interface.

```
# iptables -A INPUT -i lo -j ACCEPT
```

Example 2: Accept TCP packets from 192.168.0.1.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.1 -j ACCEPT
```

Example 3: Accept TCP packets from Class C network 192.168.1.0/24.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.0/24 -j ACCEPT
```

Example 4: Drop TCP packets from 192.168.1.25.

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.1.25 -j DROP
```

Example 5: Drop TCP packets addressed for port 21.

```
# iptables -A INPUT -i eth0 -p tcp --dport 21 -j DROP
```

Example 6: Accept TCP packets from 192.168.0.24 to MC-1200's port 137, 138, 139

```
# iptables -A INPUT -i eth0 -p tcp -s 192.168.0.24 --dport 137:139 -j ACCEPT
```

Example 7: Log TCP packets that visit MC-1200's port 25.

```
# iptables -A INPUT -i eth0 -p tcp --dport 25 -j LOG
```

Example 8: Drop all packets from MAC address 01:02:03:04:05:06.

```
# iptables -A INPUT -i eth0 -p all -m mac --mac-source 01:02:03:04:05:06 -j DROP
```



ATTENTION

In Example 8, remember to issue the command **# modprobe ipt_mac** first to load the module ipt_mac.

NAT (Network Address Translation)

The NAT (Network Address Translation) protocol translates IP addresses used on one network into IP addresses used on a connecting network. One network is designated the inside network and the other is the outside network. Typically, the MC-1200 connects several devices on a network and maps local inside network addresses to one or more global outside IP addresses, and un-maps the global IP addresses on incoming packets back into local IP addresses.




ATTENTION

Click the following link for more information on NAT:

<http://www.netfilter.org/documentation/HOWTO//packet-filtering-HOWTO.html>

NAT Example

The IP address of all packets leaving LAN1 are changed to **192.168.3.127** (you will need to load the module `ipt_MASQUERADE`):

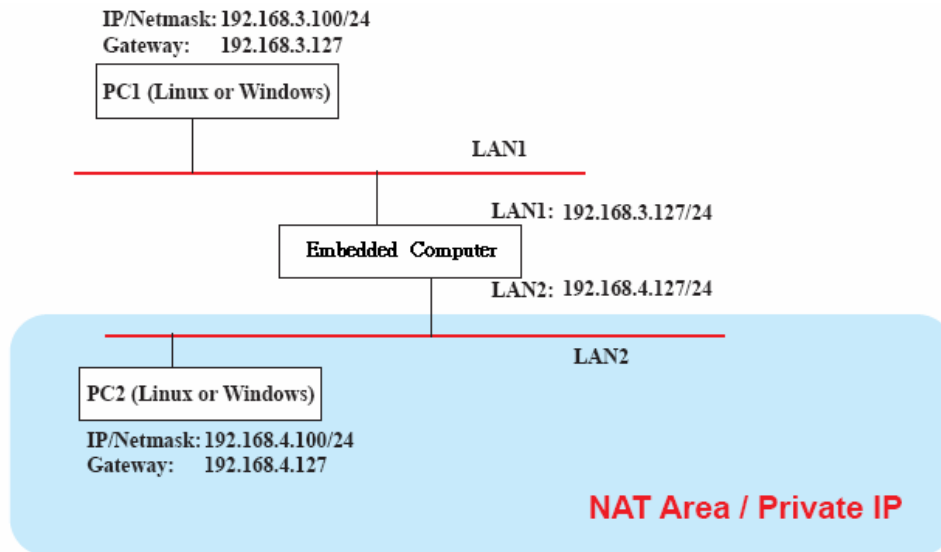

Enabling NAT at Bootup

In most real world situations, you will want to use a simple shell script to enable NAT when the MC-1200 boots up. The following script is an example.

```
#!/bin/bash
# If you put this shell script in the /home/nat.sh
# Remember to chmod 744 /home/nat.sh
# Edit the rc.local file to make this shell startup automatically.
# vi /etc/rc.local
# Add a line in the end of rc.local /home/nat.sh

EXIF= "eth0" #This is an external interface for setting up a valid IP address.
EXNET= "192.168.4.0/24" #This is an internal network address.

# Step 1. Insert modules.

# Here 2> /dev/null means the standard error messages will be dump to null device.

modprobe ip_tables 2> /dev/null
modprobe ip_nat_ftp 2> /dev/null
modprobe ip_nat_irc 2> /dev/null
modprobe ip_conntrack 2> /dev/null
modprobe ip_conntrack_ftp 2> /dev/null
modprobe ip_conntrack_irc 2> /dev/null

# Step 2. Define variables, enable routing and erase default rules.

PATH=/bin:/sbin:/usr/bin:/usr/sbin:/usr/local/bin:/usr/local/sbin
export PATH
echo "1" > /proc/sys/net/ipv4/ip_forward
/sbin/iptables -F
/sbin/iptables -X
/sbin/iptables -Z
/sbin/iptables -F -t nat
/sbin/iptables -X -t nat
```



```

/sbin/iptables -Z -t nat
/sbin/iptables -P INPUT ACCEPT
/sbin/iptables -P OUTPUT ACCEPT
/sbin/iptables -P FORWARD ACCEPT
/sbin/iptables -t nat -P PREROUTING ACCEPT
/sbin/iptables -t nat -P POSTROUTING ACCEPT
/sbin/iptables -t nat -P OUTPUT ACCEPT

# Step 3. Enable IP masquerade.

#ehco 1 > /proc/sys/net/ipv4/ip_forward#modprobe ipt_MASQUERADE#iptables -t nat
-A POSTROUTING -o eth0 -j MASQUERADE

```

PPP (Point-to-Point Protocol)

PPP is used to run IP (Internet Protocol) and other network protocols over a serial link. PPP can be used for direct serial connections (using a null-modem cable) over a Telnet link, and links established using a modem over a telephone line.

Modem/PPP access is almost identical to connecting directly to a network through the embedded computer Ethernet port. Since PPP is a peer-to-peer system, the Linux operating system can use PPP to link two networks (or a local network to the Internet) to create a Wide Area Network (WAN).



ATTENTION

Click on the following links for more information about PPP:

<http://tldp.org/HOWTO/PPP-HOWTO/index.html>

<http://axion.physics.ubc.ca/ppp-linux.html>

Connecting to a PPP Server over a Simple Dial-Up Connection

The following command is used to connect to a PPP server by modem. Use this command for old PPP servers that prompt for a login name (replace "username" with the correct name) and password (replace "password" with the correct password). Note that "debug crtscts" and "defaultroute 192.1.1.17" are optional.

```
#pppd connect `chat -v "" ATDT5551212 CONNECT ""login: username password: password`
/dev/ ttyS0 115200 debug crtscts modem defaultroute 192.1.1.17
```

If the PPP server does not prompt for the username and password, the command should be entered as follows (replace "username" with the correct username and replace "password" with the correct password):

```
#pppd connect `chat -v "" ATDT5551212 CONNECT "" user username password /dev/ ttyS0
115200 crtscts modem
```

The pppd options are described in the table below:

Option	Description
connect `chat etc...`	This option gives the command to contact the PPP server. The chat program is used to dial a remote computer. The entire command is enclosed in single quotes because pppd expects a one-word argument for the connect option. The options for chat are given below:
-v	verbose mode; log what we do to syslog
" "	Double quotes—don't wait for a prompt, but instead do ... (note that you must include a space after the second quotation mark)
ATDT5551212	Dial the modem, and then ...

Option	Description	
	CONNECT	Wait for an answer.
	" "	Send a return (null text followed by the usual return)
	login: username word: password	Log in with username and password. NOTE: Refer to the chat man page, chat.8, for more information about the chat utility.
	/dev/	Specify the callout serial port.
	115200	The baud rate.
	debug	Log status in syslog.
	crtscts	Use hardware flow control between the computer and modem (at baudrate of 115200 this is a must).
	modem	Indicates that this is a modem device; pppd will hang up the phone before and after making the call.
	defaultroute	Once the PPP link is established, make it the default route; if you have a PPP link to the Internet, this is probably what you want.
	192.1.1.17	This is a degenerate case of a general option of the form x.x.x.x:y.y.y.y. Here x.x.x.x is the local IP address and y.y.y.y is the IP address of the remote end of the PPP connection. If this option is not specified, or if just one side is specified, then x.x.x.x defaults to the IP address associated with the local machine's hostname (located in <code>/etc/hosts</code>), and y.y.y.y is determined by the remote machine.

Connecting to a PPP Server Over a Hard-wired Link

If a username and password are not required, use the following command (note that **noipdefault** is optional):

```
#pppd connect `chat -v` " " " " ` noipdefault /dev/ttyS0 19200 crtscts
```

If a username and password is required, use the following command (note that **noipdefault** is optional, and the username and password are both "root"):

```
#pppd connect `chat -v` " " " " ` user root password root noipdefault /dev/ttyS0 19200 crtscts
```

Checking the Connection

Once you have set up a PPP connection, there are some steps you can take to test the connection. First, type:

```
# /sbin/ifconfig
```

Depending on your distribution, the command might be located elsewhere. After executing the command, you should be able to see all the network interfaces that are up.

ppp0 should be one of the network interfaces. You should recognize the first IP address as the IP address of the computer, and **P-t-P address** is the IP address of the server. The output should be similar to the following:

```
lo          Link encap Local Loopback
            inet addr 127.0.0.1  Bcast 127.255.255.255 Mask 255.0.0.0
            UP LOOPBACK RUNNING  MTU 2000    Metric 1
            RX packets 0  errors 0  dropped 0  overrun 0

ppp0       Link encap Point-to-Point Protocol
            inet addr 192.76.32.3  P-t-P 129.67.1.165 Mask 255.255.255.0
```

```
UP POINTOPOINT RUNNING MTU 1500 Metric 1
RX packets 33 errors 0 dropped 0 overrun 0
TX packets 42 errors 0 dropped 0 overrun 0
```

Now, type:

```
# ping z.z.z.z
```

Where z.z.z.z is the address of your name server. The output should be similar to the following:

```
Moxa:~# ping 129.67.1.165
PING 129.67.1.165 (129.67.1.165): 56 data bytes
64 bytes from 129.67.1.165: icmp_seq=0 ttl=225 time=268 ms
64 bytes from 129.67.1.165: icmp_seq=1 ttl=225 time=247 ms
64 bytes from 129.67.1.165: icmp_seq=2 ttl=225 time=266 ms
^C
--- 129.67.1.165 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 247/260/268 ms
Moxa:~#
```

Try typing:

```
# netstat -nr
```

You should see three routes similar to the following:

```
Kernel routing table
Destination Gateway Genmask Flags Metric Ref Use
iface
129.67.1.165 0.0.0.0 255.255.255.255 UH 0 0 6
ppp0
127.0.0.0 0.0.0.0 255.0.0.0 U 0 0 0 lo
0.0.0.0 129.67.1.165 0.0.0.0 UG 0 0 6298
ppp0
```

If your output looks similar but does not have the "destination 0.0.0.0" line (which refers to the default route used for connections), you may have run `pppd` without the **defaultroute** option. At this point, you can try using Telnet, ftp, or finger, bearing in mind that you will have to use numeric IP addresses unless you have configured `/etc/resolv.conf` correctly.

Setting Up a Machine for Incoming PPP Connections

Method 1: PPPD Dial-In with `pppd` Commands

This first example applies to using a modem, and requiring authorization with a username and password.

```
#pppd /dev/ttyS0 115200 crtscts modem 192.168.16.1:192.168.16.2 login auth
```

You should also add the following line to the file `/etc/ppp/pap-secrets`:

```
* * "" *
```

The first star (*) lets everyone login. The second star (*) lets every host connect. The pair of double quotation marks ("") indicates that the file `/etc/passwd` can be used to check the password. The last star (*) is to let any IP connect.

The following example does not check the username and password:

```
# pppd/dev/ttyS0 115200 crtscts modem 192.168.16.1:192.168.16.2
```

Method 2: PPPD Dial-In with pppd Script

Configure a dial-in script `/etc/ppp/peer/dialin`

```
# You usually need this if there is no PAP authentication
noauth
#auth
#login

# The chat script (be sure to edit that file, too!)
init "/usr/sbin/chat -v -f /etc/ppp/ppp-ttyS0.chat"

# Set up routing to go through this PPP link
defaultroute

# Default modem (you better replace this with /dev/ttySx!)
/dev/ttyS0

# Speed
115200

# Keep modem up even if connection fails
persist
crtscts
modem
192.168.16.1:192.168.16.2
debug
-detach
```

Configure the chat script `/etc/ppp/ppp-ttyS0.chat`

```
SAY      'Auto Answer ON\n'
``      AT50=1
```

Start the **pppd** dial-in service.

```
# pppd call dialin
```



ATTENTION

If you would like to have auto dial-in service, you can launch the dial-in service in `/etc/inittab` with the **respawn** command.

```
Moxa:~# mount -o remount,rw /dev/sda1 /
Moxa:~# echo "p0:2345:respawn:pppd call dialin" >> /etc/inittab
Moxa:~# umount /
```

PPPoE

Use the following procedure to configure PPPoE:

1. Connect the MC-1200's LAN port to an ADSL modem with a cross-over cable, HUB, or switch.
2. Log in to the MC-1200 as the root user.
3. Edit the file `/etc/ppp/chap-secrets` and add the following:

```
"username@hinet.net" * "password" *

# Secrets for authentication using CHAP
# client          server  secret          IP addresses

# PPPOE example, if you want to use it, you need to unmark it and modify it
"username@hinet.net" * "password" *
```

username@hinet.net is the username obtained from the ISP to log in to the ISP account. **password** is the corresponding password for the account.

4. Edit the file `/etc/ppp/pap-secrets` and add the following:

```
"username@hinet.net" * "password" *

# ATTENTION: The definitions here can allow users to login without a
# password if you don't use the login option of pppd! The mgetty Debian
# package already provides this option; make sure you don't change that.

# INBOUND connections

# Every regular user can use PPP and has to use passwords from /etc/passwd
* hostname "" *
"username@hinet.net" * "password" *

# UserIDs that cannot use PPP at all. Check your /etc/passwd and add any
# other accounts that should not be able to use pppd!
guest hostname "*" -
master hostname "*" -
root hostname "*" -
support hostname "*" -
stats hostname "*" -

# OUTBOUND connections
```

username@hinet.net is the username obtained from the ISP to log in to the ISP account. **password** is the corresponding password for the account.

5. Edit the file `/etc/ppp/options` and add the following line:

```
plugin rp-pppoe
```

```
# received. Note: it is not advisable to use this option with the persist
# option without the demand option. If the active-filter option is given,
# data packets which are rejected by the specified activity filter also
# count as the link being idle.
#idle <n>

# Specifies how many seconds to wait before re-initiating the link after
# it terminates. This option only has any effect if the persist or demand
# option is used. The holdoff period is not applied if the link was
# terminated because it was idle.
#holdoff <n>
```

```
# Wait for up n milliseconds after the connect script finishes for a valid
# PPP packet from the peer. At the end of this time, or when a valid PPP
# packet is received from the peer, pppd will commence negotiation by
# sending its first LCP packet. The default value is 1000 (1 second).
# This wait period only applies if the connect or pty option is used.
#connect-delay <n>

# Load the pppoe plugin
plugin rp-pppoe.so

# ---<End of File>---
```

6. If you use LAN1 to connect to the ADSL modem, add the file **/etc/ppp/options.eth0**, if you use LAN2 to connect to the ADSL modem, add **/etc/ppp/options.eth1**, etc.

```
name username@hinet.net
mtu 1492
mru 1492
defaultroute
noipdefault
~
~
"/etc/ppp/options.eth0" 5 lines, 67 characters
```

Type your username (the one you set in the **/etc/ppp/pap-secrets** and **/etc/ppp/chap-secrets** files) after the **name** option. You may add other options as needed.

7. Set up DNS.

If you are using DNS servers supplied by your ISP, edit the file **/etc/resolv.conf** by adding the following lines of code:

```
nameserver ip_addr_of_first_dns_server
nameserver ip_addr_of_second_dns_server
```

For example:

```
nameserver 8.8.8.8
nameserver 8.8.4.4
```

```
Moxa:/etc# cat resolv.conf
#
# resolv.conf This file is the resolver configuration file
# See resolver(5).
#
nameserver 8.8.8.8
nameserver 8.8.4.4
Moxa:/etc#
```

Use the following command to create a **pppoe** connection:

```
#pppd eth0
```

1. The ADSL modem is connected to the LAN1 port, which is named eth0. If the ADSL modem is connected to LAN2, use eth1, etc.
2. Type **#ifconfig ppp0** to check if the connection is OK. If the connection is OK, you should see the IP address of ppp0. Use **#ping** to test the IP address.

```
ppp0  Link encap Point-to-Point Protocol
      inet addr 192.76.32.3  P-t-P 129.67.1.165 Mask 255.255.255.0
      UP POINTOPOINT RUNNING  MTU 1500  Metric 1
      RX packets 33 errors 0 dropped 0 overrun 0
      TX packets 42 errors 0 dropped 0 overrun 0
```

If you want to disconnect the connection, use the **kill** command to kill the **pppd** process.

NFS (Network File System) Client

The Network File System (NFS) is used to mount a disk partition on a remote machine (as if it were on a local hard drive), allowing fast and seamless sharing of files across a network. NFS allows users to develop applications for the MC-1200 without worrying about the amount of disk space that will be available. The MC-1200 only supports NFS client protocol.



ATTENTION

Click on the following links for more information about NFS.

<http://www.ietf.org/rfc/rfc1213.txt>

<http://www.faqs.org/rfcs/rfc1317.html>

The following procedures illustrate how to mount a remote NFS Server.

1. Scan the NFS Server's shared directory:

```
#showmount -e HOST
```

showmount: Shows the mount information of an NFS Server

-e: Shows the NFS Server's export list.

HOST: IP address or DNS address

2. Establish a mount point on the NFS Client site:

```
#mkdir -p /home/nfs/public
```

3. Mount the remote directory to a local directory:

```
# mount -t nfs -o nolock 192.168.3.100:/home/public /home/nfs/public
```

(192.168.3.100 is the IP address of the NFS server in this example.)

SNMP (Simple Network Management Protocol)

The MC-1200 comes with the SNMP v2c (Simple Network Management Protocol) software package. The `snmpd` service default is disabled. You can enable it by this command.

```
moxa@Moxa:~# sudo systemctl enable snmpd
```

The `snmpd` configuration file is located at `/etc/snmp/snmpd.conf`. All network interfaces (LAN ports) can be configured with a `snmpd` listening address and port number.

```
# /etc/snmp/snmpd.conf
# ...
# Listen for connections from the local system only
# agentAddress udp:127.0.0.1:161
# Listen for connections on all interfaces (both IPv4 *and* IPv6)
# For security concern, we comment out this line. If you want to support SNMP on
all Ethernet Interfaces, please remove the '#' and restart the snmpd service.
# agentAddress udp:161,udp6:[::]:161
```

Then restart the `snmpd` service.

```
moxa@moxa:~# sudo systemctl restart snmpd
```

The following example shows an SNMP agent responding to a query from the SNMP browser on the host site:

```
iso.3.6.1.2.1.1.1.0 = STRING: "Linux Moxa 4.6.0-0.bpo.1-amd64 #1 SMP Debian
4.6.4-1~bpo8+1 (2016-08-11) x86_64"
iso.3.6.1.2.1.1.2.0 = OID: iso.3.6.1.4.1.8691.12.720
iso.3.6.1.2.1.1.3.0 = Timeticks: (163) 0:00:01.63
iso.3.6.1.2.1.1.4.0 = STRING: "Moxa Inc., Embedded Computing Business.
<www.moxa.com>"
iso.3.6.1.2.1.1.5.0 = STRING: "Moxa"
iso.3.6.1.2.1.1.6.0 = STRING: "F1.4, No.135, Lane 235, Baoquao Rd., Xindian Dist.,
New Taipei City, Taiwan, R.O.C."
iso.3.6.1.2.1.1.7.0 = INTEGER: 72
iso.3.6.1.2.1.1.8.0 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.2.1 = OID: iso.3.6.1.6.3.11.3.1.1
iso.3.6.1.2.1.1.9.1.2.2 = OID: iso.3.6.1.6.3.15.2.1.1
iso.3.6.1.2.1.1.9.1.2.3 = OID: iso.3.6.1.6.3.10.3.1.1
iso.3.6.1.2.1.1.9.1.2.4 = OID: iso.3.6.1.6.3.1
iso.3.6.1.2.1.1.9.1.2.5 = OID: iso.3.6.1.2.1.49
iso.3.6.1.2.1.1.9.1.2.6 = OID: iso.3.6.1.2.1.4
iso.3.6.1.2.1.1.9.1.2.7 = OID: iso.3.6.1.2.1.50
iso.3.6.1.2.1.1.9.1.2.8 = OID: iso.3.6.1.6.3.16.2.2.1
iso.3.6.1.2.1.1.9.1.2.9 = OID: iso.3.6.1.6.3.13.3.1.3
iso.3.6.1.2.1.1.9.1.2.10 = OID: iso.3.6.1.2.1.92
iso.3.6.1.2.1.1.9.1.3.1 = STRING: "The MIB for Message Processing and Dispatching."
iso.3.6.1.2.1.1.9.1.3.2 = STRING: "The management information definitions for the
SNMP User-based Security Model."
iso.3.6.1.2.1.1.9.1.3.3 = STRING: "The SNMP Management Architecture MIB."
iso.3.6.1.2.1.1.9.1.3.4 = STRING: "The MIB module for SNMPv2 entities"
iso.3.6.1.2.1.1.9.1.3.5 = STRING: "The MIB module for managing TCP implementations"
iso.3.6.1.2.1.1.9.1.3.6 = STRING: "The MIB module for managing IP and ICMP
implementations"
iso.3.6.1.2.1.1.9.1.3.7 = STRING: "The MIB module for managing UDP implementations"
iso.3.6.1.2.1.1.9.1.3.8 = STRING: "View-based Access Control Model for SNMP."
iso.3.6.1.2.1.1.9.1.3.9 = STRING: "The MIB modules for managing SNMP Notification,
plus filtering."
iso.3.6.1.2.1.1.9.1.3.10 = STRING: "The MIB module for logging SNMP Notifications."
iso.3.6.1.2.1.1.9.1.4.1 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.2 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.3 = Timeticks: (4) 0:00:00.04
```



```
iso.3.6.1.2.1.1.9.1.4.4 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.5 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.6 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.7 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.8 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.9 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.1.9.1.4.10 = Timeticks: (4) 0:00:00.04
iso.3.6.1.2.1.25.1.1.0 = Timeticks: (55237) 0:09:12.37
iso.3.6.1.2.1.25.1.2.0 = Hex-STRING: 07 E0 09 13 03 0B 2F 00 2D 04 00
iso.3.6.1.2.1.25.1.3.0 = INTEGER: 393216
iso.3.6.1.2.1.25.1.4.0 = STRING: "BOOT_IMAGE=/boot/vmlinuz-4.6.0-0.bpo.1-amd64
root=LABEL=root ro initrd=/install/initrd.gz quiet 8250.nr_uarts=2
"
iso.3.6.1.2.1.25.1.5.0 = Gauge32: 2
iso.3.6.1.2.1.25.1.6.0 = Gauge32: 24
iso.3.6.1.2.1.25.1.7.0 = INTEGER: 0
iso.3.6.1.2.1.25.1.7.0 = No more variables left in this MIB View (It is past the
end of the MIB tree)
...
```

OpenVPN

Installing OpenVPN

OpenVPN is an open-source VPN software. You can install it by this command.

```
moxa@moxa:~$ sudo apt-get install openvpn
```


OpenVPN provides two types of tunnels for users to implement VPNS: **Routed IP Tunnels** and **Bridged Ethernet Tunnels**.

An Ethernet bridge is used to connect different Ethernet networks together. The Ethernets are bundled into one bigger, "logical" Ethernet. Each Ethernet corresponds to one physical interface (or port) that is connected to the bridge.

On each OpenVPN machine, you should carry out configurations in the **/etc/openvpn** directory, where script files and key files reside. Once established, all operations will be performed in that directory.

Ethernet Bridging for Private Networks on Different Subnets

1. Set up four machines, as shown in the following diagram:

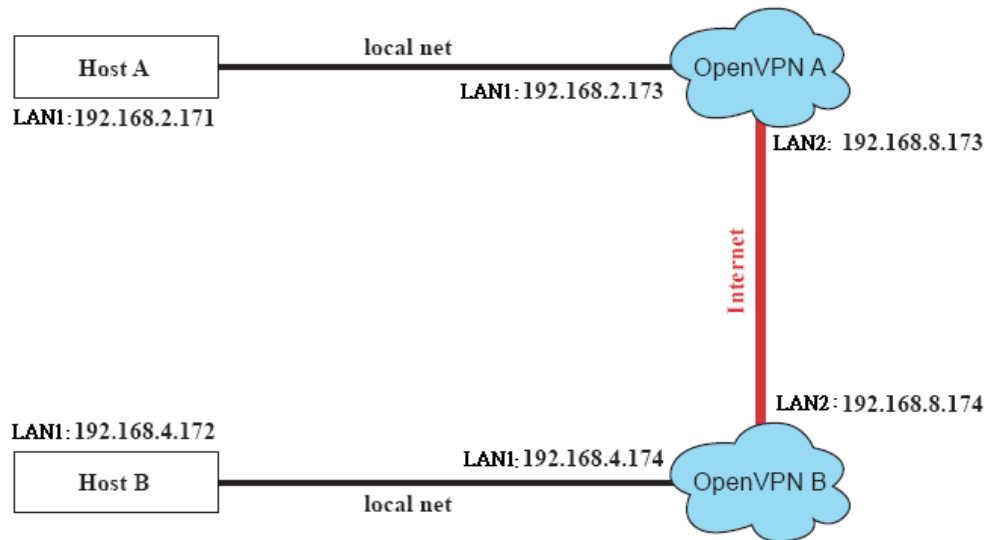

Host A represents the machine that belongs to OpenVPN A, and Host B represents the machine that belongs to OpenVPN B.

The two remote subnets are configured for a different range of IP addresses. When this configuration is moved to a public network, the external interfaces of the OpenVPN machines should be configured for static IPs, or connected to another device (such as a firewall or DSL box) first.

2. Generate a preset shared key by typing the following command:


```
# openvpn --genkey --secret secrouter.key
```
3. Copy the file that is generated to the OpenVPN machine:


```
# scp /etc/openvpn/secrouter.key 192.168.8.174:/etc/openvpn
```



ATTENTION

A pre-shared key is located at **/etc/openvpn/secrouter.key**. You can use it for testing purposes. We suggest creating a new key for non-testing purposes.

4. On machine OpenVPN A, modify the remote address in configuration file **/etc/openvpn/tap0-br.conf**.

```
# point to the peer
remote 192.168.8.174
dev tap0
port 1194
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/tap0-br.sh
#comp-lzo
```

5. Modify the routing table in **/etc/openvpn/tap0-br.sh script**.

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.4.0 netmask 255.255.255.0 dev br0
#-----end-----
```

6. Configure the bridge interface in **/etc/openvpn/bridge**.

```
#!/bin/bash
# Create global variables
# Define Bridge Interface
br="br0"
# Define list of TAP interfaces to be bridged,
# for example tap="tap0 tap1 tap2".
tap="tap0"
# Define physical ethernet interface to be bridged
# with TAP interface(s) above.
eth="eth1"
eth_ip="192.168.8.173"
eth_netmask="255.255.255.0"
eth_broadcast="192.168.8.255"
#gw="192.168.8.174"
...

```

7. Start the bridge script file to configure the bridge interface:
/etc/openvpn/bridge restart
8. On machine OpenVPN B, modify the remote address in configuration file **/etc/openvpn/tap0-br.conf**.

```
# point to the peer
remote 192.168.8.173
dev tap0
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
up /etc/openvpn/tap0-br.sh
#comp-lzo
```

9. Modify the routing table in **/etc/openvpn/tap0-br.sh script** file.

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 dev br0
#----- end -----
```

10. Then configure the bridge interface in **/etc/openvpn/bridge**.

```
#!/bin/bash
# Create global variables
# Define Bridge Interface
br="br0"
# Define list of TAP interfaces to be bridged,
# for example tap="tap0 tap1 tap2".
```

```
tap="tap0"
# Define physical ethernet interface to be bridged
# with TAP interface(s) above.
eth="eth1"
eth_ip="192.168.8.174"
eth_netmask="255.255.255.0"
eth_broadcast="192.168.8.255"
#gw="192.168.8.173"
...
```

11. Start the bridge script file to configure the bridge interface.

```
# /etc/openvpn/bridge restart
```



ATTENTION

Select cipher and authentication algorithms by specifying cipher and auth. To see which algorithms are available, type:

```
# openvpn --show-ciphers
# openvpn --show-auths
```

12. Start both OpenVPN peers on machine OpenVPN A and OpenVPN B.

```
# openvpn --config /etc/openvpn/tap0-br.conf&
```

If you see the line **Peer Connection Initiated with 192.168.8.173:5000** on each machine, the connection between OpenVPN machines has been established successfully on UDP port 5000.



ATTENTION

You can create link symbols to start the OpenVPN service at boot time:

```
# ln -sf /etc/init.d/openvpn /etc/rc2.d/S16openvpn
```

To stop the service, you should create these links:

```
# ln -sf /etc/init.d/openvpn /etc/rc0.d/K80openvpn
# ln -sf /etc/init.d/openvpn /etc/rc6.d/K80openvpn
```

13. On each OpenVPN machine, check the routing table by typing the command **# route**

Destination	Gateway	Genmsk	Flags	Metric	Ref Use	Iface
192.168.5.0	0.0.0.0	255.255.255.0	U	0	0 0	eth2
192.168.4.0	0.0.0.0	255.255.255.0	U	0	0 0	br0
192.168.3.0	0.0.0.0	255.255.255.0	U	0	0 0	eth0
192.168.30.0	0.0.0.0	255.255.255.0	U	0	0 0	eth3
192.168.8.0	0.0.0.0	255.255.255.0	U	0	0 0	br0

Interface **eth1** and device **tap0** both connect to the bridging interface, and the virtual device **tun** sits on top of **tap0**. This ensures that all traffic coming to this bridge from internal networks connected to interface **eth1** write to the TAP/TUN device that the OpenVPN program monitors. Once the OpenVPN program detects traffic on the virtual device, it sends the traffic to its peer.

14. To create an indirect connection to Host B from Host A, you need to add the following routing item:

```
# route add -net 192.168.4.0 netmask 255.255.255.0 dev eth0
```

To create an indirect connection to Host A from Host B, you need to add the following routing item:

```
# route add -net 192.168.2.0 netmask 255.255.255.0 dev eth0
```

Now ping Host B from Host A by typing:

```
# ping 192.168.4.174
```


A successful ping indicates that you have created a VPN system that only allows authorized users from one internal network to access users at the remote site. For this system, all data is transmitted by UDP packets on port 5000 between OpenVPN peers.

- To shut down OpenVPN programs, type the command:

```
# killall -TERM openvpn
```

Ethernet Bridging for Private Networks on the Same Subnet

- Set up four machines, as shown in the following diagram:

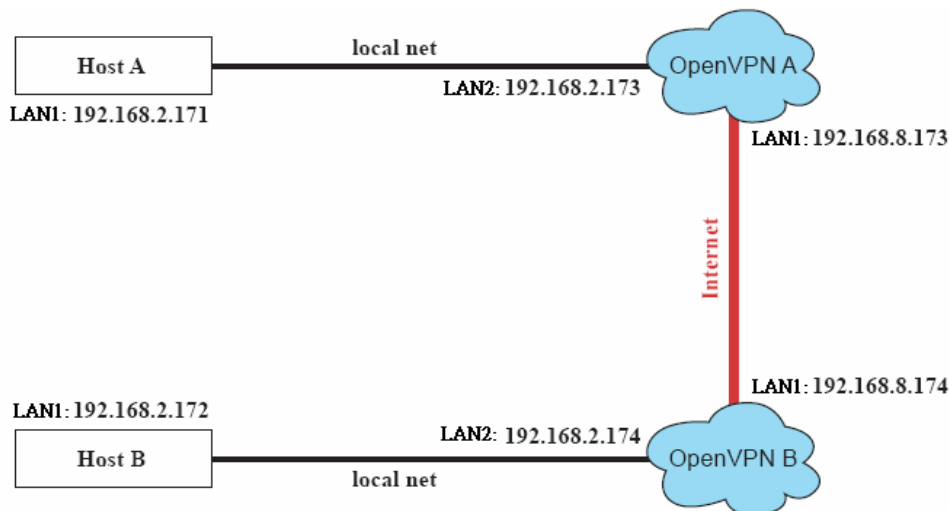


- The configuration procedure is almost the same as for the previous example. The only difference is that you will need to comment out the parameter **up** in **/etc/openvpn/tap0-br.conf** of OpenVPN A and **/etc/openvpn/tap0-br.conf** of OpenVPN B.

```
# point to the peer
remote 192.168.8.174
dev tap0
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
#up /etc/openvpn/tap0-br.sh
#comp-lzo
```

Routed IP

1. Set up four machines, as shown in the following diagram:

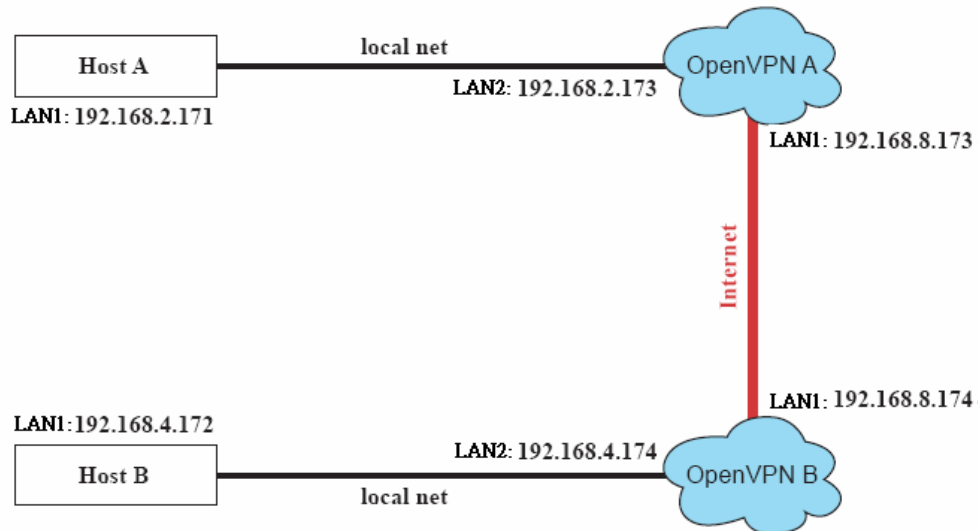

2. On machine OpenVPN A, modify the remote address in configuration file `/etc/openvpn/tun.conf`.

```
# point to the peer
remote 192.168.8.174
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.2.173 192.168.4.174
up /etc/openvpn/tun.sh
-----
```

3. Modify the routing table in script file `/etc/openvpn/tun.sh`.

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 gw $5
#-----end-----
```

4. On machine OpenVPN B, modify the remote address in the configuration file `/etc/openvpn/tun.conf`.

```
# point to the peer
remote 192.168.8.173
dev tun
secret /etc/openvpn/secrouter.key
cipher DES-EDE3-CBC
auth MD5
tun-mtu 1500
tun-mtu-extra 64
ping 40
ifconfig 192.168.4.174 192.168.2.173
up /etc/openvpn/tun.sh
```

5. Modify the routing table in script file `/etc/openvpn/tun.sh`.

```
#-----Start-----
#!/bin/sh
# value after "-net" is the subnet behind the remote peer
route add -net 192.168.2.0 netmask 255.255.255.0 gw $5
#-----end-----
```

The first argument of parameter **ifconfig** is the local internal interface and the second argument is the internal interface at the remote peer.

\$5 is the argument that the OpenVPN program passes to the script file. Its value is the second argument of **ifconfig** in the configuration file.

6. After you run the OpenVPN programs, check the routing table by typing the **# route** command.

```
Destination      Gateway          Genmsk           Flags    Metric  Ref  Use  Iface
192.168.4.174    *                255.255.255.255 UH        0       0   0   tun0
192.168.4.0      192.168.4.174   255.255.255.0   UG        0       0   0   tun0
192.168.2.0      *                255.255.255.0   U         0       0   0   eth1
192.168.8.0      *                255.255.255.0   U         0       0   0   eth0
```

Configuring the Wi-Fi Connection

You can configure the Wi-Fi connection for your MC-1200 computer using a configuration file and the **wpa_supplicant** command.

Configuring WPA2

Moxa's x86-based computers support WPA2 security using the `/sbin/wpa_supplicant` program. Refer to the following table for the configuration options. The **Key required before joining network?** column specifies whether an encryption and/or authentication key must be configured before associating with a network.

Infrastructure mode	Authentication mode	Encryption status	Manual Key required?	IEEE 802.1X enabled?	Key required before joining network?
ESS	Open	None	No	No	No
ESS	Open	WEP	Optional	Optional	Yes
ESS	Shared	None	Yes	No	Yes
ESS	Shared	WEP	Optional	Optional	Yes
ESS	WPA	WEP	No	Yes	No
ESS	WPA	TKIP	No	Yes	No
ESS	WPA2	AES	No	Yes	No
ESS	WPA-PSK	WEP	Yes	Yes	No
ESS	WPA-PSK	TKIP	Yes	Yes	No
ESS	WPA2-PSK	AES	Yes	Yes	No

Configuring the Wireless LAN Using a Configuration File

You can edit the `/etc/wpa_supplicant/wpa_supplicant.conf` file to configure a Wi-Fi connection. The following is an example of the configuration file for an OPEN/WEP/WPA/WPA2 access point.

```
ctrl_interface=/var/run/wpa_supplicant ctrl_interface_group=wheel
update_config=1
### Open system ###
#network={
# ssid="Open"
# key_mgmt=NONE
#}
#####
##### WEP #####
#network={
# ssid="WEP-ssid"
# bssid=XX:XX:XX:XX:XX:XX
# key_mgmt=NONE
# wep_key0=KEY
#}
#####
##### WPA/WPA2 PSK #####
#network={
# ssid="WPA-ssid"
# proto=WPA WPA2 RSN # key_mgmt=WPA-PSK
# pairwise=TKIP CCMP
# group=TKIP CCMP
# psk="KEY"
#}
#####
```

The basic command to connect to a WPA-supPLICANT is as follows:

```
root@Moxa:~# wpa_supplicant -i <interface> -c <configuration file> -B
```

The **-B** option should be included because it forces the supplicant to run in the background.

1. After editing the `wpa_supplicant.conf` file, connect with the following command.

```
root@Moxa:~# wpa_supplicant -i wlan0 -c /etc/wpa_supplicant/wpa_supplicant.conf -B
```

2. Use the `#sudo apt-get install wireless-tools` command to install the Wi-Fi utility.

You can use the `iwconfig` command to check the connection status. The response you receive should be similar to the following:

```
wlan0 IEEE 802.11abgn ESSID:"MOXA_AP"
Mode:Managed Frequency:2.462 GHz Access Point: 00:1F:1F:8C:0F:64
Bit Rate=36 Mb/s Tx-Power=27 dBm
Retry min limit:7 RTS thr:off Fragment thr:off
Encryption key:1234-5678-90 Security mode:open
Power Management:off
Link Quality=37/70 Signal level=-73 dBm
Rx invalidnwid:0 Rx invalid crypt:0 Rx invalid frag:0 Tx excessive retries:0 Invalid
misc:0 Missed beacon:0
```


For more information, refer to https://hostap.epitest.fi/wpa_supplicant/.



WARNING

Moxa strongly advises against using the WEP and WPA encryption standards. Both are now officially deprecated by the Wi-Fi Alliance, and are considered insecure. To guarantee good Wi-Fi encryption and security, use WPA2 with the AES encryption algorithm.

Wi-Fi Management

The MC-1200 Series has a mini-PCIe slot for Wi-Fi module installation. Currently, we support the WPEA252NI module in the Linux system. The wireless module is manageable by `iw`, `wpa_supplicant`, or `hostapd` software package in the system.

`iw`

`iw` is a new nl80211 based CLI configuration utility for wireless devices. It replaces the old tool `iwconfig`, which uses Wireless Extensions interface, is deprecated and recommended to switch to `iw` and `nl80211`.

To get a list of the device capabilities, use:

```
moxa@Moxa:~$ sudo iw list
```

To scan for devices, use:

```
moxa@Moxa:~$ sudo iw dev wlan0 scan
```

To listen to events, use the following command.

```
moxa@Moxa:~$ sudo iw event
```

Establishing a basic connection to an AP that has encryption disabled.

```
moxa@Moxa:~$ sudo iw dev wlan0 connect TARGET_AP_SSID
```

To connect to an AP that uses WEP, use:

```
moxa@Moxa:~$ sudo iw dev wlan0 connect TARGET_AP_SSID key 0:abcde d:1:6061626364
```

To disconnect from the current network, use:

```
moxa@Moxa:~$ sudo iw dev wlan0 disconnect
```

To get the usage information of the `iw` utility, use:

```
moxa@Moxa:~$ sudo iw -help
```

wpa_supplicant

Create `/etc/wpa_supplicant/wpa_supplicant.conf` for connecting to an AP that has encryption disabled.

```
moxa@Moxa:~$ sudo vi /etc/wpa_supplicant/wpa_supplicant.conf

network={

    ssid="MYAPSSID"
    key_mgmt=NONE

}
```

To connect to an AP that uses WEP, use the following:

```
moxa@Moxa:~$ sudo vi /etc/wpa_supplicant/wpa_supplicant.conf

network={

    ssid="MYAPSSID"
    key_mgmt=NONE
    wep_key0=1234567890
    wep_key1="abcde"
    wep_key2="1234567890123"
    wep_tx_keyidx=0
    priority=5

}
```

To connect to an AP that use WPA, use the following:

```
moxa@Moxa:~$ sudo vi /etc/wpa_supplicant/wpa_supplicant.conf

network={

    ssid="MYAPSSID"
    psk="1234567890"

}
```

To manually run the `wpa_supplicant` in daemon mode with the above configuration, use:

```
moxa@Moxa:~$ sudo wpa_supplicant -Dnl80211 -iwlan0 -c
/etc/wpa_supplicant/wpa_supplicant.conf -B
```

You can then check the connection using the `iw` command.

```
moxa@Moxa:~$ sudo iw dev wlan0 link
```

After you have configured the settings in the `/etc/wpa_supplicant/wpa_supplicant.conf` file, edit `/etc/network/interfaces` to use `wpa_supplicant`.

```
moxa@Moxa:~$ sudo vi /etc/network/interfaces

...

auto wlan0
iface wlan0 inet dhcp
    wpa-driver nl80211
    wpa-conf /etc/wpa_supplicant/wpa_supplicant.conf
```

Then you can use the `ifdown wlan0` and `ifup wlan0` commands to check the `wpa_supplicant` configuration file.

Hostapd

The **hostapd** is a user space daemon for access point and authentication server. It is not installed by default on the computer. If you want to support the AP mode in your computer, you must configure the **hostapd** daemon as follows:

1. Install the hostapd package using the following command:

```
moxa@moxa:~$ sudo apt-get install hostapd
```

2. Setup the wlan0 interface to support the AP mode.
3. Edit the **/etc/default/hostapd** file to configure hostapd.
4. Uncomment and set DAEMON_CONF to the absolute path of a hostapd configuration file.

```
moxa@moxa:~$ sudo vi /etc/default/hostapd
...
DAEMON_CONF="/etc/hostapd/hostapd.conf"
```

5. Create the **/etc/hostapd/hostapd.conf** file as follows:

```
moxa@moxa:~$ sudo vi /etc/hostapd/hostapd.conf

# The Wireless interface name
interface=wlan0

# Set the bridge name
bridge=br0

# Set the driver name
driver=nl80211

# Country name code in ISO/IEC 3166-1 format. This is used to set regulator domain.
# This can limit available channels and transmit power
# (IN: INDIA, UK:United Kingdom, US: United States and so on
country_code=US

# Set the SSID
ssid=TestAP

# Set the operation mode
hw_mode=g

# Set the channel number
channel=6

# Set wpa mode to 2
wpa=2

# Set the passphrase
wpa_passphrase=0123456789

# Set key and authentication for WPA2
wpa_key_mgmt=WPA-PSK WPA-EAP

# Set of accepted cipher suites (encryption algorithms) for pairwise keys
```

```
# CCMP = AES in Counter mode with CBC-MAC [RFC 3610, IEEE 802.11i/D7.0]
# TKIP = Temporal Key Integrity Protocol [IEEE 802.11i/D7.0]
wpa_pairwise=TKIP CCMP
# Pairwise cipher for RSN/WPA2 (default: use wpa_pairwise value)
rsn_pairwise=CCMP

# IEEE 802.11 specifies two authentication algorithms.
# bit 0 = Open System Authentication
# bit 1 = Shared Key Authentication (requires WEP)
auth_algs=3

# Station MAC address - accept unless in deny list
macaddr_acl=0
```

6. Test the AP configuration by manually starting the **hostapd** service

```
moxa@moxa:~$ sudo hostapd -d /etc/hostapd/hostapd.conf
```

- or restart using **/etc/init.d/hostapd**

```
moxa@moxa:~$ sudo /etc/init.d/hostapd restart
```

7. Configure **/etc/network/interfaces** to set **br0**, **wlan0** and **eth0**, in bridge mode.

```
moxa@moxa:~$ sudo vi /etc/network/interfaces
...
auto br0
iface br0 inet static
    bridge_ports wlan0 eth0
    address 192.168.8.127
    netmask 255.255.255.0
    network 192.168.8.0
    gateway 192.168.8.254
    dns-nameservers 192.168.8.254
```

8. Restart networking and hostapd services to test the configuration.

```
moxa@moxa:~$ sudo /etc/init.d/networking restart
moxa@moxa:~$ sudo /etc/init.d/hostapd restart
```

NOTE Since the AP is configured in bridge mode, DHCPD is not required on the Wi-Fi AP. It's used DHCPD server located on the LAN. If you don't use the bridge mode, you should install and setup a DHCP server in this system.

For example install the ISC DHCP server.

```
moxa@Moxa:~$ sudo apt-get install isc-dhcp-server
```

Set the isc-dhcp-server default interface in /etc/default/isc-dhcp-server

```
moxa@Moxa:~$ sudo vi /etc/default/isc-dhcp-server
...
INTERFACES="wlan0"
```

Configure the subnet in /etc/dhcp/dhcpd.conf

```
moxa@Moxa:~$ sudo vi /etc/dhcp/dhcpd.conf
...
## Set a domain name for your LAN ##
option domain-name "example.org";
## Set DNS server IP address, you use Google DNS server##
    option domain-name-servers 192.168.3.2, 192.168.3.3;
...
## Set the lease time
default-lease-time 86400;
...
## Uncommented the authoritative directive for misconfigured clients
authoritative;

## Configure your subnet
subnet 192.168.7.0 netmask 255.255.255.0 {
    ## dhcp start and end IP range ##
    range 192.168.7.100 192.168.7.200;
    option subnet-mask 255.255.255.0;
    option broadcast-address 192.168.7.255;
    option routers 192.168.7.254;
}
```

The following topics are covered in this chapter:

- ❑ **Device API**
- ❑ **Real-time Clock (RTC)**
- ❑ **Serial Ports**
 - Changing the Terminal Settings
- ❑ **Watchdog Timer**
 - Introduction
 - The Watchdog Device IOCTL Commands
 - Example

Device API

The MC-1200 supports control devices with the **ioctl** system API. The interface is shown below:

```
int ioctl(int d, int request,...);
Input:
  <d> open device node return file handle
  <request> argument in or out
```

Refer to desktop Linux's man page for detailed documentation:

```
#man ioctl
```

Real-time Clock (RTC)

The device node is located at **/dev/rtc**. The MC-1200 supports standard Linux simple RTC control. You must include **<linux/rtc.h>**.

1. Function: RTC_RD_TIME

```
int ioctl(fd, RTC_RD_TIME, struct rtc_time *time);
Description: read time information from the RTC. It will return the value on
argument 3.
```

2. Function: RTC_SET_TIME

```
int ioctl(fd, RTC_SET_TIME, struct rtc_time *time);
Description: set RTC time. Argument 3 will be passed to RTC.
```

Serial Ports

The serial ports support RS-232, RS-422, and RS-485 2-wire operation modes with flexible baudrate settings. The default operation mode is set to RS-422; use the **mx-uart-ctl** command to change the operation mode.

Usage: **mx-uart-ctl -p <#port_number> -m <#uart_mode>**

Port number: n = 0,1,2,...

uart mode: As in the following table

Interface-no	Operation Mode
None	Display current setting
0	RS-232
1	RS-485 2-wires
2	RS-422 or RS-485 4-wires

For example, to set Port 0 to RS-485 4-wire mode, use the following command:

```
root@moxa:/home/moxa# mx-uart-ctl -p 0
Current uart mode is RS232 interface.
root@moxa:/home/moxa# mx-uart-ctl -p 0 -m 2
Set OK.
```

Changing the Terminal Settings

The `stty` command is used to manipulate the terminal settings. You can view and modify the serial terminal settings with this command. Details are given below.

Displaying All Settings

The following text shows how to display all settings.

```
root@moxa:/home/moxa# sudo stty -a -F /dev/ttyM0
speed 9600 baud; rows 0; columns 0; line = 0;
intr = ^C; quit = ^\; erase = ^?; kill = ^U; eof = ^D; eol = <undef>; eol2 = <undef>;
swtch = <undef>; start = ^Q; stop = ^S; susp = ^Z; rprnt = ^R; werase = ^W;
lnext = ^V; discard = ^O; min = 1; time = 0;
-parenb -parodd -cmspar cs8 hupcl -cstopb cread clocal -crtsets
-ignbrk -brkint -ignpar -parmrk -inpck -istrip -inlcr -igncr icrnl ixon -ixoff
-iuclc -ixany -imaxbel -iutf8
opost -olcuc -ocrnl onlcr -onocr -onlret -ofill -ofdel nl0 cr0 tab0 bs0 vt0 ff0
isig icanon iexten echo echoe echok -echonl -noflsh -xcase -tostop -echoprt echoctl
echoke -flusho -extprocCurrent uart mode is RS422/RS485-4W interface.
```

Configuring Serial Settings

The following example changes the baudrate to 115200.

```
root@moxa:/home/moxa# sudo stty 115200 -F /dev/ttyM0
```

After running this command, the baudrate will be changed to 115200.

```
root@moxa:/home/moxa# sudo stty -a -F /dev/ttyM0
speed 115200 baud; rows 0; columns 0; line = 0;
intr = ^C; quit = ^\; erase = ^?; kill = ^U; eof = ^D; eol = <undef>; eol2 = <undef>;
swtch = <undef>; start = ^Q; stop = ^S; susp = ^Z; rprnt = ^R; werase = ^W;
lnext = ^V; discard = ^O; min = 1; time = 0;
-parenb -parodd -cmspar cs8 hupcl -cstopb cread clocal -crtsets
-ignbrk -brkint -ignpar -parmrk -inpck -istrip -inlcr -igncr icrnl ixon -ixoff
-iuclc -ixany -imaxbel -iutf8
opost -olcuc -ocrnl onlcr -onocr -onlret -ofill -ofdel nl0 cr0 tab0 bs0 vt0 ff0
isig icanon iexten echo echoe echok -echonl -noflsh -xcase -tostop -echoprt echoctl
echoke -flusho -extproc
```

Note Detailed information on the `stty` utility is available at the following link:
<http://www.gnu.org/software/coreutils/manual/coreutils.html>

Watchdog Timer

Introduction

The WDT works like a watchdog function, and can be enabled or disabled. When the WDT function is enabled and the application does not acknowledge it, the system will reboot. The watchdog driver is load with default timeout 60 seconds. The watchdog application should acknowledge in 60 seconds.

The Watchdog Device IOCTL Commands

IOCTL	WDIIOC_GETSUPPORT
Description	This returns the support of the card itself
Input	None
Output	(struct watchdog_info *) arg
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_GETSTATUS
Description	This returns the status of the card
Input	None
Output	(int *)arg
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_GETBOOTSTATUS
Description	This returns the status of the card that was reported at bootup.
Input	None
Output	(int *)arg)
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_SETOPTIONS
Description	This lets you set the options of the card. You can either enable or disable the card this way.
Input	None
Output	(int *)arg)
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_KEEPLIVE
Description	This pings the card to tell it not to reset your computer.
Input	None
Output	None
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_SETTIMEOUT
Description	Set the watchdog timeout
Input	arg: 2 ~ 255 seconds
Output	None
Return	On success, return 0. Otherwise, return < 0 value.
IOCTL	WDIIOC_GETTIMEOUT
Description	Get the current watchdog timeout.
Input	None
Output	arg: 2 ~ 255 seconds
Return	On success, return 0. Otherwise, return < 0 value.

Example

The example file **watchdog-simple.c** acks the watchdog every 10 seconds.

```
#include <stdio.h>
#include <stdlib.h>
#include <unistd.h>
#include <fcntl.h>

int main(void)
{
    int fd = open("/dev/watchdog", O_WRONLY);
    int ret = 0;
    if (fd == -1) {
        perror("watchdog");
        exit(EXIT_FAILURE);
    }
    while (1) {
        ret = write(fd, "\0", 1);
        if (ret != 1) {
            ret = -1;
            break;
        }
        sleep(10);
    }
    close(fd);
    return ret;
}
```

System Restore

The MC-1200 is installed with the Embedded Linux operating system, which is located in the CFast card shipped with the MC-1200-LX computer. Although it rarely happens, you may find on occasion that operating system files and/or the disk file system have been damaged. In this chapter we describe how to restore the Linux operating system.

The following topics are covered in this chapter:

- ❑ **Recovery Environment**
- ❑ **Recovery Procedure**

Restore Environment

The restore environment includes the MC-1200 embedded computer and a bootable USB disk with the restore programs and system image file.

Hardware

The hardware used includes a PC, a MC-1200 computer and a USB disk with the restore programs. **(Note: The USB disk should be at least 2GB.)**




Restore Procedure

Step 1: Prepare Your USB Drive

Windows Users

Execute **tuxboot** from the **utility_tools/tuxboot/Windows** folder on the Software CD, select **Pre Download**, and then click "...".

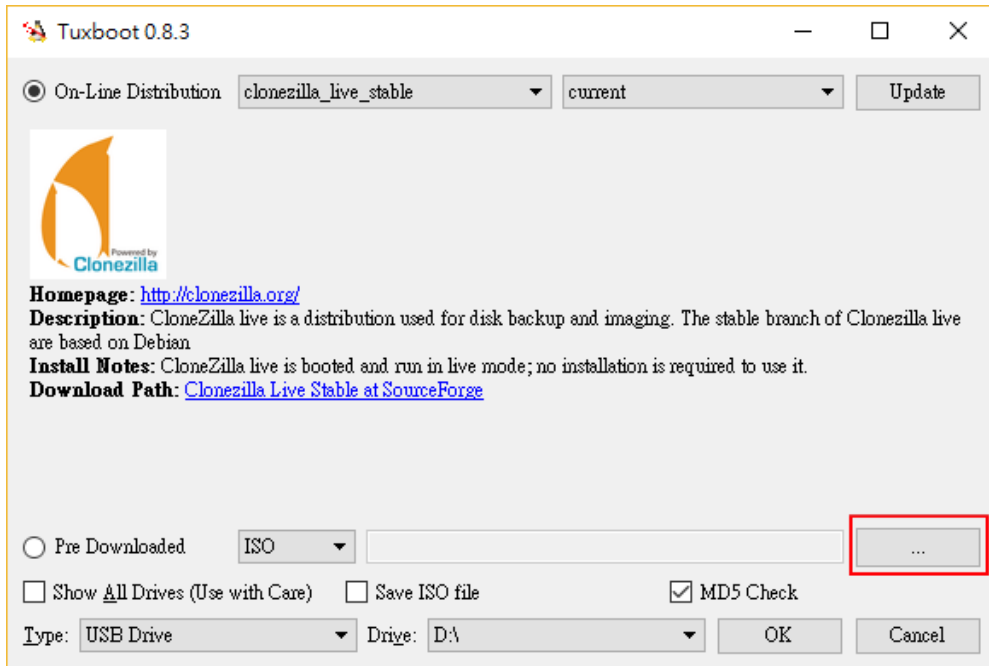


Debian Linux Users

1. Install the libqt4-dev package in Debian.


```
$ apt-get install libqt4-dev
```
2. Untar the source file:

```
$ tar -xzf tuxboot-0.8.src.tar.gz  
$ cd tuxboot-0.8
```
3. Run the following commands to build **tuxboot**:


```
$ sed -i '/^RESOURCES/d' tuxboot.pro  
$ lupdate-qt4 tuxboot.pro  
$ lrelease-qt4 tuxboot.pro  
$ qmake-qt4 "DEFINES += NOSTATIC" "RESOURCES -= tuxboot.qrc"  
$ make
```
4. Launch the tuxboot in Debian Desktop environment.
5. Select the ISO file in the directory of **<Software DVD> \Restore\Clonezilla_Image**

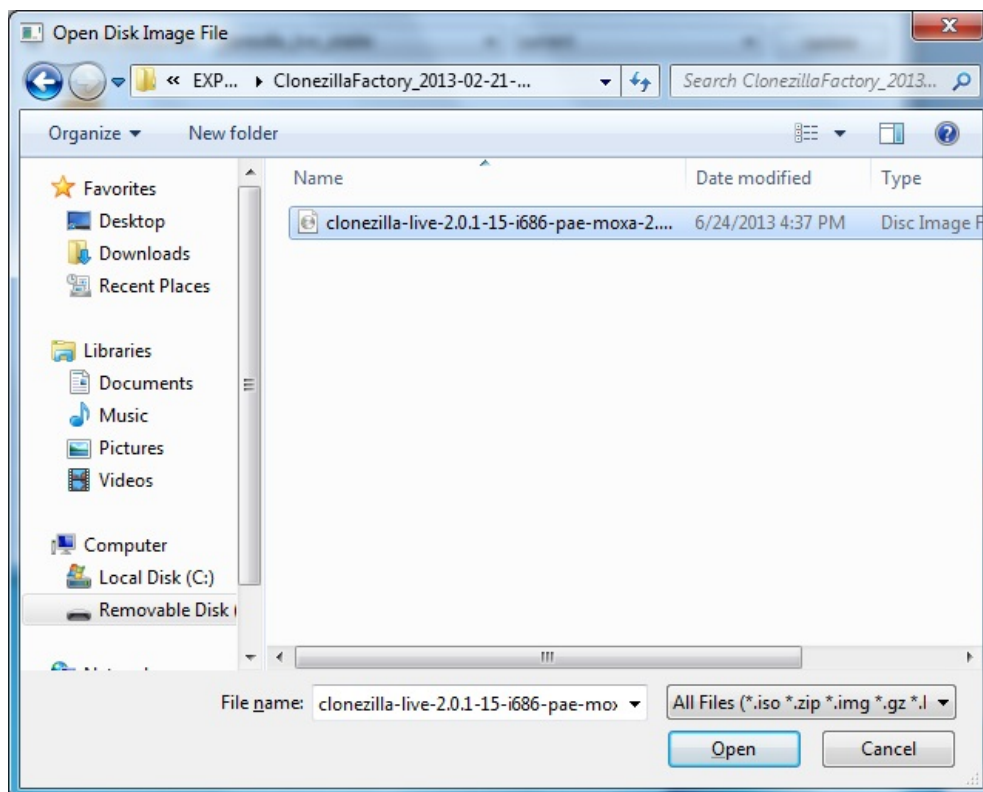


6. Select **USB Drive** type, select a **Drive**, and then click **OK** to continue.

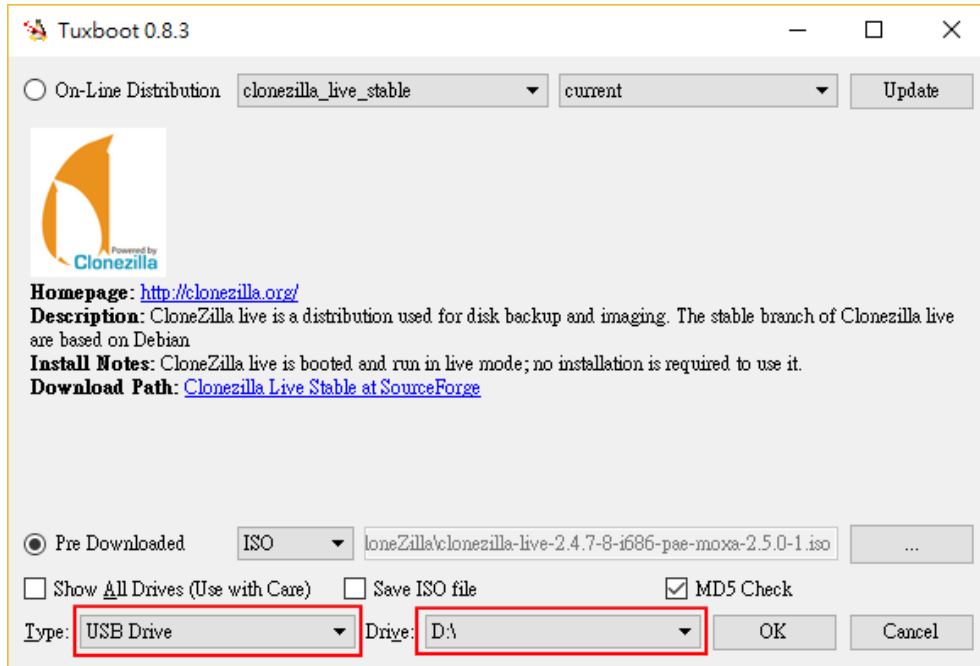

The boot files will be copied to your USB drive.

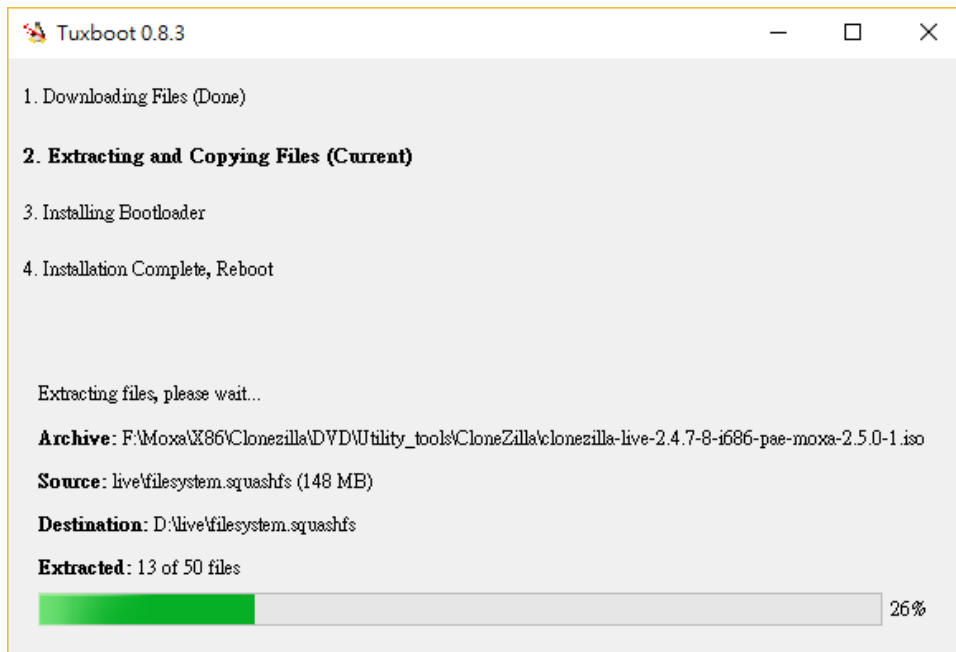

- After all the boot files are copied to the USB drive, click **Exit** to stop the program.

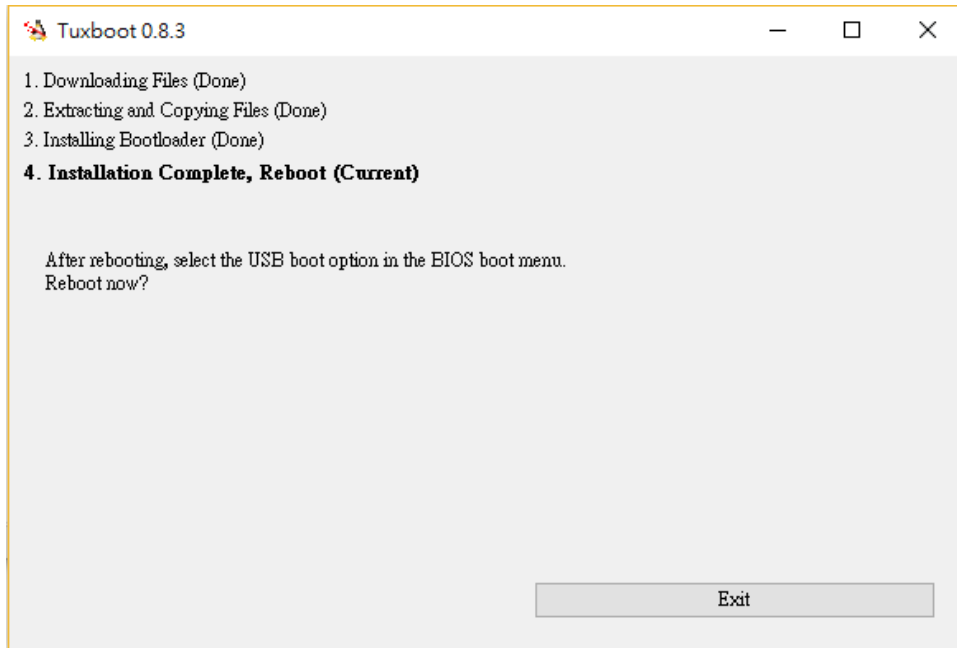


- Manually copy the **os_image** directory from the <Software DVD> \Restore\CloneZilla_Image\ folder on the Software DVD to \home\partimag\ on the USB drive.


Step 2: Change the BIOS Settings

You will need to change the BIOS settings to boot from the USB disk.


- Turn on the computer and press F2. Select Setup Utility in the following screen.

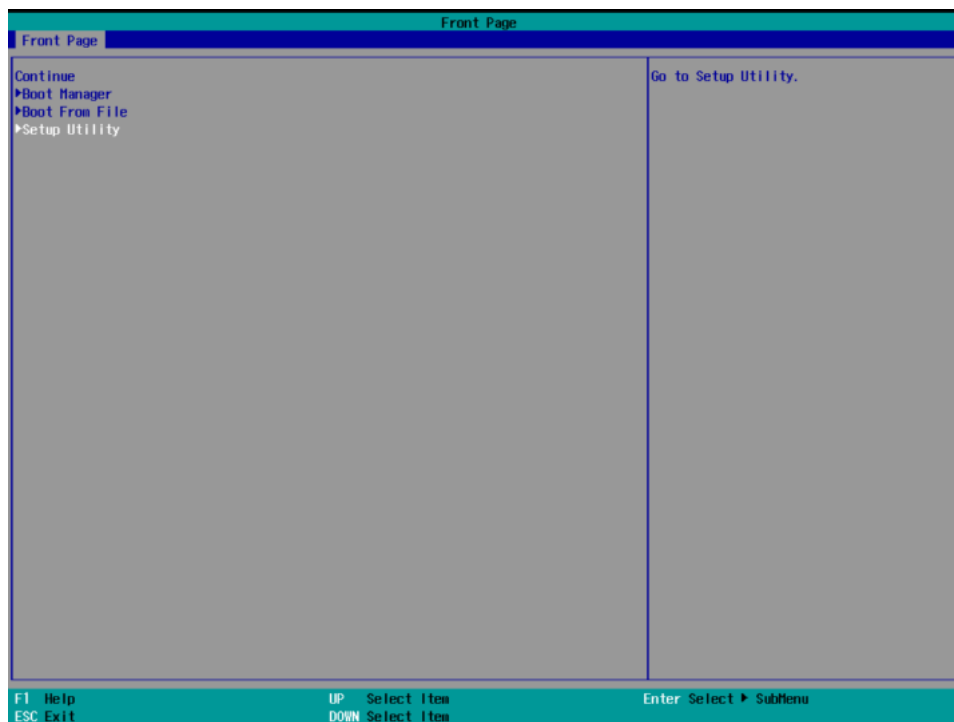

2. Select Boot and then select Legacy. Press **Enter** to continue.

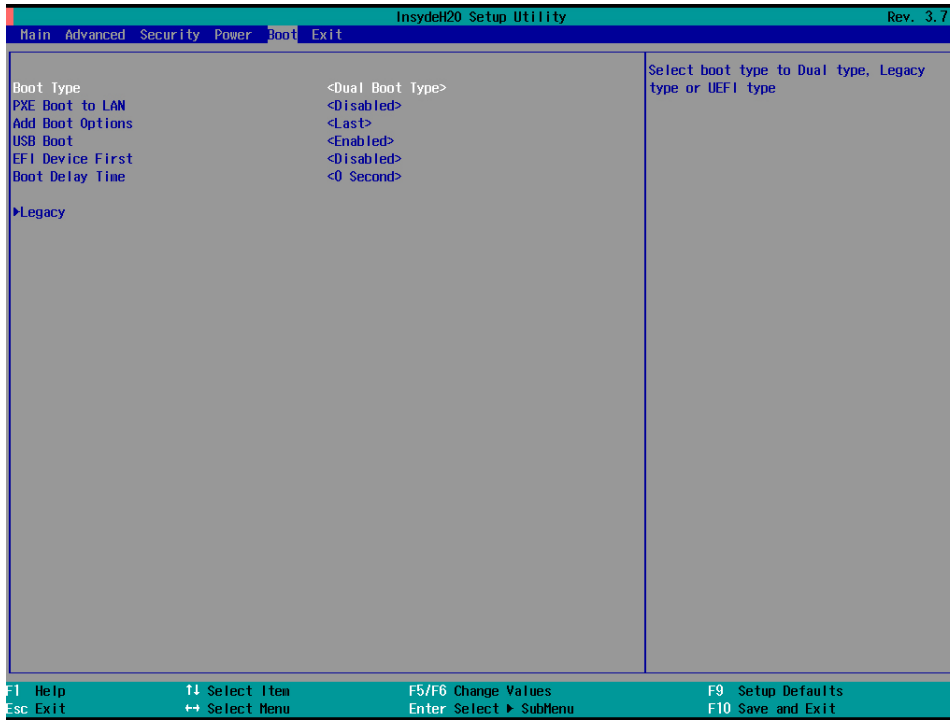


3. Select Boot order.

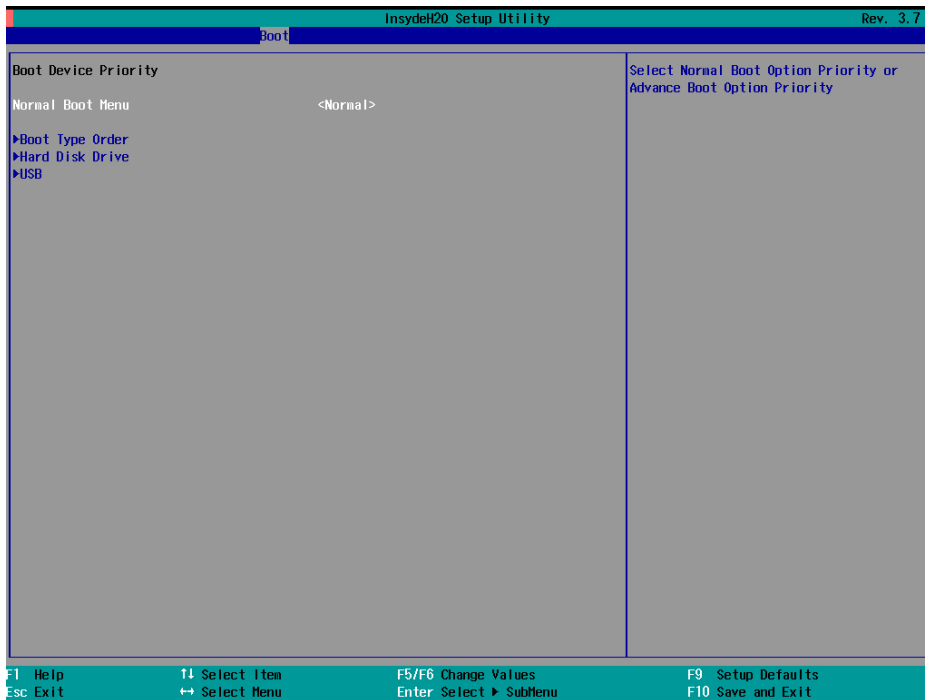

4. Select USB disk and then press “+” to move it to the first boot device position.

Warning: An incorrect boot priority will lead to restore or boot failure.

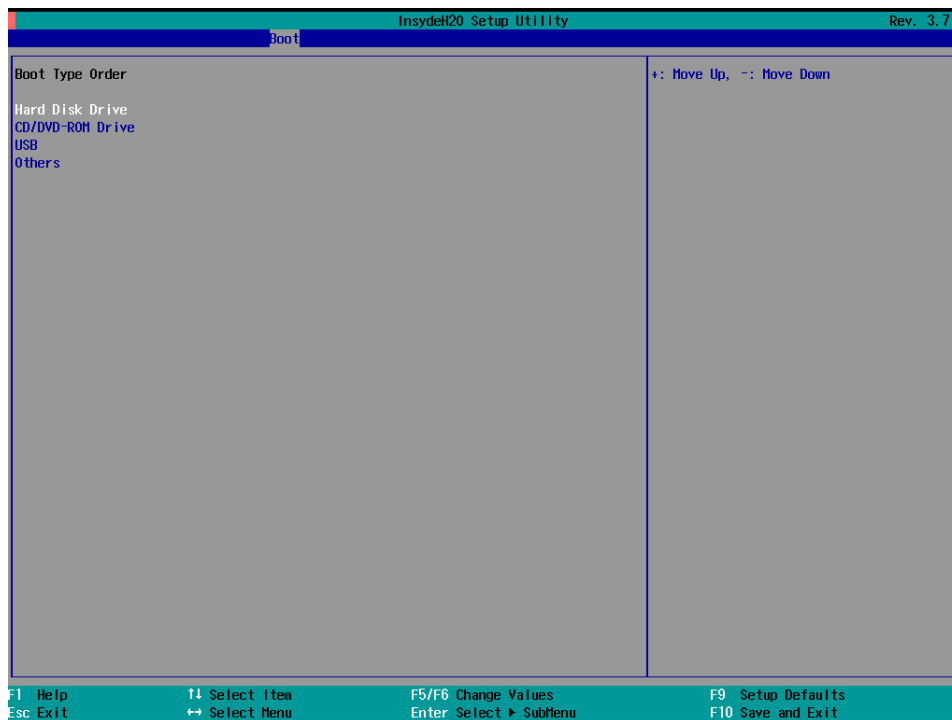


5. Press **F10** and then press **Enter** to save and exit BIOS setup.

Step 3: Restore the system from USB drive

Connect the USB disk to any of the MC-1200's USB ports and then reboot the computer. The system will boot from the USB disk and the Pre-installation Environment and the restore utility will appear.

1. Select clonezilla live restore disk.

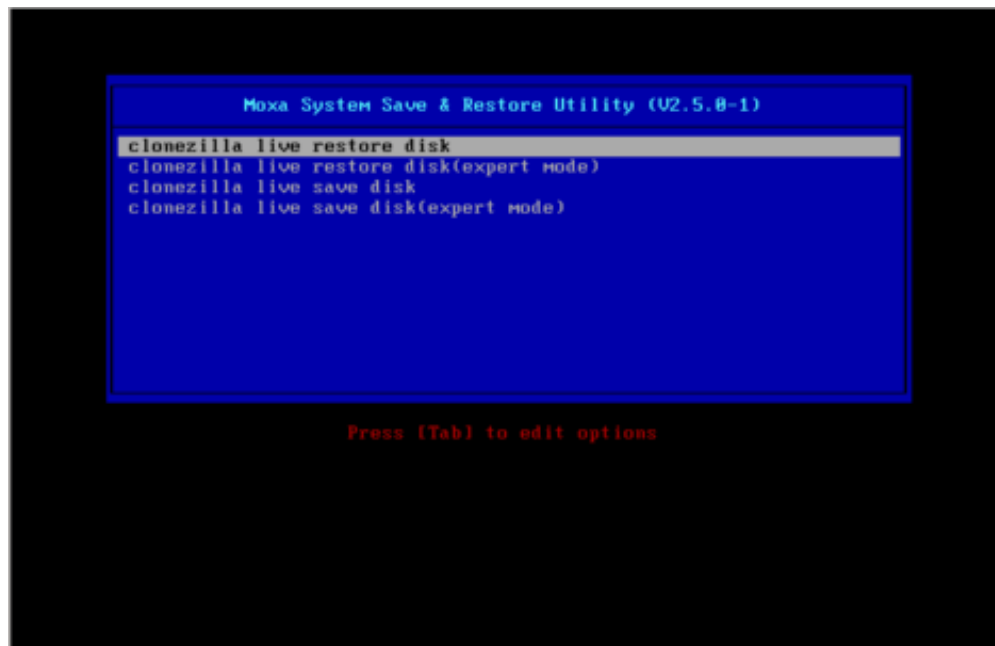

2. Wait for the USB drive boot process to finish.

```

[ 5.153522] sd 0:0:0:0: [sda] Attached SCSI disk
[ 5.163726] sd 0:0:1:0: [sdb] Attached SCSI disk
[ 5.287941] sd 0:0:0:0: Attached scsi generic sg0 type 0
[ 5.310750] sd 0:0:1:0: Attached scsi generic sg1 type 0
[ 5.334915] sr 1:0:0:0: Attached scsi generic sg2 type 5
Begin: Loading essential drivers ... [ 5.690577] Atheros(R) L2 Ethernet Driver - version 2.2.3
[ 5.692430] Copyright (c) 2007 Atheros Corporation.
[ 5.776770] Broadcom NetXtreme II 5771x 10Gigabit Ethernet Driver bnx2x 1.62.00-6 (2011/01/30)
[ 5.914014] Btrfs loaded
[ 5.955475] device-mapper: uevent: version 1.0.3
[ 5.961407] device-mapper: ioctl: 4.19.1-ioctl (2011-01-07) initialised: dm-devel@redhat.com
done.
Begin: Running /scripts/init-premount ... done.
Begin: Mounting root file system ... [ 6.178946] Uniform Multi-Platform E-IDE driver
[ 6.186189] ide_generic: please use "probe_mask=0x3f" module parameter for probing all legacy ISA
IDE ports
[ 6.913744] FAT: utf8 is not a recommended IO charset for FAT filesystems, filesystem will be cas
e sensitive!
[ 7.047997] aufs: module is from the staging directory, the quality is unknown, you have been war
ned.
[ 7.072516] aufs 2.1-standalone.tree-38-rcN-20110228
Begin: Running /scripts/live-premount ... done.
[ 7.213433] loop: module loaded
[ 7.509770] squashfs: version 4.0 (2009/01/31) Phillip Lougher
Begin: Running /scripts/live-realpremount ... done.
Begin: Mounting "/live/image/live/filesystem.squashfs" on "//filesystem.squashfs" via "/dev/loop0" .
.. done.
done.
Begin: Running /scripts/live-bottom
... Begin: Configuring fstab ... done.
Begin: Preconfiguring networking ... done.
Begin: Loading preseed file ... done.
Begin: Running /scripts/init-bottom ... done.
INIT: version 2.88 booting
Using makefile-style concurrent boot in runlevel S.
live-config: hostname user-setup sudo locales tzdata keyboard-configuration sysvinit sysv-rc initram
fs-tools util-linux login openssh-server_

```


3. Enter y to continue the restore process.

```


Checked successfully.
The image of this partition is restorable: sda2
*****
All the images of partition or LV devices in this image were checked and they are restorable: os_ima
ge
Summary of image checking:
*****
Partition table file for disk was found: sda
MBR file for this disk was found: sda
The image of this partition is restorable: sda1
The image of this partition is restorable: sda2
All the images of partition or LV devices in this image were checked and they are restorable: os_ima
ge
*****
Activating the partition info in /proc... done!
Getting /dev/sda1 info...
Getting /dev/sda2 info...
*****
The following step is to restore an image to the hard disk/partition(s) on this machine: "/home/part
img/os_image" -> "sda sda1 sda2"
The image was created at: 2016-1214-1923
WARNING!!! WARNING!!! WARNING!!!
WARNING. THE EXISTING DATA IN THIS HARDDISK/PARTITION(S) WILL BE OVERWRITTEN! ALL EXISTING DATA WILL
BE LOST:
*****
Machine: VMware Virtual Platform
sda (21.5GB_VMWare_Virtual_S_No_disk_serial_no)
sda1 (128M_ext4(In_VMWare_Virtual_S_No_disk_serial_no)
sda2 (19.9G(In_VMWare_Virtual_S_No_disk_serial_no)
*****
Are you sure you want to continue? (y/n) _

```

4. Wait for the process to finish.

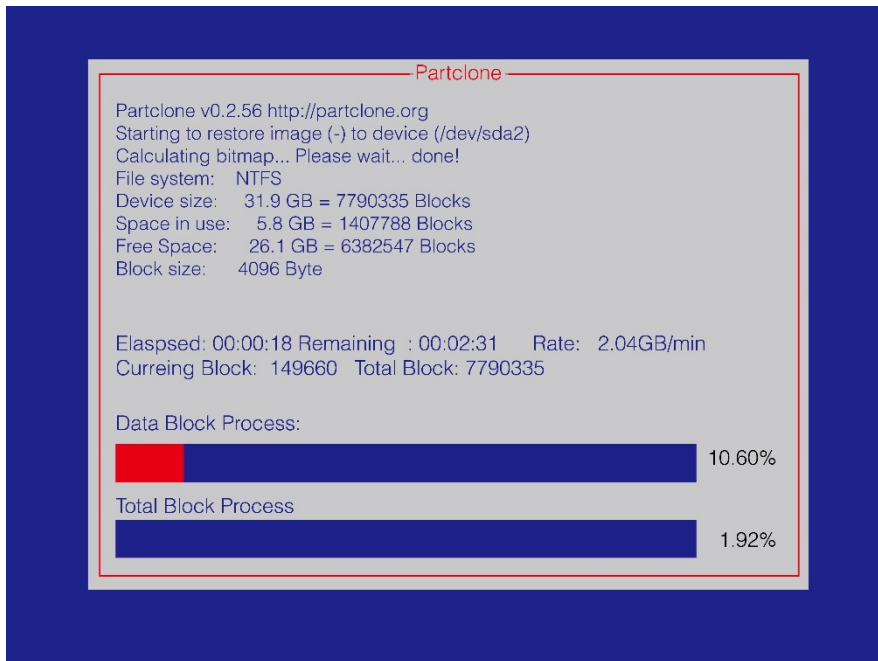

5. Select Poweroff to power off the computer.

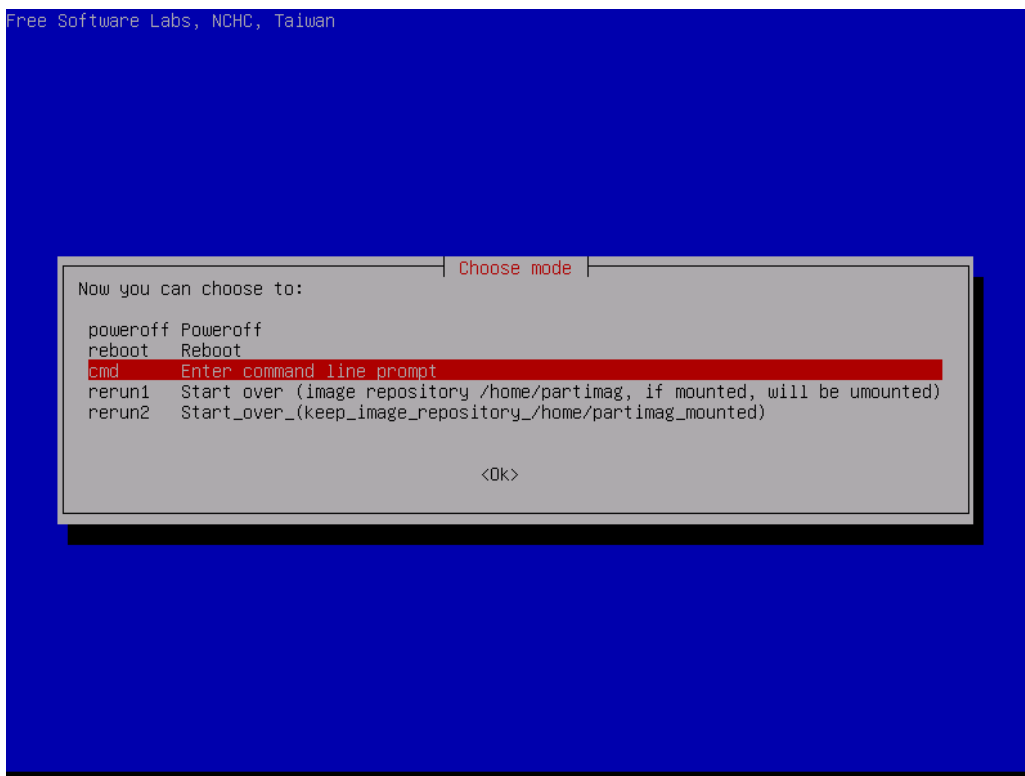


6. Remove the USB drive after the computer has been powered off.

Step 4: Change the BIOS Settings to Boot from the Original Disk

Now you will need to change the boot priority so that it can boot from the original disk. As the system reboots, press **F2** to enter the BIOS setup menu.

1. Select Hard Disk Drive and then press + to move to the first boot device position, and then press Enter. Make sure the hard disk has first boot priority.

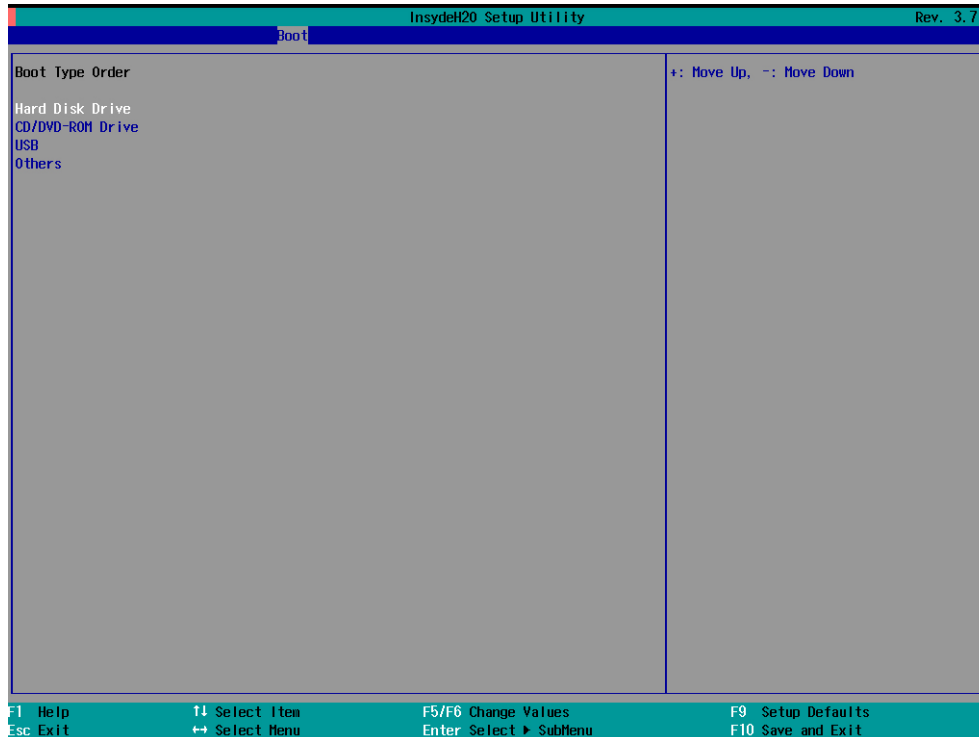

2. Press **F10** and then press **Enter** to save and exit BIOS settings.

Step 5: Reboot the Computer

You need to wait about 10 to 15 minutes for the system to restart, since the system configuration files will be initiated while booting up for the first time. **Do not turn off the computer or shut down the computer** while the system is restarting; otherwise, the IIS service will be terminated. When the operating system has successfully launched, you will need to restart your computer so that the new settings can be activated.

Restore the System from the USB Drive


Step 1: Preparing the USB drive

For Windows Users

Execute **Win32DiskImager installer** from the **utility_tools/** folder on the Software CD. Or you can download it from <https://sourceforge.net/projects/win32diskimager/>

After install processes, execute **Win32DiskImager**, and select the Moxa Live USB image file in the directory of **Restore\moxa_live_image\FWR_<product>_<version>_ReBuild_<date>_live_image.img**

The Moxa Live USB image file **contains corresponding firmware image**.

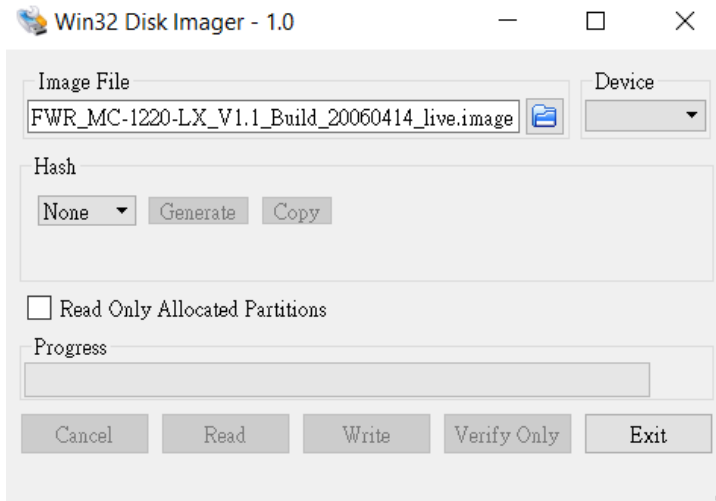

For Debian Linux Users

Copy the ISO file to the directory

Restore\moxa_live_image\FWR_<product>_<version>_Build_<date>_live.img

For example, on MC-1200, copy the file to **/dev/sde** is USB storage device node.

```
root@moxa: /home/moxa# dd if=FWR_MC-1220_<version>_Build_<date>_live.img of=/dev/sde
conv=noerror,sync status=progress bs=40966
```

The standalone Debian firmware image file should be copied to the directory:

Restore\firmware\FWR_<product>_<version>_Build_<date>.img

The compressed firmware image should be:

Restore\firmware\FWR_<product>_<version>_Build_<date>.img.gz


Step 2: Change the BIOS Settings

You will need to change the BIOS settings to boot from the USB disk.


1. Turn on the computer and press **F2**. Select **Setup Utility in the following screen.**



- 2. Select **Boot** and then select UEFI **Boot Type**. Press **Enter** to continue.

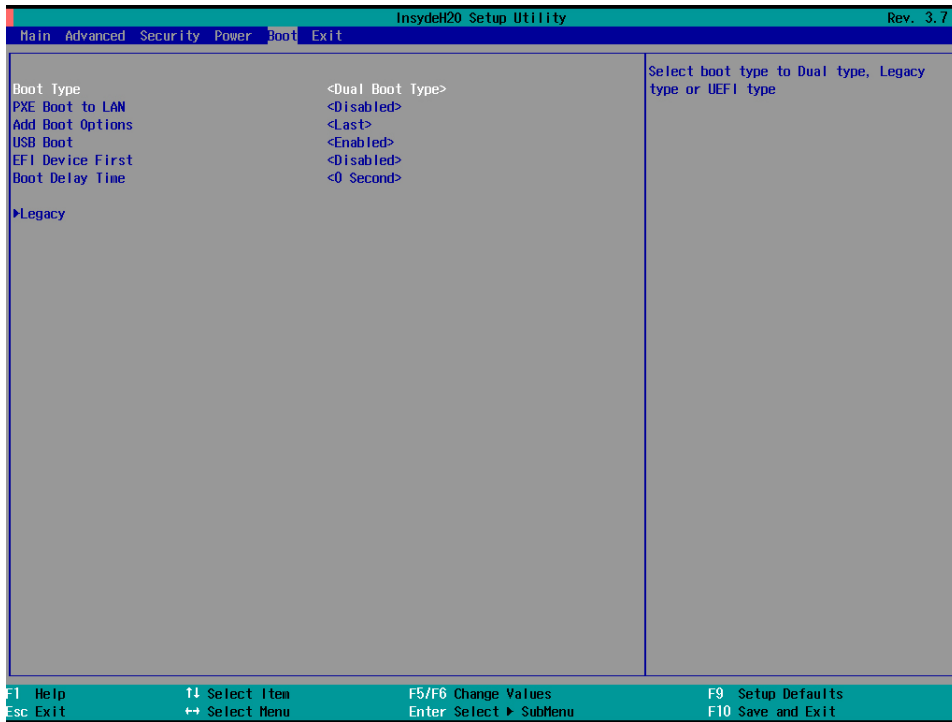


- 3. Select **Boot order**.

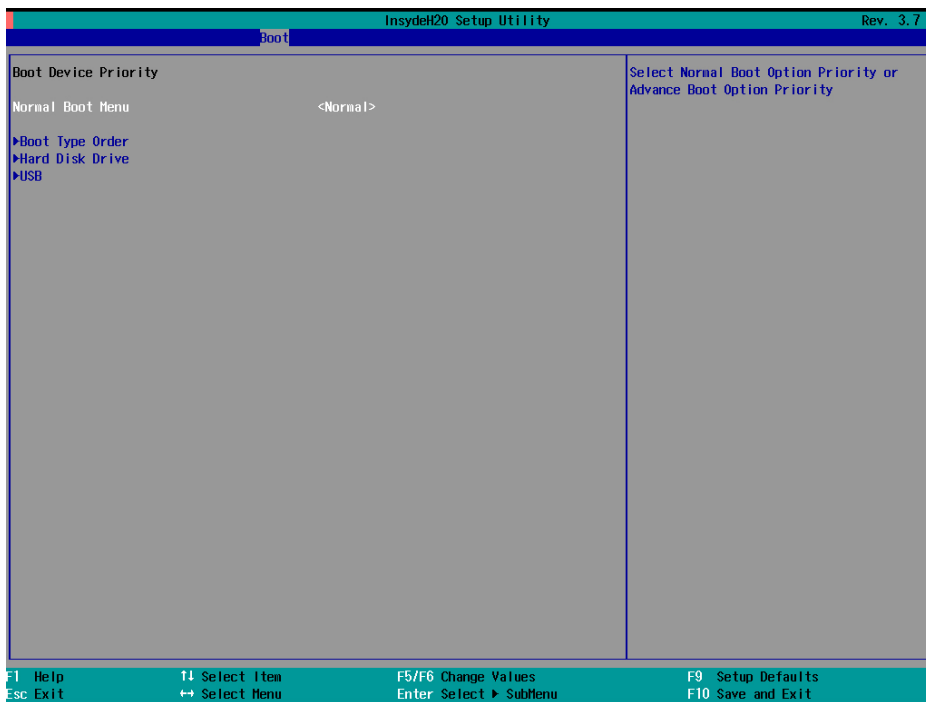

4. Select USB disk and then press “+” to move it to the first boot device position.

Warning: An incorrect boot priority will lead to restore or boot failure.

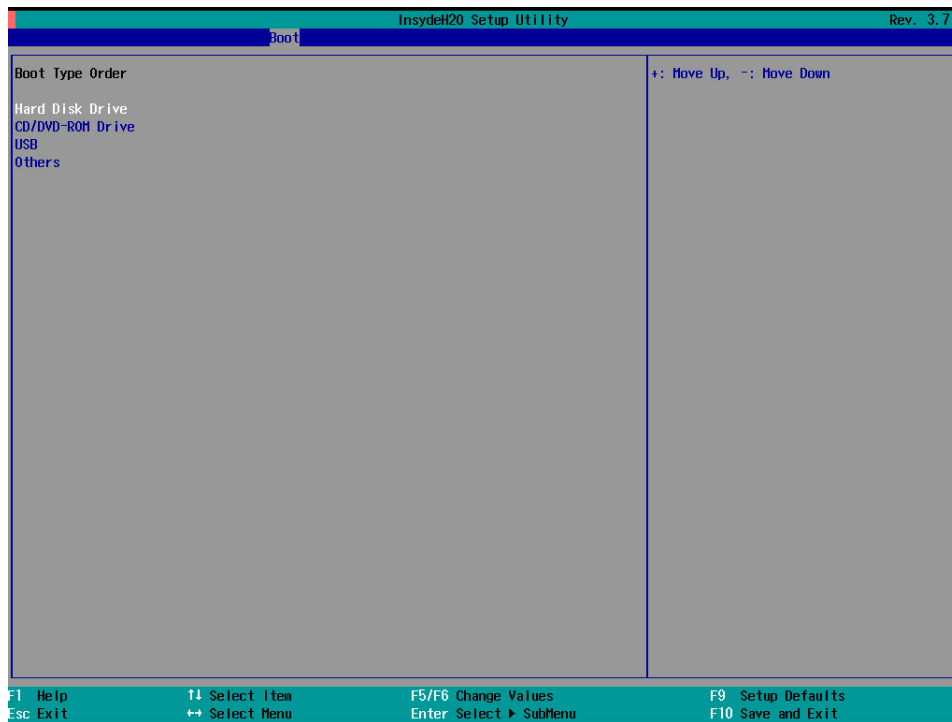

5. Press **F10** and then press **Enter** to save and exit BIOS setup.
6. Insert the USB disk and then reboot the computer.
7. Press F2 to enter the BIOS setting.
8. Select the **Boot Manager**.
9. Select EFI **USB device**.

The system will boot from the restore utility.



Step 3: Restore the system from the USB drive

Connect the USB disk to any of the computer’s USB ports and then reboot the computer. The system will boot from the USB disk and the Pre-installation Environment and the restore utility will appear.

[Default Mode]

Select **Default Mode** to write the image to the mSATA disk.


If you have multiple images or storage disks, we suggest selecting **Advanced Mode**.

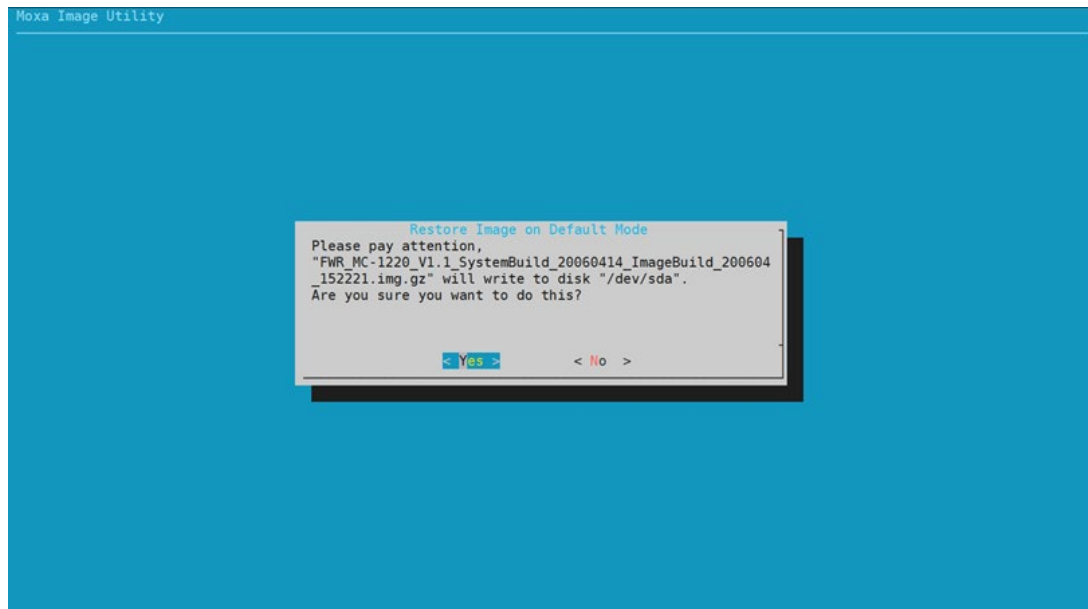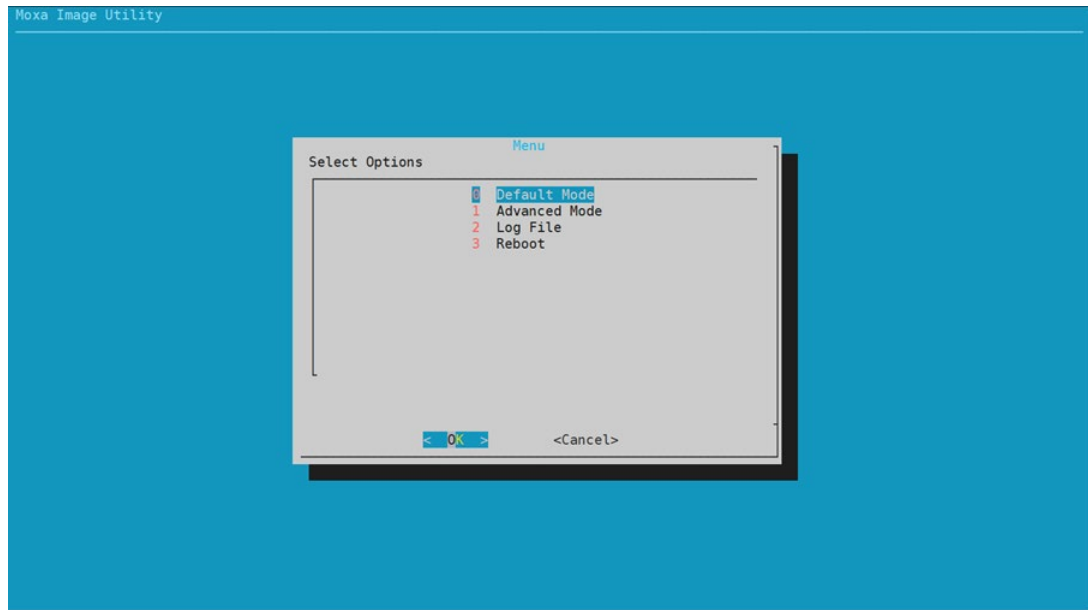


Select **Yes** and wait for the restore image process to complete. After the process is finished, select reboot, remove the USB drive after the computer has been powered off, and go to **Step 4**.

[Advanced Mode]


1. Select **Advanced Mode** if you have multiple images or storage disks.

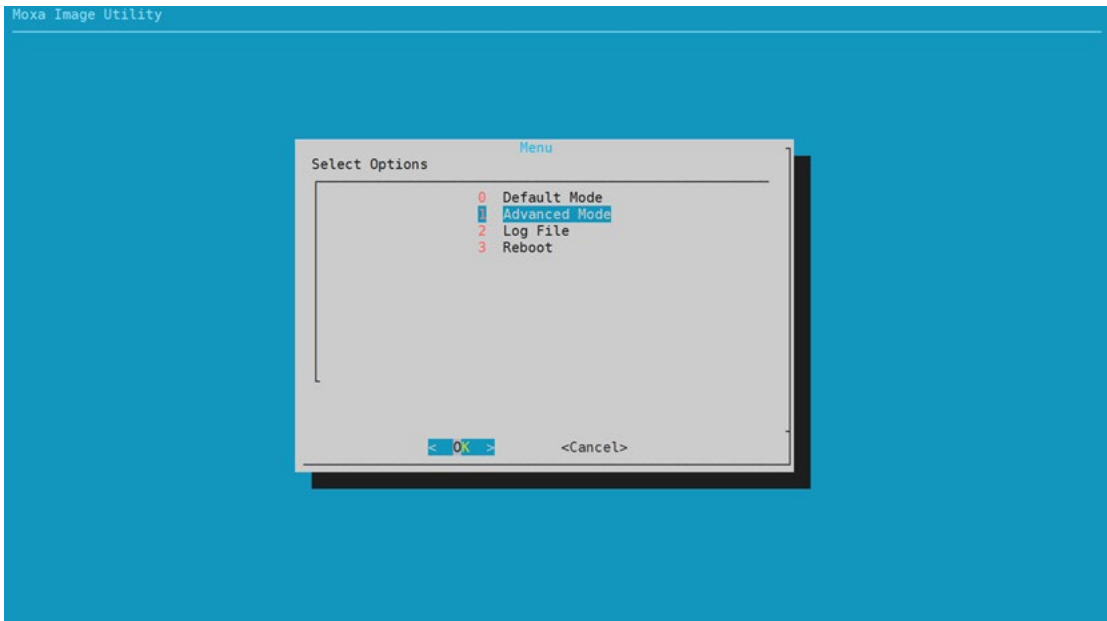


2. Select **Restore Image**.

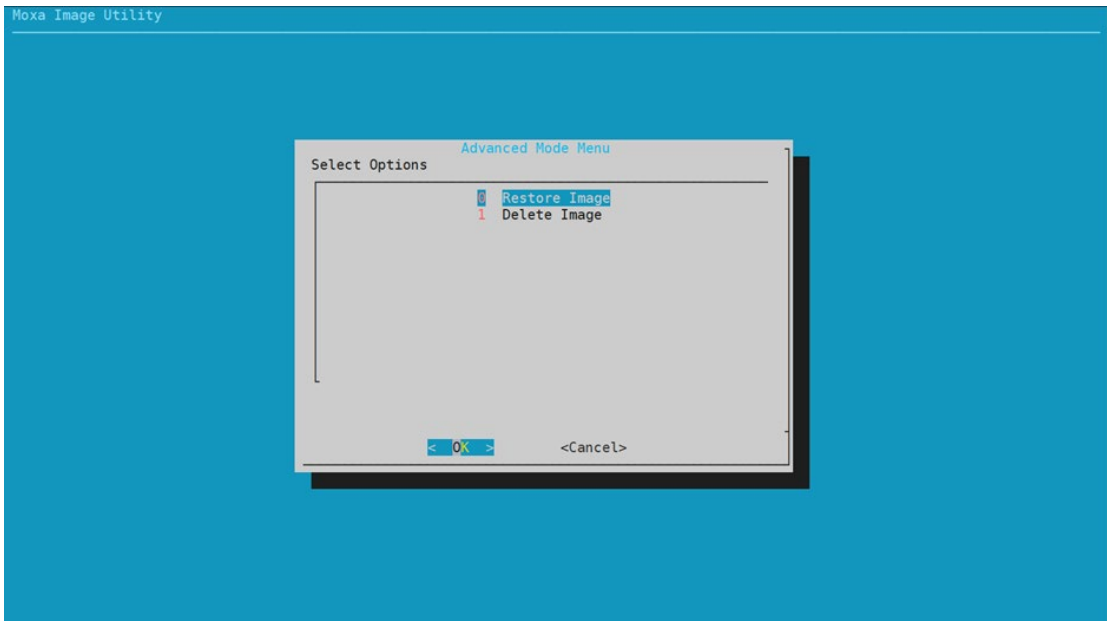

3. Select the target image.

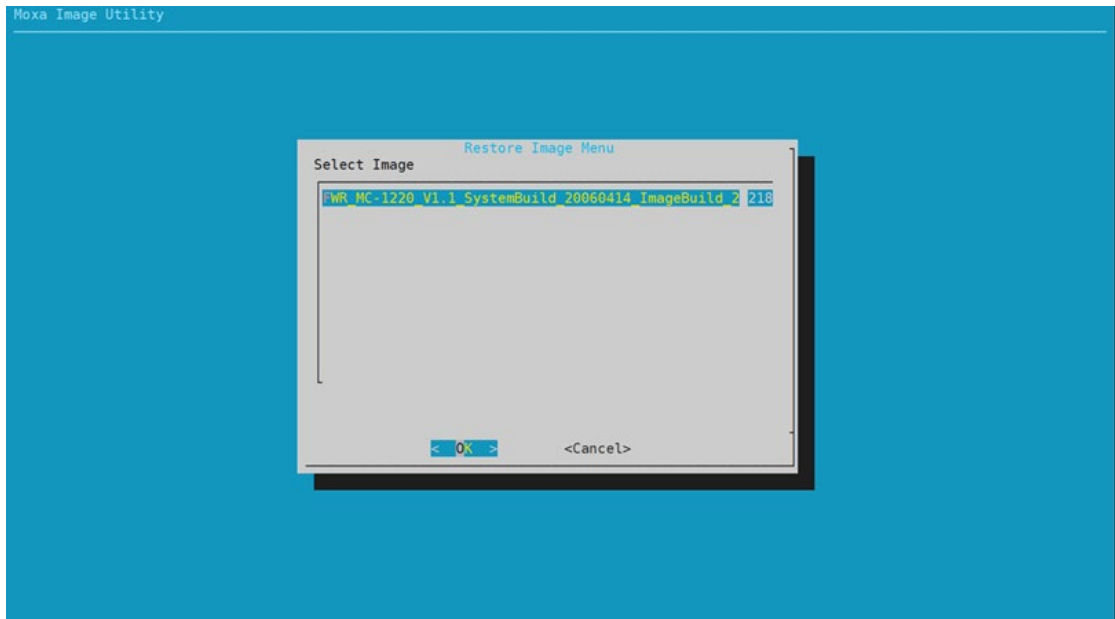


4. Select the target storage disk.

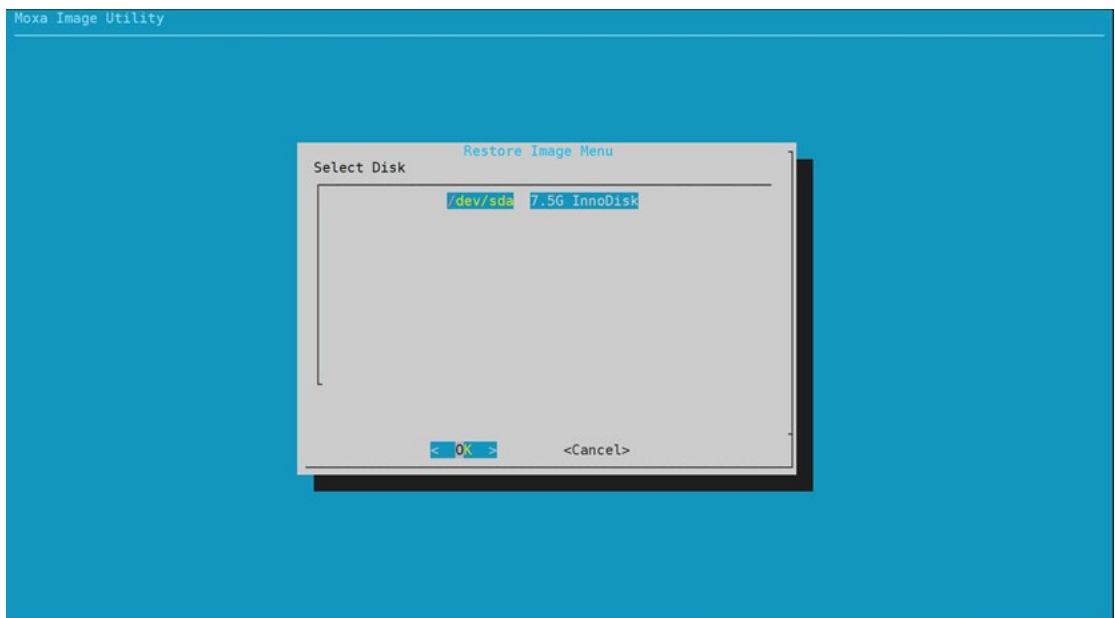

5. Confirm the image restore.

**WARNING**

Selecting Yes in the following screen will erase all partitions on the disk.

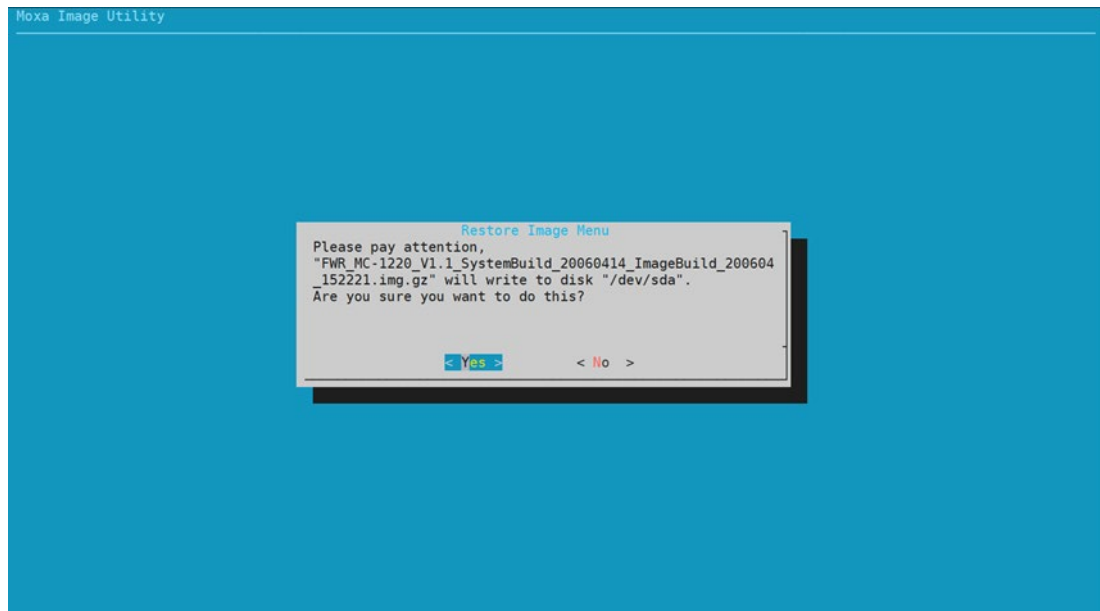


6. Select **Yes** and wait for the restore image process to complete. After the process is finished, select reboot, remove the USB drive after the computer has been powered off, and go to **Step 4**.

Step 4: Change the BIOS Settings to Boot from the Original Disk

Now you will need to change the boot priority so that it can boot from the original disk. As the system reboots, press **F2** to enter the BIOS setup menu.

1. Select **Hard Disk Drive** and then press + to move to the first boot device position, and then press **Enter**. Make sure the hard disk has first boot priority.

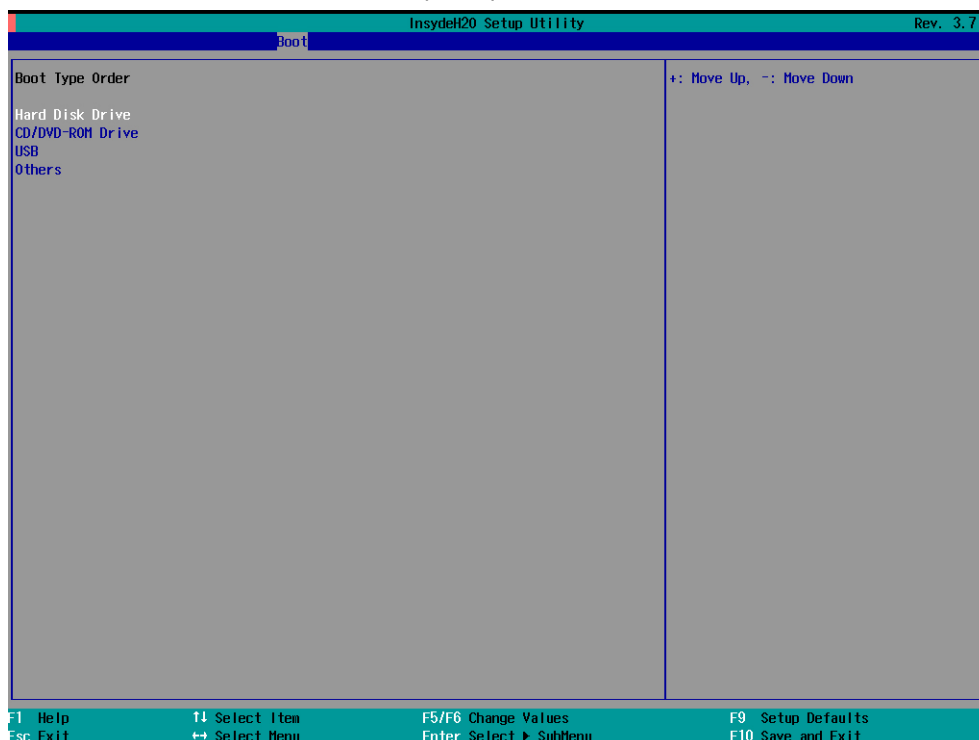

2. Press **F10** and then press **Enter** to save and exit BIOS settings.

Step 5: Reboot the Computer

You need to wait about 10 to 15 minutes for the system to restart, since the system configuration files will be initiated while booting up for the first time. **Do not turn off the computer or shut down the computer** while the system is restarting; otherwise, the IIS service will be terminated. When the operating system has successfully launched, you will need to restart your computer so that the new settings can be activated. Remove the USB drive after the computer has been powered off.

A

Software Components

Name	Version	Description
acl	2.2.52-2	Access control list utilities
acpi	1.7-1	displays information on ACPI devices
acpi-support-base	0.142-6	scripts for handling base ACPI events such as the power button
acpid	1:2.0.23-2	Advanced Configuration and Power Interface event daemon
adduser	3.113+nmu3	add and remove users and groups
anacron	2.3-23	cron-like program that doesn't go by time
apache2	2.4.10-10+deb8u5	Apache HTTP Server
apache2-bin	2.4.10-10+deb8u5	Apache HTTP Server (modules and other binary files)
apache2-data	2.4.10-10+deb8u5	Apache HTTP Server (common files)
apache2-utils	2.4.10-10+deb8u5	Apache HTTP Server (utility programs for web servers)
apt	1.0.9.8.3	Command-line package manager
apt-listchanges	2.85.13+nmu1	package change history notification tool
apt-utils	1.0.9.8.3	package management related utility programs
aptitude	0.6.11-1+b1	terminal-based package manager
aptitude-common	0.6.11-1	architecture independent files for the aptitude package manager
aptitude-doc-en	0.6.11-1	English manual for aptitude, a terminal-based package manager
at	3.1.16-1	Delayed job execution and batch processing
avahi-autoipd	0.6.31-5	Avahi IPv4LL network address configuration daemon
base-files	8+deb8u5	Debian base system miscellaneous files
base-passwd	3.5.37	Debian base system master password and group files
bash	4.3-11+b1	GNU Bourne Again SHell
bash-completion	1:2.1-4	programmable completion for the bash shell
bc	1.06.95-9	GNU bc arbitrary precision calculator language
bind9-host	1:9.9.5.dfsg-9+deb8u6	Version of 'host' bundled with BIND 9.X
binutils	2.25-5	GNU assembler, linker and binary utilities
bluetooth	5.23-2	Bluetooth support
bluez	5.23-2+b1	Bluetooth tools and daemons
bridge-utils	1.5-9	Utilities for configuring the Linux Ethernet bridge
bsd-mailx	8.1.2-0.20141216cvs-2	simple mail user agent
bsdmainutils	9.0.6	collection of more utilities from FreeBSD
bsdutils	1:2.25.2-6	basic utilities from 4.4BSD-Lite

Name	Version	Description
build-essential	11.7	Informational list of build-essential packages
busybox	1:1.22.0-9+deb8u1	Tiny utilities for small and embedded systems
bzip2	1.0.6-7+b3	high-quality block-sorting file compressor - utilities
ca-certificates	20141019+deb8u1	Common CA certificates
console-setup	1.123	console font and keymap setup program
console-setup-linux	1.123	Linux specific part of console-setup
coreutils	8.23-4	GNU core utilities
cpio	2.11+dfsg-4.1+deb8u1	GNU cpio -- a program to manage archives of files
cpp	4:4.9.2-2	GNU C preprocessor (cpp)
cpp-4.9	4.9.2-10	GNU C preprocessor
crda	3.13-1	wireless Central Regulatory Domain Agent
cron	3.0pl1-127+deb8u1	process scheduling daemon
da720-misc	1.0.0	Moxa da720 Led/Relay/On Board Serial Interface device driver
da720-mxser	1.0.0	mxser driver for MC-1200 series
da720-setinterface	1.0.0	utility for mxser
da720-watchdog	1.0.0	Moxa da720 watchdog device driver
dash	0.5.7-4+b1	POSIX-compliant shell
dbus	1.8.20-0+deb8u1	simple inter process messaging system (daemon and utilities)
dc	1.06.95-9	GNU dc arbitrary precision reverse-polish calculator
debconf	1.5.56	Debian configuration management system
debconf-i18n	1.5.56	full internationalization support for debconf
debian-archive-keyring	2014.3	GnuPG archive keys of the Debian archive
debian-faq	5.0.3	Debian Frequently Asked Questions
debianutils	4.4+b1	Miscellaneous utilities specific to Debian
dictionaries-common	1.23.17	spelling dictionaries - common utilities
diffutils	1:3.3-1+b1	File comparison utilities
discover	2.1.2-7	hardware identification system
discover-data	2.2013.01.11	Data lists for Discover hardware detection system
dmidecode	2.12-3	SMBIOS/DMI table decoder
dmsetup	2:1.02.90-2.2+deb8u1	Linux Kernel Device Mapper userspace library
dnsutils	1:9.9.5.dfsg-9+deb8u6	Clients provided with BIND
doc-debian	6.2	Debian Project documentation and other documents
docutils-common	0.12+dfsg-1	text processing system for reStructuredText - common data
docutils-doc	0.12+dfsg-1	text processing system for reStructuredText - documentation
dpkg	1.17.27	Debian package management system
dpkg-dev	1.17.27	Debian package development tools
e2fslibs:amd64	1.42.12-1.1	ext2/ext3/ext4 file system libraries
e2fsprogs	1.42.12-1.1	ext2/ext3/ext4 file system utilities
easy-rsa	2.2.2-1	Simple shell based CA utility
emacsens-common	2.0.8	Common facilities for all emacsens
ethtool	1:3.16-1	display or change Ethernet device settings
fakeroot	1.20.2-1	tool for simulating superuser privileges
file	1:5.22+15-2+deb8u1	Determines file type using "magic" numbers

Name	Version	Description
findutils	4.4.2-9+b1	utilities for finding files--find, xargs
firmware-linux-free	3.3	Binary firmware for various drivers in the Linux kernel
firmware-misc-nonfree	20160110-1~bpo8+1	Binary firmware for various drivers in the Linux kernel
fontconfig	2.11.0-6.3	generic font configuration library - support binaries
fontconfig-config	2.11.0-6.3	generic font configuration library - configuration
fonts-dejavu-core	2.34-1	Vera font family derivate with additional characters
g++	4:4.9.2-2	GNU C++ compiler
g++-4.9	4.9.2-10	GNU C++ compiler
gcc	4:4.9.2-2	GNU C compiler
gcc-4.8-base:amd64	4.8.4-1	GCC, the GNU Compiler Collection (base package)
gcc-4.9	4.9.2-10	GNU C compiler
gcc-4.9-base:amd64	4.9.2-10	GCC, the GNU Compiler Collection (base package)
geoip-database	20150317-1	IP lookup command line tools that use the GeoIP library (country database)
gettext-base	0.19.3-2	GNU Internationalization utilities for the base system
gnupg	1.4.18-7+deb8u1	GNU privacy guard - a free PGP replacement
gnupg-agent	2.0.26-6	GNU privacy guard - password agent
gnupg2	2.0.26-6	GNU privacy guard - a free PGP replacement (new v2.x)
gpgv	1.4.18-7+deb8u1	GNU privacy guard - signature verification tool
grep	2.20-4.1	GNU grep, egrep and fgrep
groff-base	1.22.2-8	GNU troff text-formatting system (base system components)
grub-common	2.02~beta2-22+deb8u1	GRand Unified Bootloader (common files)
grub-pc	2.02~beta2-22+deb8u1	GRand Unified Bootloader, version 2 (PC/BIOS version)
grub-pc-bin	2.02~beta2-22+deb8u1	GRand Unified Bootloader, version 2 (PC/BIOS binaries)
grub2-common	2.02~beta2-22+deb8u1	GRand Unified Bootloader (common files for version 2)
gzip	1.6-4	GNU compression utilities
hdparm	9.43-2	tune hard disk parameters for high performance
hicolor-icon-theme	0.13-1	default fallback theme for FreeDesktop.org icon themes
host	1:9.9.5.dfsg-9+deb8u6	Transitional package
hostname	3.15	utility to set/show the host name or domain name
iamerican	3.3.02-6	American English dictionary for ispell (standard version)
ibritish	3.3.02-6	British English dictionary for ispell (standard version)
ienglish-common	3.3.02-6	Common files for British and American ispell

Name	Version	Description
		dictionaries
ifenslave	2.6	configure network interfaces for parallel routing (bonding)
ifstat	1.1-8+b1	InterFace STATistics Monitoring
ifupdown	0.7.53.1	high level tools to configure network interfaces
info	5.2.0.dfsg.1-6	Standalone GNU Info documentation browser
init	1.22	System-V-like init utilities - metapackage
init-system-helpers	1.22	helper tools for all init systems
initramfs-tools	0.120+deb8u2	generic modular initramfs generator
initscripts	2.88dsf-59	scripts for initializing and shutting down the system
insserv	1.14.0-5	boot sequence organizer using LSB init.d script dependency information
install-info	5.2.0.dfsg.1-6	Manage installed documentation in info format
installation-report	2.58	system installation report
iproute	1:3.16.0-2	transitional dummy package for iproute2
iproute2	3.16.0-2	networking and traffic control tools
ipsec-tools	1:0.8.2+20140711-2+de	IPsec utilities
iptables	1.4.21-2+b1	administration tools for packet filtering and NAT
iputils-ping	3:20121221-5+b2	Tools to test the reachability of network hosts
irqbalance	1.1.0-2~bpo8+1	Daemon to balance interrupts for SMP systems
isc-dhcp-client	4.3.1-6+deb8u2	DHCP client for automatically obtaining an IP address
isc-dhcp-common	4.3.1-6+deb8u2	common files used by all of the isc-dhcp packages
isc-dhcp-server	4.3.1-6+deb8u2	ISC DHCP server for automatic IP address assignment
iso-codes	3.57-1	ISO language, territory, currency, script codes and their translations
ispell	3.3.02-6	International Ispell (an interactive spelling corrector)
iw	3.17-1	tool for configuring Linux wireless devices
kbd	1.15.5-2	Linux console font and keytable utilities
keyboard-configuration	1.123	system-wide keyboard preferences
klibc-utils	2.0.4-2	small utilities built with klibc for early boot
kmod	18-3	tools for managing Linux kernel modules
krb5-locales	1.12.1+dfsg-19+deb8u2	Internationalization support for MIT Kerberos
laptop-detect	0.13.7	attempt to detect a laptop
less	458-3	pager program similar to more
libacl1:amd64	2.2.52-2	Access control list shared library
libalgorithm-c3-perl	0.09-1	Perl module for merging hierarchies using the C3 algorithm
libalgorithm-diff-perl	1.19.02-3	module to find differences between files
libalgorithm-diff-xs-perl	0.04-3+b1	module to find differences between files (XS accelerated)
libalgorithm-merge-perl	0.08-2	Perl module for three-way merge of textual

Name	Version	Description
		data
libapache2-mod-php5	5.6.24+dfsg-0+deb8u1	server-side, HTML-embedded scripting language (Apache 2 module)
libapr1:amd64	1.5.1-3	Apache Portable Runtime Library
libaprutil1:amd64	1.5.4-1	Apache Portable Runtime Utility Library
libaprutil1-dbd-sqlite3:amd64	1.5.4-1	Apache Portable Runtime Utility Library - SQLite3 Driver
libaprutil1-ldap:amd64	1.5.4-1	Apache Portable Runtime Utility Library - LDAP Driver
libapt-inst1.5:amd64	1.0.9.8.3	deb package format runtime library
libapt-pkg4.12:amd64	1.0.9.8.3	package management runtime library
libarchive-extract-perl	0.72-1	generic archive extracting module
libasan1:amd64	4.9.2-10	AddressSanitizer -- a fast memory error detector
libasprintf0c2:amd64	0.19.3-2	GNU library to use fprintf and friends in C++
libassuan0:amd64	2.1.2-2	IPC library for the GnuPG components
libatk1.0-0:amd64	2.14.0-1	ATK accessibility toolkit
libatk1.0-data	2.14.0-1	Common files for the ATK accessibility toolkit
libatomic1:amd64	4.9.2-10	support library providing __atomic built-in functions
libattr1:amd64	1:2.4.47-2	Extended attribute shared library
libaudit-common	1:2.4-1	Dynamic library for security auditing - common files
libaudit1:amd64	1:2.4-1+b1	Dynamic library for security auditing
libauthen-sasl-perl	2.1600-1	Authen::SASL - SASL Authentication framework
libavahi-client3:amd64	0.6.31-5	Avahi client library
libavahi-common-data:amd64	0.6.31-5	Avahi common data files
libavahi-common3:amd64	0.6.31-5	Avahi common library
libbind9-90	1:9.9.5.dfsg-9+deb8u6	BIND9 Shared Library used by BIND
libblkid1:amd64	2.25.2-6	block device id library
libboost-iostreams1.55.0:amd64	1.55.0+dfsg-3	Boost.Iostreams Library
libbsd0:amd64	0.7.0-2	utility functions from BSD systems - shared library
libbz2-1.0:amd64	1.0.6-7+b3	high-quality block-sorting file compressor library - runtime
libc-bin	2.19-18+deb8u4	GNU C Library: Binaries
libc-dev-bin	2.19-18+deb8u4	GNU C Library: Development binaries
libc6:amd64	2.19-18+deb8u4	GNU C Library: Shared libraries
libc6-dev:amd64	2.19-18+deb8u4	GNU C Library: Development Libraries and Header Files
libcairo2:amd64	1.14.0-2.1+deb8u1	Cairo 2D vector graphics library
libcap-ng0:amd64	0.7.4-2	An alternate POSIX capabilities library
libcap2:amd64	1:2.24-8	POSIX 1003.1e capabilities (library)
libcap2-bin	1:2.24-8	POSIX 1003.1e capabilities (utilities)
libcgi-fast-perl	1:2.04-1	CGI subclass for work with FCGI
libcgi-pm-perl	4.09-1	module for Common Gateway Interface applications
libcilkrts5:amd64	4.9.2-10	Intel Cilk Plus language extensions (runtime)
libclass-accessor-perl	0.34-1	Perl module that automatically generates accessors
libclass-c3-perl	0.26-1	pragma for using the C3 method resolution

Name	Version	Description
		order
libclass-c3-xs-perl	0.13-2+b1	Perl module to accelerate Class::C3
libclass-isa-perl	0.36-5	report the search path for a class's ISA tree
libcloog-isl4:amd64	0.18.2-1+b2	Chunky Loop Generator (runtime library)
libcomerr2:amd64	1.42.12-1.1	common error description library
libcpan-meta-perl	2.142690-1	Perl module to access CPAN distributions metadata
libcryptsetup4:amd64	2:1.6.6-5	disk encryption support - shared library
libcups2:amd64	1.7.5-11+deb8u1	Common UNIX Printing System(tm) - Core library
libcurl3-gnutls:amd64	7.38.0-4+deb8u3	easy-to-use client-side URL transfer library (GnuTLS flavour)
libcwidget3:amd64	0.5.17-2	high-level terminal interface library for C++ (runtime files)
libdaemon0:amd64	0.14-6	lightweight C library for daemons - runtime library
libdata-optlist-perl	0.109-1	module to parse and validate simple name/value option pairs
libdata-section-perl	0.200006-1	module to read chunks of data from a module's DATA section
libdatrie1:amd64	0.2.8-1	Double-array trie library
libdb5.3:amd64	5.3.28-9	Berkeley v5.3 Database Libraries [runtime]
libdbus-1-3:amd64	1.8.20-0+deb8u1	simple interprocess messaging system (library)
libdebconfclient0:amd64	0.192	Debian Configuration Management System (C-implementation library)
libdevmapper1.02.1:amd64	2:1.02.90-2.2+deb8u1	Linux Kernel Device Mapper userspace library
libdiscover2	2.1.2-7	hardware identification library
libdns-export100	1:9.9.5.dfsg-9+deb8u6	Exported DNS Shared Library
libdns100	1:9.9.5.dfsg-9+deb8u6	DNS Shared Library used by BIND
libdpkg-perl	1.17.27	Dpkg perl modules
libedit2:amd64	3.1-20140620-2	BSD editline and history libraries
libencode-locale-perl	1.03-1	utility to determine the locale encoding
libestr0	0.1.9-1.1	Helper functions for handling strings (lib)
libevent-2.0-5:amd64	2.0.21-stable-2	Asynchronous event notification library
libexpat1:amd64	2.1.0-6+deb8u2	XML parsing C library - runtime library
libfakeroot:amd64	1.20.2-1	tool for simulating superuser privileges - shared libraries
libfcgi-perl	0.77-1+b1	helper module for FastCGI
libffi6:amd64	3.1-2+b2	Foreign Function Interface library runtime
libfile-fcntllock-perl	0.22-1+b1	Perl module for file locking with fcntl(2)
libfile-listing-perl	6.04-1	module to parse directory listings
libfont-afm-perl	1.20-1	Font::AFM - Interface to Adobe Font Metrics files
libfontconfig1:amd64	2.11.0-6.3	generic font configuration library - runtime
libfreetype6:amd64	2.5.2-3+deb8u1	FreeType 2 font engine, shared library files
libfuse2:amd64	2.9.3-15+deb8u2	Filesystem in Userspace (library)
libgc1c2:amd64	1:7.2d-6.4	conservative garbage collector for C and C++
libgcc-4.9-dev:amd64	4.9.2-10	GCC support library (development files)
libgcc1:amd64	1:4.9.2-10	GCC support library
libgcrypt20:amd64	1.6.3-2+deb8u1	GPL Crypto library - runtime library
libgdbm3:amd64	1.8.3-13.1	GNU dbm database routines (runtime)

Name	Version	Description
		version)
libgdk-pixbuf2.0-0:amd64	2.31.1-2+deb8u4	GDK Pixbuf library
libgdk-pixbuf2.0-common	2.31.1-2+deb8u4	GDK Pixbuf library - data files
libgeoip1:amd64	1.6.2-4	non-DNS IP-to-country resolver library
libglib2.0-0:amd64	2.42.1-1+b1	GLib library of C routines
libglib2.0-data	2.42.1-1	Common files for GLib library
libgmp10:amd64	2:6.0.0+dfsg-6	Multiprecision arithmetic library
libgnutls-deb0-28:amd64	3.3.8-6+deb8u3	GNU TLS library - main runtime library
libgnutls-openssl27:amd64	3.3.8-6+deb8u3	GNU TLS library - OpenSSL wrapper
libgomp1:amd64	4.9.2-10	GCC OpenMP (GOMP) support library
libpgp-error0:amd64	1.17-3	library for common error values and messages in GnuPG components
libpgpme11:amd64	1.5.1-6	GPGME - GnuPG Made Easy (library)
libgpm2:amd64	1.20.4-6.1+b2	General Purpose Mouse - shared library
libgraphite2-3:amd64	1.3.6-1~deb8u1	Font rendering engine for Complex Scripts -- library
libgssapi-krb5-2:amd64	1.12.1+dfsg-19+deb8u2	MIT Kerberos runtime libraries - krb5 GSS-API Mechanism
libgtk2.0-0:amd64	2.24.25-3+deb8u1	GTK+ graphical user interface library
libgtk2.0-bin	2.24.25-3+deb8u1	programs for the GTK+ graphical user interface library
libgtk2.0-common	2.24.25-3+deb8u1	common files for the GTK+ graphical user interface library
libharfbuzz0b:amd64	0.9.35-2	OpenType text shaping engine (shared library)
libhogweed2:amd64	2.7.1-5+deb8u1	low level cryptographic library (public-key cryptos)
libhtml-form-perl	6.03-1	module that represents an HTML form element
libhtml-format-perl	2.11-1	module for transforming HTML into various formats
libhtml-parser-perl	3.71-1+b3	collection of modules that parse HTML text documents
libhtml-tagset-perl	3.20-2	Data tables pertaining to HTML
libhtml-tree-perl	5.03-1	Perl module to represent and create HTML syntax trees
libhttp-cookies-perl	6.01-1	HTTP cookie jars
libhttp-daemon-perl	6.01-1	simple http server class
libhttp-date-perl	6.02-1	module of date conversion routines
libhttp-message-perl	6.06-1	perl interface to HTTP style messages
libhttp-negotiate-perl	6.00-2	implementation of content negotiation
libicu52:amd64	52.1-8+deb8u3	International Components for Unicode
libidn11:amd64	1.29-1+deb8u1	GNU Libidn library, implementation of IETF IDN specifications
libintl-perl	1.23-1	Uniform message translations system compatible i18n library
libio-html-perl	1.001-1	open an HTML file with automatic charset detection
libio-socket-ip-perl	0.32-1	module for using IPv4 and IPv6 sockets in a protocol-independent way
libio-socket-ssl-perl	2.002-2+deb8u1	Perl module implementing object oriented interface to SSL sockets

Name	Version	Description
libio-string-perl	1.08-3	Emulate IO::File interface for in-core strings
libirs-export91	1:9.9.5.dfsg-9+deb8u6	Exported IRS Shared Library
libisc-export95	1:9.9.5.dfsg-9+deb8u6	Exported ISC Shared Library
libisc95	1:9.9.5.dfsg-9+deb8u6	ISC Shared Library used by BIND
libisccc90	1:9.9.5.dfsg-9+deb8u6	Command Channel Library used by BIND
libiscfg-export90	1:9.9.5.dfsg-9+deb8u6	Exported ISC CFG Shared Library
libiscfg90	1:9.9.5.dfsg-9+deb8u6	Config File Handling Library used by BIND
libisl10:amd64	0.12.2-2	manipulating sets and relations of integer points bounded by linear cons
libitm1:amd64	4.9.2-10	GNU Transactional Memory Library
libiw30:amd64	30~pre9-8	Wireless tools - library
libjasper1:amd64	1.900.1-debian1-2.4+d	JasPer JPEG-2000 runtime library
libjbig0:amd64	2.1-3.1	JBIGkit libraries
libjpeg62-turbo:amd64	1:1.3.1-12	libjpeg-turbo JPEG runtime library
libjson-c2:amd64	0.11-4	JSON manipulation library - shared library
libk5crypto3:amd64	1.12.1+dfsg-19+deb8u2	MIT Kerberos runtime libraries - Crypto Library
libkeyutils1:amd64	1.5.9-5+b1	Linux Key Management Utilities (library)
libklibc	2.0.4-2	minimal libc subset for use with initramfs
libkmod2:amd64	18-3	libkmod shared library
libkrb5-3:amd64	1.12.1+dfsg-19+deb8u2	MIT Kerberos runtime libraries
libkrb5support0:amd64	1.12.1+dfsg-19+deb8u2	MIT Kerberos runtime libraries - Support library
libksba8:amd64	1.3.2-1+deb8u1	X.509 and CMS support library
liblcms2-2:amd64	2.6-3+b3	Little CMS 2 color management library
libldap-2.4-2:amd64	2.4.40+dfsg-1+deb8u2	OpenLDAP libraries
liblocale-gettext-perl	1.05-8+b1	module using libc functions for internationalization in Perl
liblockfile-bin	1.09-6	support binaries for and cli utilities based on liblockfile
liblockfile1:amd64	1.09-6	NFS-safe locking library
liblog-message-perl	0.8-1	powerful and flexible message logging mechanism
liblog-message-simple-perl	0.10-2	simplified interface to Log::Message
liblogging-stdlog0:amd64	1.0.4-1	easy to use and lightweight logging library
liblognorm1:amd64	1.0.1-3	Log normalizing library
liblsan0:amd64	4.9.2-10	LeakSanitizer -- a memory leak detector (runtime)
liblua5.1-0:amd64	5.1.5-7.1	Shared library for the Lua interpreter version 5.1
liblwp-mediatypes-perl	6.02-1	module to guess media type for a file or a URL
liblwp-protocol-https-perl	6.06-2	HTTPS driver for LWP::UserAgent
liblwres90	1:9.9.5.dfsg-9+deb8u6	Lightweight Resolver Library used by BIND
liblzma5:amd64	5.1.1alpha+20120614-2	XZ-format compression library
liblz02-2:amd64	2.08-1.2	data compression library
libmagic1:amd64	1:5.22+15-2+deb8u1	File type determination library using "magic" numbers
libmailtools-perl	2.13-1	Manipulate email in perl programs
libmn10:amd64	1.0.3-5	minimalistic Netlink communication library
libmodule-build-perl	0.421000-2	framework for building and installing Perl modules
libmodule-pluggable-perl	5.1-1	module for giving modules the ability to

Name	Version	Description
		have plugins
libmodule-signature-perl	0.73-1+deb8u2	module to manipulate CPAN SIGNATURE files
libmount1:amd64	2.25.2-6	device mounting library
libmpc3:amd64	1.0.2-1	multiple precision complex floating-point library
libmpfr4:amd64	3.1.2-2	multiple precision floating-point computation
libmro-compat-perl	0.12-1	mro::* interface compatibility for Perls < 5.9.5
libncurses5:amd64	5.9+20140913-1+b1	shared libraries for terminal handling
libncurses5-dev:amd64	5.9+20140913-1+b1	developer's libraries for ncurses
libncursesw5:amd64	5.9+20140913-1+b1	shared libraries for terminal handling (wide character support)
libnet-http-perl	6.07-1	module providing low-level HTTP connection client
libnet-smtp-ssl-perl	1.01-3	Perl module providing SSL support to Net::SMTP
libnet-ssleay-perl	1.65-1+b1	Perl module for Secure Sockets Layer (SSL)
libnetfilter-acct1:amd64	1.0.2-1.1	Netfilter acct library
libnettle4:amd64	2.7.1-5+deb8u1	low level cryptographic library (symmetric and one-way cryptos)
libnewt0.52:amd64	0.52.17-1+b1	Not Erik's Windowing Toolkit - text mode windowing with slang
libnfnetlink0:amd64	1.0.1-3	Netfilter netlink library
libnfsidmap2:amd64	0.25-5	NFS idmapping library
libnl-3-200:amd64	3.2.24-2	library for dealing with netlink sockets
libnl-genl-3-200:amd64	3.2.24-2	library for dealing with netlink sockets - generic netlink
libnuma1:amd64	2.0.10-1	Libraries for controlling NUMA policy
libonig2:amd64	5.9.5-3.2	Oniguruma regular expressions library
libopts25:amd64	1:5.18.4-3	automated option processing library based on autogen
libp11-kit0:amd64	0.20.7-1	Library for loading and coordinating access to PKCS#11 modules - runtime
libpackage-constants-perl	0.04-1	List constants defined in a package
libpam-modules:amd64	1.1.8-3.1+deb8u1+b1	Pluggable Authentication Modules for PAM
libpam-modules-bin	1.1.8-3.1+deb8u1+b1	Pluggable Authentication Modules for PAM - helper binaries
libpam-runtime	1.1.8-3.1+deb8u1	Runtime support for the PAM library
libpam0g:amd64	1.1.8-3.1+deb8u1+b1	Pluggable Authentication Modules library
libpango-1.0-0:amd64	1.36.8-3	Layout and rendering of internationalized text
libpangocairo-1.0-0:amd64	1.36.8-3	Layout and rendering of internationalized text
libpangoft2-1.0-0:amd64	1.36.8-3	Layout and rendering of internationalized text
libpaper-utils	1.1.24+nmu4	library for handling paper characteristics (utilities)
libpaper1:amd64	1.1.24+nmu4	library for handling paper characteristics
libparams-util-perl	1.07-2+b1	Perl extension for simple stand-alone param checking functions
libparse-debianchangelog-perl	1.2.0-1.1	parse Debian changelogs and output them in other formats
libpci3:amd64	1:3.2.1-3	Linux PCI Utilities (shared library)
libpcre3:amd64	2:8.35-3.3+deb8u4	Perl 5 Compatible Regular Expression Library - runtime files

Name	Version	Description
libpcsclite1:amd64	1.8.13-1	Middleware to access a smart card using PC/SC (library)
libperl-dev	5.20.2-3+deb8u6	Perl library: development files
libperl4-corelibs-perl	0.003-1	libraries historically supplied with Perl 4
libperl5.20	5.20.2-3+deb8u6	shared Perl library
libpipeline1:amd64	1.4.0-1	pipeline manipulation library
libpixmap-1-0:amd64	0.32.6-3	pixel-manipulation library for X and cairo
libpkcs11-helper1:amd64	1.11-2	library that simplifies the interaction with PKCS#11
libpng12-0:amd64	1.2.50-2+deb8u2	PNG library - runtime
libpod-latex-perl	0.61-1	module to convert Pod data to formatted LaTeX
libpod-README-perl	0.11-1	Perl module to convert POD to README file
libpopt0:amd64	1.16-10	lib for parsing cmdline parameters
libprocps3:amd64	2:3.3.9-9	library for accessing process information from /proc
libpsl0:amd64	0.5.1-1	Library for Public Suffix List (shared libraries)
libpthreads20:amd64	2.0.7-20	GNU Portable Threads
libpython-stdlib:amd64	2.7.9-1	interactive high-level object-oriented language (default python version)
libpython2.7-minimal:amd64	2.7.9-2	Minimal subset of the Python language (version 2.7)
libpython2.7-stdlib:amd64	2.7.9-2	Interactive high-level object-oriented language (standard library, versi
libqdbm14	1.8.78-5+b1	QDBM Database Libraries without GDBM wrapper[runtime]
libquadmath0:amd64	4.9.2-10	GCC Quad-Precision Math Library
libreadline6:amd64	6.3-8+b3	GNU readline and history libraries, run-time libraries
libregexp-common-perl	2013031301-1	module with common regular expressions
librtmp1:amd64	2.4+20150115.gita107c	toolkit for RTMP streams (shared library)
libsasl2-2:amd64	2.1.26.dfsg1-13+deb8u	Cyrus SASL - authentication abstraction library
libsasl2-modules:amd64	2.1.26.dfsg1-13+deb8u	Cyrus SASL - pluggable authentication modules
libsasl2-modules-db:amd64	2.1.26.dfsg1-13+deb8u	Cyrus SASL - pluggable authentication modules (DB)
libselinux1:amd64	2.3-2	SELinux runtime shared libraries
libsemanage-common	2.3-1	Common files for SELinux policy management libraries
libsemanage1:amd64	2.3-1+b1	SELinux policy management library
libsensors4:amd64	1:3.3.5-2	library to read temperature/voltage/fan sensors
libsepol1:amd64	2.3-2	SELinux library for manipulating binary security policies
libsigc++-2.0-0c2a:amd64	2.4.0-1	type-safe Signal Framework for C++ - runtime
libsigsegv2:amd64	2.10-4+b1	Library for handling page faults in a portable way
libslang2:amd64	2.3.0-2	S-Lang programming library - runtime version
libsmartcols1:amd64	2.25.2-6	smart column output alignment library

Name	Version	Description
libsnmp-base	5.7.2.1+dfsg-1	SNMP configuration script, MIBs and documentation
libsnmp30:amd64	5.7.2.1+dfsg-1	SNMP (Simple Network Management Protocol) library
libsoftware-license-perl	0.103010-3	module providing templated software licenses
libsqlite3-0:amd64	3.8.7.1-1+deb8u1	SQLite 3 shared library
libsqlite3-dev:amd64	3.8.7.1-1+deb8u1	SQLite 3 development files
libss2:amd64	1.42.12-1.1	command-line interface parsing library
libssh2-1:amd64	1.4.3-4.1+deb8u1	SSH2 client-side library
libssl1.0.0:amd64	1.0.1t-1+deb8u2	Secure Sockets Layer toolkit - shared libraries
libstdc++-4.9-dev:amd64	4.9.2-10	GNU Standard C++ Library v3 (development files)
libstdc++6:amd64	4.9.2-10	GNU Standard C++ Library v3
libsub-exporter-perl	0.986-1	sophisticated exporter for custom-built routines
libsub-install-perl	0.928-1	module for installing subroutines into packages easily
libsub-name-perl	0.12-1	module for assigning a new name to referenced sub
libswitch-perl	2.17-2	switch statement for Perl
libsystemd0:amd64	215-17+deb8u4	systemd utility library
libtasn1-6:amd64	4.2-3+deb8u2	Manage ASN.1 structures (runtime)
libterm-ui-perl	0.42-1	Term::ReadLine UI made easy
libtext-charwidth-perl	0.04-7+b3	get display widths of characters on the terminal
libtext-iconv-perl	1.7-5+b2	converts between character sets in Perl
libtext-soundex-perl	3.4-1+b2	implementation of the soundex algorithm
libtext-template-perl	1.46-1	perl module to process text templates
libtext-unidecode-perl	1.22-1	Text::Unidecode -- US-ASCII transliterations of Unicode text
libtext-wrapi18n-perl	0.06-7	internationalized substitute of Text::Wrap
libthai-data	0.1.21-1	Data files for Thai language support library
libthai0:amd64	0.1.21-1	Thai language support library
libtiff5:amd64	4.0.3-12.3+deb8u1	Tag Image File Format (TIFF) library
libtimedate-perl	2.3000-2	collection of modules to manipulate date/time information
libtinfo-dev:amd64	5.9+20140913-1+b1	developer's library for the low-level terminfo library
libtinfo5:amd64	5.9+20140913-1+b1	shared low-level terminfo library for terminal handling
libtirpc1:amd64	0.2.5-1	transport-independent RPC library
libtokyocabinet9:amd64	1.4.48-3	Tokyo Cabinet Database Libraries [runtime]
libtsan0:amd64	4.9.2-10	ThreadSanitizer -- a Valgrind-based detector of data races (runtime)
libubsan0:amd64	4.9.2-10	UBSan -- undefined behaviour sanitizer (runtime)
libudev1:amd64	215-17+deb8u4	libudev shared library
liburi-perl	1.64-1	module to manipulate and access URI strings
libusb-0.1-4:amd64	2:0.1.12-25	userspace USB programming library
libusb-1.0-0:amd64	2:1.0.19-1	userspace USB programming library
libustr-1.0-1:amd64	1.0.4-3+b2	Micro string library: shared library
libuuid1:amd64	2.25.2-6	Universally Unique ID library

Name	Version	Description
libwebp5:amd64	0.4.1-1.2+b2	Lossy compression of digital photographic images.
libwebpdemux1:amd64	0.4.1-1.2+b2	Lossy compression of digital photographic images.
libwebpmux1:amd64	0.4.1-1.2+b2	Lossy compression of digital photographic images.
libwrap0:amd64	7.6.q-25	Wietse Venema's TCP wrappers library
libwww-perl	6.08-1	simple and consistent interface to the world-wide web
libwww-robotrules-perl	6.01-1	database of robots.txt-derived permissions
libx11-6:amd64	2:1.6.2-3	X11 client-side library
libx11-data	2:1.6.2-3	X11 client-side library
libx86-1:amd64	1.1+ds1-10	x86 real-mode library
libxapian22	1.2.19-1+deb8u1	Search engine library
libxau6:amd64	1:1.0.8-1	X11 authorisation library
libxcb-render0:amd64	1.10-3+b1	X C Binding, render extension
libxcb-shm0:amd64	1.10-3+b1	X C Binding, shm extension
libxcb1:amd64	1.10-3+b1	X C Binding
libxcomposite1:amd64	1:0.4.4-1	X11 Composite extension library
libxcursor1:amd64	1:1.1.14-1+b1	X cursor management library
libxdamage1:amd64	1:1.1.4-2+b1	X11 damaged region extension library
libxdmcp6:amd64	1:1.1.1-1+b1	X11 Display Manager Control Protocol library
libxext6:amd64	2:1.3.3-1	X11 miscellaneous extension library
libxfixes3:amd64	1:5.0.1-2+b2	X11 miscellaneous 'fixes' extension library
libxi6:amd64	2:1.7.4-1+b2	X11 Input extension library
libxinerama1:amd64	2:1.1.3-1+b1	X11 Xinerama extension library
libxml-libxml-perl	2.0116+dfsg-1+deb8u1	Perl interface to the libxml2 library
libxml-namespacesupport-perl	1.11-1	Perl module for supporting simple generic namespaces
libxml-parser-perl	2.41-3	Perl module for parsing XML files
libxml-sax-base-perl	1.07-1	base class for SAX drivers and filters
libxml-sax-expat-perl	0.40-2	Perl module for a SAX2 driver for Expat (XML::Parser)
libxml-sax-perl	0.99+dfsg-2	Perl module for using and building Perl SAX2 XML processors
libxml2:amd64	2.9.1+dfsg1-5+deb8u1	GNOME XML library
libxmuu1:amd64	2:1.1.2-1	X11 miscellaneous micro-utility library
libxrandr2:amd64	2:1.4.2-1+b1	X11 RandR extension library
libxrender1:amd64	1:0.9.8-1+b1	X Rendering Extension client library
libxtables10	1.4.21-2+b1	netfilter xtables library
linux-base	4.3~bpo8+1	Linux image base package
linux-compiler-gcc-4.9-x86	4.6.4-1~bpo8+1	Compiler for Linux on x86 (meta-package)
linux-headers-4.6.0-0.bpo.1-amd64	4.6.4-1~bpo8+1	Header files for Linux 4.6.0-0.bpo.1-amd64
linux-headers-4.6.0-0.bpo.1-common	4.6.4-1~bpo8+1	Common header files for Linux 4.6.0-0.bpo.1
linux-image-4.6.0-0.bpo.1-amd64	4.6.4-1~bpo8+1	Linux 4.6 for 64-bit PCs
linux-kbuild-4.6	4.6.4-1~bpo8+1	Kbuild infrastructure for Linux 4.6
linux-libc-dev:amd64	4.6.4-1~bpo8+1	Linux support headers for userspace development
lm-sensors	1:3.3.5-2	utilities to read temperature/voltage/fan sensors

Name	Version	Description
locales	2.19-18+deb8u4	GNU C Library: National Language (locale) data [support]
lockfile-progs	0.1.17	Programs for locking and unlocking files and mailboxes
login	1:4.2-3+deb8u1	system login tools
logrotate	3.8.7-1+b1	Log rotation utility
lsb-base	4.1+Debian13+nmu1	Linux Standard Base 4.1 init script functionality
lsb-release	4.1+Debian13+nmu1	Linux Standard Base version reporting utility
lshw	02.17-1.1	information about hardware configuration
lsuf	4.86+dfsg-1	Utility to list open files
m4	1.4.17-4	macro processing language
make	4.0-8.1	utility for directing compilation
man-db	2.7.0.2-5	on-line manual pager
manpages	3.74-1	Manual pages about using a GNU/Linux system
manpages-dev	3.74-1	Manual pages about using GNU/Linux for development
mawk	1.3.3-17	a pattern scanning and text processing language
mime-support	3.58	MIME files 'mime.types' & 'mailcap', and support programs
mlocate	0.26-1	quickly find files on the filesystem based on their name
mount	2.25.2-6	Tools for mounting and manipulating filesystems
multiarch-support	2.19-18+deb8u4	Transitional package to ensure multiarch compatibility
mutt	1.5.23-3	text-based mail reader supporting MIME, GPG, PGP and threading
nano	2.2.6-3	small, friendly text editor inspired by Pico
ncurses-base	5.9+20140913-1	basic terminal type definitions
ncurses-bin	5.9+20140913-1+b1	terminal-related programs and man pages
ncurses-term	5.9+20140913-1	additional terminal type definitions
net-tools	1.60-26+b1	NET-3 networking toolkit
netbase	5.3	Basic TCP/IP networking system
netcat-traditional	1.10-41	TCP/IP swiss army knife
nfacct	1.0.1-1.1	netfilter accounting object tool
nfs-common	1:1.2.8-9	NFS support files common to client and server
ntp	1:4.2.6.p5+dfsg-7+deb	Network Time Protocol daemon and utility programs
ntpdate	1:4.2.6.p5+dfsg-7+deb	client for setting system time from NTP servers
opensc	0.14.0-2	Smart card utilities with support for PKCS#15 compatible cards
opensc-pkcs11:amd64	0.14.0-2	Smart card utilities with support for PKCS#15 compatible cards
openssh-client	1:6.7p1-5+deb8u3	secure shell (SSH) client, for secure access to remote machines
openssh-server	1:6.7p1-5+deb8u3	secure shell (SSH) server, for secure access from remote machines
openssh-sftp-server	1:6.7p1-5+deb8u3	secure shell (SSH) sftp server module, for

Name	Version	Description
		SFTP access from remote machines
openssl	1.0.1t-1+deb8u2	Secure Sockets Layer toolkit - cryptographic utility
openvpn	2.3.4-5+deb8u1	virtual private network daemon
os-prober	1.65	utility to detect other OSes on a set of drives
passwd	1:4.2-3+deb8u1	change and administer password and group data
patch	2.7.5-1	Apply a diff file to an original
pciutils	1:3.2.1-3	Linux PCI Utilities
perl	5.20.2-3+deb8u6	Larry Wall's Practical Extraction and Report Language
perl-base	5.20.2-3+deb8u6	minimal Perl system
perl-modules	5.20.2-3+deb8u6	Core Perl modules
php5	5.6.24+dfsg-0+deb8u1	server-side, HTML-embedded scripting language (metapackage)
php5-cli	5.6.24+dfsg-0+deb8u1	command-line interpreter for the php5 scripting language
php5-common	5.6.24+dfsg-0+deb8u1	Common files for packages built from the php5 source
php5-json	1.3.6-1	JSON module for php5
php5-readline	5.6.24+dfsg-0+deb8u1	Readline module for php5
pinentry-gtk2	0.8.3-2	GTK+-2-based PIN or pass-phrase entry dialog for GnuPG
pm-utils	1.4.1-15	utilities and scripts for power management
pmount	0.9.23-3+b1	mount removable devices as normal user
powermgmt-base	1.31+nmu1	Common utils and configs for power management
powertop	2.6.1-1	diagnose issues with power consumption and management
procmail	3.22-24	Versatile e-mail processor
procps	2:3.3.9-9	/proc file system utilities
psmisc	22.21-2	utilities that use the proc file system
python	2.7.9-1	interactive high-level object-oriented language (default version)
python-apt	0.9.3.12	Python interface to libapt-pkg
python-apt-common	0.9.3.12	Python interface to libapt-pkg (locales)
python-chardet	2.3.0-1	universal character encoding detector for Python2
python-debian	0.1.27	Python modules to work with Debian-related data formats
python-debianbts	1.12	Python interface to Debian's Bug Tracking System
python-defusedxml	0.4.1-2	XML bomb protection for Python stdlib modules (for Python 2)
python-docutils	0.12+dfsg-1	text processing system for reStructuredText (implemented in Python 2)
python-minimal	2.7.9-1	minimal subset of the Python language (default version)
python-pil:amd64	2.6.1-2+deb8u2	Python Imaging Library (Pillow fork)
python-pkg-resources	5.5.1-1	Package Discovery and Resource Access using pkg_resources
python-pygments	2.0.1+dfsg-1.1+deb8u1	syntax highlighting package written in Python

Name	Version	Description
python-reportbug	6.6.3	Python modules for interacting with bug tracking systems
python-roman	2.0.0-1	module for generating/analyzing Roman numerals for Python 2
python-six	1.8.0-1	Python 2 and 3 compatibility library (Python 2 interface)
python-soappy	0.12.22-1	SOAP Support for Python
python-support	1.0.15	automated rebuilding support for Python modules
python-wstools	0.4.3-2	WSDL parsing tools Python module
python2.7	2.7.9-2	Interactive high-level object-oriented language (version 2.7)
python2.7-minimal	2.7.9-2	Minimal subset of the Python language (version 2.7)
racoon	1:0.8.2+20140711-2+de	IPsec Internet Key Exchange daemon
read-edid	3.0.1-2	hardware information-gathering tool for VESA PnP monitors
readline-common	6.3-8	GNU readline and history libraries, common files
rename	0.20-3	Perl extension for renaming multiple files
reportbug	6.6.3	reports bugs in the Debian distribution
rpcbind	0.2.1-6+deb8u1	converts RPC program numbers into universal addresses
rsync	3.1.1-3	fast, versatile, remote (and local) file-copying tool
rsyslog	8.4.2-1+deb8u2	reliable system and kernel logging daemon
sed	4.2.2-4+b1	The GNU sed stream editor
sensible-utils	0.0.9	Utilities for sensible alternative selection
sgml-base	1.26+nmu4	SGML infrastructure and SGML catalog file support
shared-mime-info	1.3-1	FreeDesktop.org shared MIME database and spec
snmp	5.7.2.1+dfsg-1	SNMP (Simple Network Management Protocol) applications
snmpd	5.7.2.1+dfsg-1	SNMP (Simple Network Management Protocol) agents
sqlite3	3.8.7.1-1+deb8u1	Command line interface for SQLite 3
ssh	1:6.7p1-5+deb8u3	secure shell client and server (metapackage)
ssl-cert	1.0.35	simple debconf wrapper for OpenSSL
startpar	0.59-3	run processes in parallel and multiplex their output
sudo	1.8.10p3-1+deb8u3	Provide limited super user privileges to specific users
sysstat	11.0.1-1	system performance tools for Linux
systemd	215-17+deb8u4	system and service manager
systemd-sysv	215-17+deb8u4	system and service manager - SysV links
sysv-rc	2.88dsf-59	System-V-like run level change mechanism
sysvinit-utils	2.88dsf-59	System-V-like utilities
tar	1.27.1-2+b1	GNU version of the tar archiving utility
task-english	3.31+deb8u1	General English environment
task-laptop	3.31+deb8u1	laptop

Name	Version	Description
task-ssh-server	3.31+deb8u1	SSH server
tasksel	3.31+deb8u1	tool for selecting tasks for installation on Debian systems
tasksel-data	3.31+deb8u1	official tasks used for installation of Debian systems
tcpd	7.6.q-25	Wietse Venema's TCP wrapper utilities
texinfo	5.2.0.dfsg.1-6	Documentation system for on-line information and printed output
time	1.7-25	GNU time program for measuring CPU resource usage
traceroute	1:2.0.20-2+b1	Traces the route taken by packets over an IPv4/IPv6 network
tzdata	2016d-0+deb8u1	time zone and daylight-saving time data
ucf	3.0030	Update Configuration File(s): preserve user changes to config files
udev	215-17+deb8u4	/dev/ and hotplug management daemon
usbmount	0.0.22	automatically mount and unmount USB mass storage devices
usbutils	1:007-2	Linux USB utilities
util-linux	2.25.2-6	Miscellaneous system utilities
util-linux-locales	2.25.2-6	Locales files for util-linux
vbetool	1.1-3	run real-mode video BIOS code to alter hardware state
vim	2:7.4.488-7	Vi IMproved - enhanced vi editor
vim-common	2:7.4.488-7	Vi IMproved - Common files
vim-runtime	2:7.4.488-7	Vi IMproved - Runtime files
vim-tiny	2:7.4.488-7	Vi IMproved - enhanced vi editor - compact version
w3m	0.5.3-19	WWW browsable pager with excellent tables/frames support
wamerican	7.1-1	American English dictionary words for /usr/share/dict
watchdog	5.14-3	system health checker and software/hardware watchdog handler
wget	1.16-1	retrieves files from the web
whiptail	0.52.17-1+b1	Displays user-friendly dialog boxes from shell scripts
whois	5.2.7	intelligent WHOIS client
wireless-regdb	2014.11.18-1	wireless regulatory database
wireless-tools	30~pre9-8	Tools for manipulating Linux Wireless Extensions
wpa_supplicant	2.3-1+deb8u3	client support for WPA and WPA2 (IEEE 802.11i)
xauth	1:1.0.9-1	X authentication utility
xdg-user-dirs	0.15-2	tool to manage well known user directories
xkb-data	2.12-1	X Keyboard Extension (XKB) configuration data
xml-core	0.13+nmu2	XML infrastructure and XML catalog file support
xz-utils	5.1.1alpha+20120614-2	XZ-format compression utilities
zlib1g:amd64	1:1.2.8.dfsg-2+b1	compression library - runtime